


A4 SIZE:  
210 X 297MM

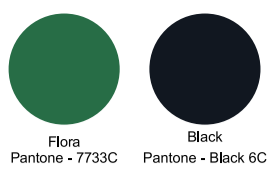

纸张: FSC 牛皮纸

### WARNING

Before using the tent for the first time, it is recommended to check all components have been included and you become familiar with the assembly by reading through the instructions first.

- DO NOT set up near open flame. The fabric will burn if left in continuous contact with any flame source.
- DO NOT use any form of flame or fuel burning appliances, heaters, candles or matches inside or under the canopy of the tent.
- Ensure you site is free from any objects and obstructions before setting up your tent.
- Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
- Tent must be securely pegged to the ground using all the peg points provided. All guy ropes attached to the tent must be used at all times to create added stability and avoid possible damage to either property or persons. It is crucial to do this anytime you have the tent up to minimize the impact of unexpected wind gusts.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts.
- Utility hooks are designed for small hanging objects only. Do not hang any object over 2kgs. Check the hook every time before use. Do not use if it comes loose!
- The set up of this tent is recommended as a two person set up.
- Keep children away from the set up area.
- When removing the pegs from the ground, never pull on the tent to remove. This may cause damage to either property or persons. Always pull on the peg itself.

This tent is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure.

### CARE AND MAINTENANCE

The following are some helpful tips on how to clean and properly store your tent.

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- DO NOT spray insecticides or bug repellent directly or near any fabric. This may damage the water-repellant treatment.
- Always return the tent to the carry bag after use. Be sure the tent is completely dry before storing it.
- Never store the tent wet. If tent is wet, please take out from storage bag as soon as possible and leave spread out to dry completely before storing away.
- Due to cold air outside and warm air inside the tent, may develop condensation on the inside of the tent. This is a natural event and adequate ventilation will help minimise this.



Repair patch included to help prolong the lifespan of your earth by Wanderer tent.




PLU: 674901  
Manufactured and packaged for  
SRGS PTY LTD  
ABN 23 113 230 050  
6 Coulthards Avenue  
Strathpine QLD 4500, Australia  
MADE IN CHINA

### Assembly Instructions

earth  
by Wanderer®


## Mataranka Recycled Material 6P Instant Tent

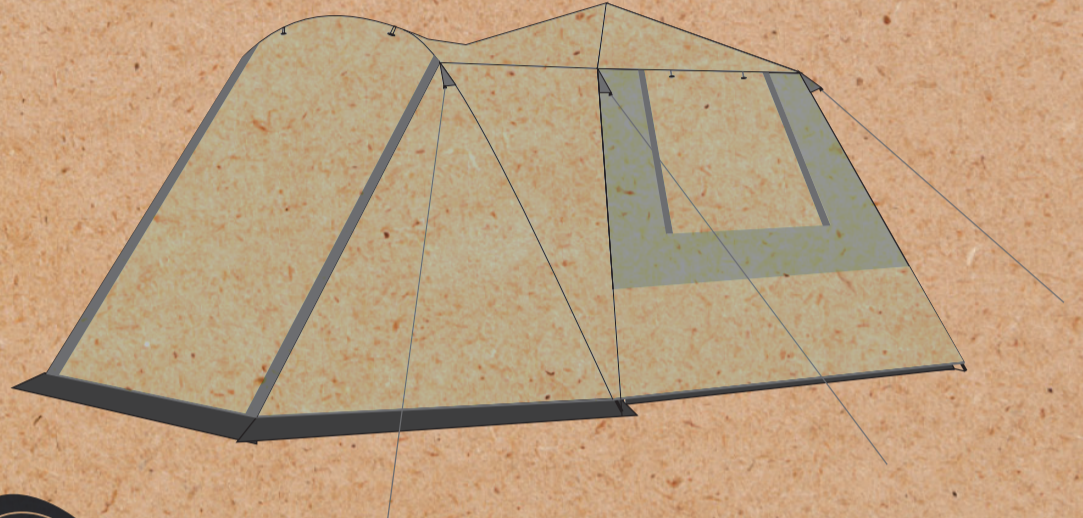

### PART LIST

DESCRIPTION	QTY
Inner tent (Instant pole system is included)	1
Fly	1
Fibreglass Pole 11mm	1
Steel Pegs	21
Carry bag	1

 Fibreglass Pole



Steel Pegs




Carry Bag



### SET UP INSTRUCTIONS


#### STEP 1

Ensure the ground is free from sharp objects, and then take out the inner tent and fly from the carry bag, spread the joints of each pole outward.

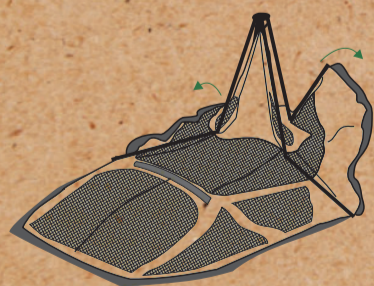


#### STEP 2

Hold roof poles and lift the roof gently, knuckles will come outward, and then the roof can stand by itself temporarily.

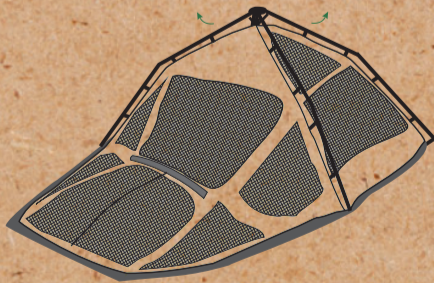


#### STEP 3

Slide the leg poles out until hear "click", the push button will pop out and the poles are now in place. Attention: When sliding out the leg pole, do not press the push button, otherwise the pole will detach on the joint may cause damage to the tent.

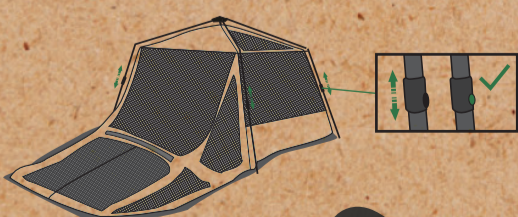


#### STEP 4

Use fibreglass pole to build the front vestibule, push the pole through the sleeve at the front top of tent, insert pole ends into the plastic tent feet, and then attach the poles to the tent by using C clips. Fix the inner tent with pegs before moving to the next step.

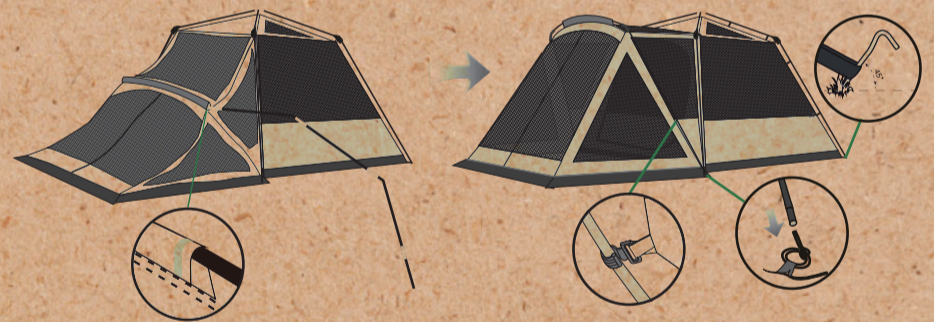

#### STEP 5

Take flysheet and drape over inner tent with door facing correct direction. Secure the flysheet and the buckles on each corner using the hook and loop tapes.

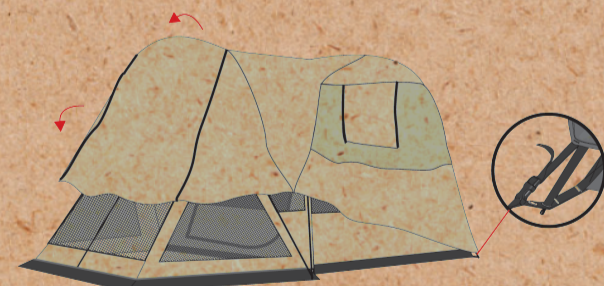

#### STEP 6

Peg down the remainder of fly. Using guy ropes provided peg out away from the tent to maximize stability, and it's done.

