

PARTS LIST

#	Part
1	Knob
2	Spindle
3	Spindle 'O' rings
4	Stainless Steel Drip Tray
5	Trivet
6	Burner Jet

7	Burner
8	Windshield
9	Grill tray & rack
10	Grill burner
11	Piezo Igniter
12	Flexible hose assembly

FITTING & USAGE INSTRUCTIONS


- Remove from the carton and discard all packaging material.
- Place on a level (horizontal) surface.
- Open lid, attach side supports to secure the stove, open windshields and lock them in place.
- Lift the trivet, remove the hose and connect it to the inlet connection. Tighten firmly by hand.
- Make sure the valves are turned off on both the appliance and gas cylinder prior to connecting or removing the stove.
- Firmly fasten the hose to the gas cylinder control valve.
- Ensure the controls on the stove are in the OFF position. Turn the gas cylinder control valve on. Check for leaks at all gas joints by applying a soapy water solution.
- If a leak is detected by observing a stream of bubbles or by the distinct gas odour, turn off the cylinder valve and do not use the appliance until the source of the leak has been successfully fixed. Re-test for leaks each time before igniting the appliance.
- To light grill, hold a match next to the grill burner and turn on (anti-clockwise) the middle control knob. Ensure both sides of the burner are alight. When lit adjust the burner to suit.

LIGHT BURNERS VIA PIEZO ELECTRIC IGNITION

- To light the grill or hob burners, open the control valve in front of the burner you wish to ignite, then immediately turn the piezo ignitor knob until the burner is alight. If the burner fails to light, turn off the gas supply and wait 5 minutes before reattempting to ignite the burner.

LIGHT BURNERS VIA MANUAL IGNITION

- To light the hob burners place a lit match beside the burner and turn the control in front of the required burner anti clockwise. If any burner fails to light, turn off the gas supply and wait 5 minutes before reattempting to ignite the burner.
- Use the stove control knobs to obtain the desired heat setting by turning anti-clockwise to increase the heat and clockwise to decrease the heat and turn off.
- To extinguish turn off the gas at the cylinder control valve. Allow all residual gas to disperse or burn off before turning the appliance controls to the off position.
- When alight, the gas stove should never be left unsupervised.
- Do not move the appliance during operation.
- During use, parts of the stove can reach high temperatures. After use, allow stove to cool before handling.
- The burner extinguishing during use may indicate that the gas cylinder has run out of gas. If this occurs replace the empty gas cylinder with a full gas cylinder and attempt to reignite the burners. If the burners do not ignite there may be a blockage in the injectors or the flexible hose. Replace the components as required to make the appliance serviceable or take the appliance to a service centre to be professionally repaired.
- To ensure maximum life from your appliance it should always be stored in a dry place, out of direct sunlight.
- To check if gas cylinder contains gas, disconnect from the cooker, then hold upright and shake from side to side. If you can feel or hear liquid movement from within the cylinder, it contains gas.
- Before each use, check primary air openings and clear blockages.
- Abnormal operation which may require service can be identified by black sooting of cooking utensils, or an irregular burner flame which is yellow or unstable.
- After use, turn the gas cylinder valve off, wait for the flame to go out, then turn the appliance control valve(s) off.

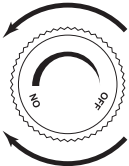

REPLACING JET (INJECTOR)

IF THE BURNER STOPS WORKING, THE JET MAY BE BLOCKED.

- The jets may require periodic cleaning or replacing if they become blocked. If this occurs, you can remove the jet and clear the blockage or simply replace the jet with the spare jet packed with this stove.
- You will need a screw driver and a spanner to complete this task. Use these tools to remove the hinge screws and nuts, then rotate the top and remove the burner mounting screws. Slide burner off the brass valve for access to the jet.
- Top burner jet size is 0.20.
- Grill burner jet size is 0.11.
- Do not modify, alter or fit incorrect jet sizes to the burners.
- To clean the jet, blow out the blockage, or wash jet in white spirits. Do not use needles or pins to clean the jet because this could damage the jet making the gas stove dangerous.
- Conduct a gas leakage test of all connections as described in this instruction manual after jet replacement. DO NOT use this stove unless the appliance is gas tight (there are no gas leaks).

REPLACING ‘O’ RINGS

- Gas leaking from the front of the control indicates that the “O” Rings MUST be replaced before igniting the appliance.
- Turn off all controls on the appliance as well as the cylinder.
- Disconnect the flexible hose from the appliance and the cylinder.
- Remove the control knob by pulling forward away from the stove.
- Remove the control locking nut located directly behind the control knob by rotating in an anti-clockwise direction.
- Remove the control spindle by rotating in an anti-clockwise direction.
- Remove the damaged “O” Rings from the spindle and replace with new ones.
- Reassemble in the opposite order of disassembly. Note: Push in spindle before turning clockwise.
- “O” Ring (Spindle) Service Pack AN1992.

MAINTENANCE

This appliance does not require regular maintenance, however each time before use it should be verified that it is in a suitable working condition. If any faults are detected the appliance is not to be used until they have been rectified.

SPECIFICATIONS


Consumption Rate: 230g/h per burner, 70g/h grill.
For use with LPG.
Injector size: Australia Burner 0.20mm Jet, Grill 0.11mm Jet.
This appliance shall only be used with a propane gas cylinder certified to Australian Standard AS2030. IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CYLINDERS.
Operating Pressure: Vapour Pressure.

WARNINGS

- ONLY USE IN WELL VENTILATED AREAS, USE OUTDOORS ONLY, NEVER USE INDOORS.
- CARBON MONOXIDE HAZARD – THIS APPLIANCE CAN PRODUCE CARBON MONOXIDE WHICH HAS NO ODOUR. USING IT IN AN ENCLOSED SPACE (FOR EXAMPLE CARAVAN, TENT, CAR, MOBILE HOME, DOMESTIC RESIDENCE) MAY CAUSE DEATH.
- Caution: Accessible parts may be very hot. Keep young children away.
- Do not modify this appliance.
- Check that the seals between the appliance and the gas cylinder are in place and in good condition before connecting to the gas cylinder.
- Do not use this appliance if it has damaged or worn seals.
- Do not use this appliance if it is leaking, damaged or does not operate properly.
- Stove must be completely extinguished before disconnecting from cylinder.
- If there is a leak on your appliance (smell of gas), immediately attempt to turn off the cylinder valve. DO NOT LIGHT THE APPLIANCE. Remove the appliance to a well ventilated location away from any ignition source. Only check for leaks outdoors using soapy water. Do not try to detect leaks using a flame.
- Never lift the appliance while it is in use.
- This appliance shall be used away from flammable materials.
- This appliance is not to be used within 1200mm from any combustible materials (i.e. 1200mm clearance in all horizontal or vertical directions).
- Wipe with a moist cloth. Do not use abrasive cleaning products or chemicals.
- This appliance must only be serviced by an authorised person.
- Gas cylinders are to be changed in a well ventilated area, outside, away from people and from ignition sources such as naked flames, pilot lights, electric heaters/equipment.
- Only use the hose assembly supplied with the appliance for direct connection to the cylinder – DO NOT USE ADAPTORS. When necessary only use genuine replacement hose not exceeding 1500mm in length.
- When not in use store the appliance in the folded position in a well ventilated dry location.
- Avoid twisting or kinking the flexible hose.
- This appliance shall only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products from combustion are readily dispersed by wind and natural convection.
- When not in use store the gas cylinder outdoors in a well ventilated area out of reach of children. Any indoor storage shall comply with AS/NZS 1596.
- Store this appliance when not in use disconnected from the gas cylinder.

PLACEMENT

The figures below are diagrammatical representations of suitable outdoor areas in which this appliance can be used.

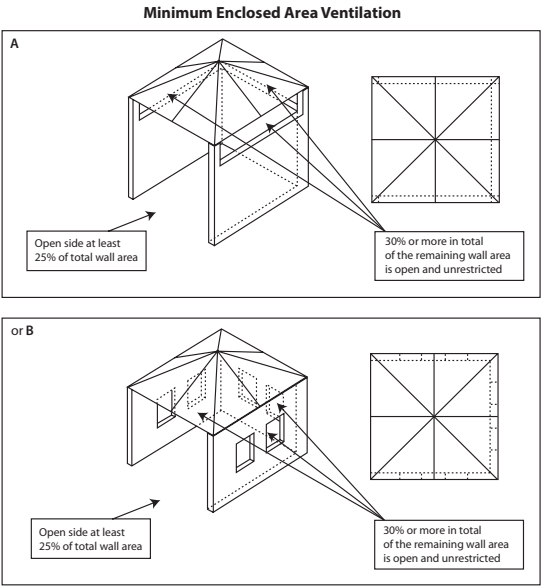

1 YEAR EXPRESS WARRANTY

Amalgamated Hardware Merchants Limited ("AHM") warrants that this product will be free from material defects in workmanship and materials for a period of 1 year from the date of purchase ("Warranty Period"). If a material defect occurs during the Warranty Period, and AHM verifies such material defect and your claim, AHM will choose to either repair the product, replace the product, or provide you with a refund of the purchase price of the product ("AHM's Express Warranty"). Any repaired or replaced product will be covered by AHM's Express Warranty for the remainder of the original Warranty Period only.

AHM's Express Warranty will not apply if the defect in the product is caused or contributed to by misuse of the product, failure to maintain the product, neglect or accident, ordinary wear and tear (including rust, corrosion, and normal fading, weathering, staining, discolouration, scratching or chipping), exposure to heat, failure to use or install the product in accordance with any instructions or manuals, or any modification, repair or tampering with the product by anyone other than AHM.

To claim under AHM's Express Warranty, you must take the product (and proof of purchase) to the store where it was purchased. You must provide any additional information requested in relation to your claim. For online purchases, contact the online supplier to arrange the return of the product. You will bear any costs incurred in making a claim, including any costs of returning the product to the store, and of having the product returned to you (if applicable).

Additional guarantees under Consumer Laws

The New Zealand Consumer Guarantees Act 1993 and the Australian Competition and Consumer Act 2010 (including the Australian Consumer Law 2011), as well as other laws in those jurisdictions ("Consumer Law") give you other legal rights. For products sold in New Zealand, these rights cannot be modified or excluded by any contract, except in those circumstances expressly contemplated by New Zealand Consumer Law. For products sold in Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AHM's Express Warranty is in addition to any other rights and remedies you have under the applicable Consumer Law. Except as otherwise provided by AHM's Express Warranty, all warranties, terms, conditions, guarantees or similar, other than those which cannot be excluded under applicable Consumer Law, are expressly excluded by AHM to the extent legally permitted.

Contact AHM in New Zealand about claims at: 8 Hautu Drive, Wiri, Auckland, New Zealand 2104. Email: enquiries@ahm.co.nz

Phone: +64 9 251 1300
Fax: +64 9 251 1301 www.ahm.co.nz

Contact AHM in Australia about claims at: Unit 4, 126-130 Compton Road, Woodridge, Queensland, Australia 4114. Email: enquiries@ahmaustralia.com.au

Phone: +61 7 3208 1233
Fax: +61 7 3208 1933 www.ahmaustralia.com.au

W a n d e r e r

2 BURNER DELUXE STOVE WITH GRILL

ASSEMBLY AND OPERATING INSTRUCTIONS



WARNING: FOR OUTDOOR USE ONLY

WA1025GD

AGA APPROVAL NO: 7095



- Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read these instructions for use carefully.
- WARNING: Accessible parts may be very hot. Keep young children away at all times.
- Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.