

ASSEMBLY INSTRUCTIONS







 
W a n d e r e r 

Criterion Instant Tent 8 Person

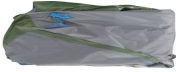

PLU:592149

PARTS LIST:


DESCRIPTION	PIC	QTY.
Flysheet		1
Inner Tent		1
Side Roof Pole		2
Awning Pole		3
Steel Peg		19
Guy Rope		3
Carry Bag		1



When setting up and packing down of tent, the poles may twist and get caught on the joint. **DO NOT USE FORCE** by pulling on the poles. Twist the poles gently until the flat parts of the poles align. This will ensure poles slide smoothly.

The setting up and packing down of this tent are recommended to be done by two people.

Pitching

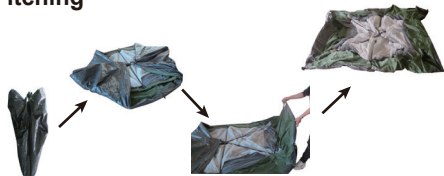

Take out inner tent and lay it on the ground. Unfold all leg poles.



1. With the help from another person, set up the tent roof first.
2. Slide out the leg pole until you hear "CLICK". It is recommended that two people set up the leg poles on both sides of the tent.



1. Peg down all corners and pegs points of the tent.
2. Fasten the strap on front and rear of the tent roof.
3. Clip the side roof poles on both sides to ensure stability



1. Cover the inner tent with fly sheet, secure the fly to the leg pole with hook and loop tape and to the corners with buckles.
2. To assemble the awning use the steel poles and guy ropes provided. Pass the pole spigots through the eyelets on the corners of each awning section. Peg down with guy ropes to secure the poles.

Folding

To avoid damage to the tent ensure divider zip is fully opened before packing up.



Take off the flysheet and remove the pegs from the ground.



1. Loosen the straps on the roof.
2. Take side roof poles down
3. Press the button on the leg pole, the upper pole section will slide into the bottom section. It's recommended two person do it on both sides at the same time.



With help from another person to hold the roof, press down the button on the roof poles.



Fold the leg poles and tie the inner tent up. Pack away all components into the carry bag.

Warning

Before using the tent for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the tent by reading through the instructions first.

- DO NOT set up near open flame. The fabric will burn if left in continuous contact with any flame source.
 - DO NOT use any form of flame or fuel burning appliances, heaters, candles or matches inside or under the canopy of the tent.
 - Ensure your site is free from any objects and obstructions by checking the area and clear away any rocks, tree branches or any sharp objects prior to setting up your tent.
 - Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
 - Tent must be securely pegged to the ground using all the peg points provided. All guy ropes attached to the tent must be used at all times to create added stability and avoid possible damage to either property or persons. It is crucial to do this anytime you have the tent up to minimize the impact of unexpected wind gusts.
 - Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts.
 - Utility hooks are designed for small hanging objects only. Do not hang any object heavier than 2kgs. Check the hook every time before use. Do not use if it comes loose!
 - The set up of this tent is recommended as two person set up.
 - Keep children away from the set up area.
 - When removing the pegs from the ground, never pull on the tent to remove. This may cause damage to either property or persons. Always pull on the peg itself.
- This tent is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure.

Care and maintenance

The following are some helpful tips on how to clean and properly store your tent.

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- DO NOT spray insecticides or bug repellent directly or near any fabric. This may damage the water-repellant treatment.
- Always return the tent to the carry bag after use. Be sure the tent is completely dry before storing it.
- Never store the tent wet. If the tent is wet, please take out from storage bag as soon as possible and leave spread out to dry completely before storing away.
- Due to cold air outside and warm air inside, the tent may develop condensation on the inside of the tent. This is a natural event and adequate ventilation will help minimise this.

Manufactured & packaged for SRGS PTY LTD

ABN 23 113 230 050

6 Coulthards Avenue, Strathpine QLD 4500, Australia

Made in China