

ASSEMBLY INSTRUCTIONS

W a n d e r e r 

KALBARRI INSTANT TENT 8 PERSON



PLU:594795

PARTS LIST:

| DESCRIPTION | QTY |
|----------------|-----|
| Inner | 1 |
| Fly | 1 |
| Awning Pole | 3 |
| Side Roof Pole | 2 |
| Steel Peg | 28 |
| Guy Rope | 3 |
| Carry Bag | 1 |



Awning Pole



Side Roof Pole



Peg



Guy Rope



Inner



Fly



Carry Bag

SET UP INSTRUCTIONS

The set up of this tent is recommended as two person set up.



CAUTION!

When setting up and packing up the tent the poles may twist become difficult to slide. If this occurs **DO NOT USE FORCE BY PULLING ON THE POLES**. Twist poles gently until the flat parts of the poles align ensuring the poles slide smoothly.

ATTENTION!

When sliding the leg pole, do not press the push button. Otherwise the pole may detach and cause damage to the tent.

STEP 1

Ensure the ground is free from sharp objects, unfasten the inner tent and let it spread out on the ground freely, unfold the leg poles.



STEP 2

With the help from another person, set up the tent roof first. Slide out the top poles until you hear "click", the push button will pop up and the poles are now in place.



STEP 3

With the help from another person, set up the rooms. It is recommended that two people set up the leg poles on both sides of the tent.



STEP 4

Attach the poles to both sides of roof by inserting the spigot into the hole on knuckles. It is important to have the C clips hooked on the pole before next step. Adjust the tent to desired angle and all leg poles stand evenly. Peg down all peg points with provided pegs.



STEP 5

Take flysheet and drape over inner tent with door facing correct direction. Secure the flysheet to poles using hook and loop tapes.



STEP 6

Then peg down the remainder of fly. Using guy ropes provided peg out away from the tent to maximize stability.



STEP 7

To assemble the awning use the steel poles and guy ropes provided. Pass the pole spigots through the eyelets on each corner of the door. Peg down with guy ropes to secure the poles.



WARNING

Before using the tent for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the tent by reading through the instructions first.

- DO NOT set up near open flame. The fabric will burn if left in continuous contact with any flame source.
- DO NOT use any form of flame or fuel burning appliances, heaters, candles or matches inside or under the canopy of the tent.
- Ensure your site is free from any objects and obstructions by checking the area and clear away any rocks, tree branches or any sharp objects prior to setting up your tent.
- Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
- Tent must be securely pegged to the ground using all the peg points provided. All guy ropes attached to the tent must be used at all times to create added stability and avoid possible damage to either property or persons. It is crucial to do this anytime you have the tent up to minimize the impact of unexpected wind gusts.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts.
- Utility hooks are designed for small hanging objects only. Do not hang any object heavier than 2kgs. Check the hook every time before use. Do not use if it comes loose!
- The set up of this tent is recommended as a two person set up.
- Keep children away from the set up area.

- When removing the pegs from the ground, never pull on the tent to remove. This may cause damage to either property or persons. Always pull on the peg itself.

This tent is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure.

Care and maintenance

The following are some helpful tips on how to clean and properly store your tent.

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- DO NOT spray insecticides or bug repellent directly or near any fabric. This may damage the water-repellant treatment.
- Always return the tent to the carry bag after use. Be sure the tent is completely dry before storing it.
- Never store the tent wet. If tent is wet, please take out from storage bag as soon as possible and leave spread out to dry completely before storing away.
- Due to cold air outside and warm air inside the tent, may develop condensation on the inside of the tent. This is a natural event and adequate ventilation will help minimise this.

Manufactured & packaged for SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue, Strathpine QLD 4500, Australia

MADE IN CHINA