

# ASSEMBLY INSTRUCTIONS

**OUTRAK™**

## TREELINE HIKING TENT 2 PERSON



PLU: 600996

**PARTS LIST:**

DESCRIPTION	PIC	QTY.
Flysheet		1
Inner Tent		1
Pole kit		1
Peg		8
Carry Bag		1

**INSTRUCTIONS**



1. Ensure the ground is free from sharp objects before setting up the tent.
2. Take out the inner tent and lay it out flat ensuring the door is completely zipped closed.
2. Assemble the poles.
3. Secure pole ends to corner eyelets, pushing the pole in order to create an arch. [ Do not attach G hooks before completing the pole set up.].



1. Attach the G hooks to the poles.
2. Push the short pole through the hole in the main pole. Then insert the end of the pole into the eyelet.



1. Pull the fly over the inner tent.
2. Fix the tip of the pole to the loop on the fly. (PIC 1)
3. Fix the four corners of the fly to the feet of each pole via the small loops. Then adjust the webbing to tighten the fly. (PIC 2)



Use the guy ropes and pegs to secure the tent to the ground.

## Warning

**Before using the tent for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the tent by reading through the instructions first.**

- DO NOT set up near open flame. The fabric will burn if left in continuous contact with any flame source.
  - DO NOT use any form of flame or fuel burning appliances, heaters, candles or matches inside or under the canopy of the tent.
  - Ensure your site is free from any objects and obstructions by checking the area and clear away any rocks, tree branches or any sharp objects prior to setting up your tent.
  - Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
  - Tent must be securely pegged to the ground using all the peg points provided. All guy ropes attached to the tent must be used at all times to create added stability and avoid possible damage to either property or persons. It is crucial to do this anytime you have the tent up to minimize the impact of unexpected wind gusts.
  - Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts.
  - Utility hooks are designed for small hanging objects only. Do not hang any object heavier than 2kgs. Check the hook every time before use. Do not use if it comes loose!
  - Keep children away from the set up area.
  - When removing the pegs from the ground, never pull on the tent to remove. This may cause damage to either property or persons. Always pull on the peg itself.
- This tent is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure.

## Care and maintenance

**The following are some helpful tips on how to clean and properly store your tent.**

- DO NOT spray insecticides or bug repellent directly or near any fabric. This may damage the water-repellant treatment.
- Always return the tent to the carry bag after use. Be sure the tent is completely dry before storing it.
- Never store the tent wet. If the tent is wet, please take out from storage bag as soon as possible and leave spread out to dry completely before storing away.
- Due to cold air outside and warm air inside, the tent may develop condensation on the inside of the tent. This is a natural event and adequate ventilation will help minimise this.

Manufactured & packaged for SRGS PTY LTD  
ABN 23 113 230 050  
6 Coulthards Avenue, Strathpine QLD 4500, Australia  
Made in China