

PORTABLE OVEN ROADSTER

Wanderer 🛦

camping and outdoors

WARRANTY

Our product is guaranteed to be free from quality and manufacturing defects for a period of **12** months.

If your product becomes defective during this period, **SRGS PTY LTD** will offer you either a replacement, credit or refund where a product is faulty; wrongly described; different from the sample shown to you or do not do what they are supposed to do.

This warranty will not cover substantially modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim the warranty, take the product to the front Service Desk of your nearest store of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Should you not be able to provide proof of purchase with a receipt or bank statement, identification showing name, address and signature may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you. For online store purchases, **SRGS PTY LTD** will pay for the return freight for any product assessed as having a major failure.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by SRGS PTY LTD, 6 Coulthards Avenue, Strathpine QLD 4500, Australia. Phone: 1300 175 010.

KIT INCLUDES

- 1 x 12V Portable Oven
- 1 x 50 Amp Heavy Duty Connector to 12V/Merit Plug Adaptor
- 2 x Removable Mesh Shelves
- 2 x Stainless Steel Mounting Brackets
- 1 x Owners Manual

nderer kanne de la camping and outdoors Wand

KEY FEATURES



Stainless steel locking latch



Stainless steel insulated housing including door insulation



2 x Removable mesh shelves



2 x Stainless steel mounting brackets



Up to 180°C adjustable temperature



Up to 120 minutes adjustable timer with audible alarm function



Three plug configurations - 12V, 50 Amp connector and Merit



15A Replaceable inline fuse protection

Wanderer 🔺

camping and outdoors

SAFETY PRECAUTIONS

WARNING!

This **Roadster 12V Portable Oven**, its outer surfaces and contents that have been in the oven may be hot. Ensure that appropriate precautions are taken before handling the oven, its outer surfaces or contents.

OPERATING INSTRUCTIONS

POWER SUPPLY

This **Roadster 12V Portable Oven** runs from a **12 volt power supply** only. The oven will draw **8.3 Amp / 100 Watts** when it is operating fully.

There are three plug configurations to operate your oven: 12V, 50 Amp heavy duty connector and Merit.

As most vehicles' 12V plugs are designed to take a maximum of 10 Amp, this oven is close to the limit at 8.3 Amp. It is suggested that you hard wire it to your battery using the 50 Amp heavy duty connector. If you are using the oven regularly or if the 12V socket is old, worn or loose then there is a higher chance of failure, especially when driving on rough or uneven ground. The 50 Amp heavy duty connector provides a superior connection and will reduce the chance of a poor connection heating up and potentially melting the 12V/Merit plugs. The oven cord is fitted with an inline 15A blade type fuse as well as a secondary 15A glass type fuse within the 12V/Merit plug. If either fuse does blow then there is most likely a problem that you should diagnose and rectify before replacing the fuse.

On the front of the oven is an "ON" indicator light. This light will only illuminate when the following criteria are met:

1. There is power reaching the oven.

2. The oven timer is switched "ON" and is counting down, and/or

3. The temperature gauge is switched "ON".

The oven is fitted with a thermostat so if the desired temperature is met then the light will go off, as it is not heating anymore, until the temperature drops and the element comes on.

SETUP

Setting up and installation of your **Roadster 12V Portable Oven** is simple. Once you have decided which plug configuration you will be using for your power supply, simply plug in your **Roadster 12V Portable Oven**, set your temperature gauge to the desired temperature, turn the timer switch on for the time you will need to cook. After preheating the oven, put your food in.

- Your oven comes with a set of mounting brackets that can be used to securely attach it in your vehicle. There are slots at the top and bottom of the oven allowing you to secure it to a shelf or roof of your vehicle. Simply insert the two prongs into the slots in the side of the oven and screw the brackets down. Periodically check the attachment to ensure it has not become loose.
- 2. The mesh shelves can slide in and out of the oven making it easier for you to reach your food. Be aware that the mesh shelves can get very hot and appropriate hand protection should be used when handling them.

Wanderer 🔺

- camping and outdoors
- 3. If the oven is 'rattling' when you are driving, when the oven and mesh shelves are cool, you can gently pinch down the arms on the sides of the mesh shelves so that they hold tightly onto the arms inside the oven.
- 4. The oven does not require any ventilation at the rear, sides, top or bottom and as such can safely be recessed.
- 5. The oven is insulated on 5 sides using cotton insulation. This should keep the outside temperature below 40°C, although this can vary depending on the ambient temperature. The door is insulated through a double wall which only allows convection to heat it up.

COOKING

Set your **Roadster 12V Portable Oven** to the desired temperature with 180°C the approximate maximum temperature. Many modern recipes and instructions provide cooking time for a fan forced oven. As the **Roadster 12V Portable Oven** is not fan forced it will take longer to create similar results. To achieve the best results, we suggest you preheat the oven for 20-30 minutes, especially if you are cooking with fresh ingredients. To give you a rough idea it will take you about 50 minutes preheating for the oven to get to 150°C. The **Roadster 12V Portable Oven's** heat source is on the bottom of the inside of the oven and heat is transferred throughout the oven itself through conduction of the metal and convection in the air.

We recommend that you do not over-fill the oven, which reduces air flow, and that you rotate your food between shelves and on the shelves throughout the cooking time to avoid hot spots. Food in mesh shelves and foil or similar coverings can be placed directly onto the bottom of the oven. However, you should check it regularly as it is easy to burn food using this method. If you are reheating or cooking frozen food we suggest that you rotate your food between shelves and on the shelves throughout the cooking time to avoid the outside burning before the middle is defrosted.

What you put in the **Roadster 12V Portable Oven** significantly affects the amount of time it takes to cook. The time required to cook a roast is not always the same. Even in your home it will take 1.5 hours to cook at 1kg pork roast but it will take 3.5 hours to cook a 3kg roast. So if you put 2 frozen pies into the oven it will take longer than 2 defrosted pies. Similarly, if you put in 4 frozen pies it will also take longer than the 2 frozen ones. A few good rules of thumb are to try not to overload the oven and try to defrost the items before putting them in. Also, rotate them between the top and bottom shelves and the front and back throughout the cook.

CLEANUP

- Always unplug the unit prior to cleaning.
- Do not immerse the unit in any liquid.
- When cleaning, use a cloth, brush or sponge with water and mild detergent.
- Do not use metal scouring pads.

Wanderer 🛦

camping and outdoors

SPECIFICATIONS

OVERALL SIZES	Exterior: L320 x W310 x H195mm Interior: L267 x W250 x H100mm
MAXIMUM VOLTAGE	12V DC
OUTPUT WATTAGE	100 Watt
MAXIMUM AMPERAGE DRAW	8.3 Amp
TEMPERATURE RANGE	80 - 180°C
OVEN TIMER	20 - 120 Minutes
FUSE TYPE	15A Blade Type
INSULATION	Cotton
CASING	Stainless Steel
NET WEIGHT	6.00kg



PLU: 608605 CODE: PT012-WANDERER Manufactured and packaged for SRGS PTY LTD ABN 23 113 230 050 6 Coulthards Avenue, Strathpine QLD 4500, Australia MADE IN CHINA

