

# TENT OWNERS MANUAL FAST FRAME CABIN 10 PERSON

### **BEFORE YOU BEGIN**

This tent requires a minimum of two people to set up

Read all the instructions before setting up your tent. Check parts list to ensure you have full contents

Find a Flat area for your tent, free from rocks, potholes and branches

Ensure that you use all pegs, ropes and additional poles only as instructed

If conditions are windy, arrange tent as to have narrowest side of tent facing into the wind

Keep away from Open Flames, DO NOT USE Stoves or Burning Appliances inside the tent


# **WARNING**

#### **AVOID CONTACT WITH OPEN FLAMES:**

This tent is manufactured to meet CPAI-84 Fire Retardant standards. The fabric may burn if in continuous contact with open flame sources.

#### CONDENSATION IS NOT LEAKING:

Minimise condensation by ensuring your tent is well ventilated through windows, doors or vents.

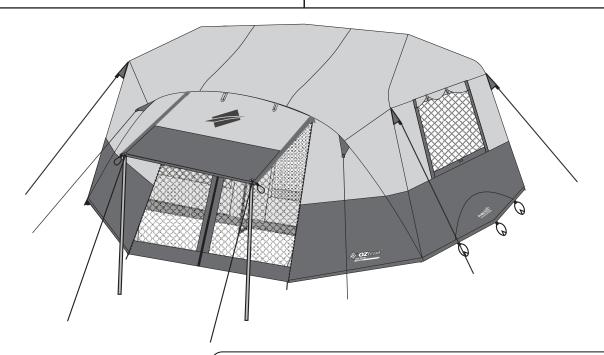

## **CONTENTS**

Inner Tent x 1

Rain fly x 1

DuraPlus Rain Fly Vestibule Pole x 1

Steel Portico Poles x 2

Steel Awning Poles x 2

Pegs x 34

Guy Ropes x 17

DuraPlus Vestibule Pole x 1:

Steel Awning Pole x 2:

Steel Portico Pole x 2:

SPARE PARTS AND ASSISTANCE - For details see www.oztrail.com.au

WARRANTY - For details see www.oztrail.com.au/warranty

OZtrail® is a registered trademark of Adventure Trading Australia Pty Ltd

Designed & Imported by:

Adventure Trading Australia Pty Ltd

71 Charles Ulm Place, Eagle Farm, QLD 4009 AUSTRALIA

Made in Bangladesh

# **STORAGE**

To maximise the life of your tent, always ensure it is clean of dirt and debris.

Never store if wet or damp. Consider airing your tent at home after your trip and allow to completely dry before storing between trips


Continued exposure to sunlight can degrade the polyesters used to make tents. Always store your tent in its storage bag, away from direct light in a cool, dry space






# TENT OWNERS MANUAL FAST FRAME CABIN 10 PERSON

#### STEP 1: LAYOUT THE INNER TENT

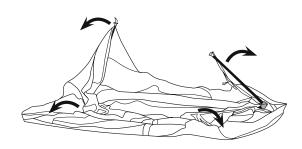

Unfold the inner tent and outstretch over a flat, clear area Arrange the door so it is facing your desired area for entry & exit Fold leg poles away from the center of the tent, so the roof framing stands up

## STEP 2: RAISE THE ROOF & ERECT FRAME

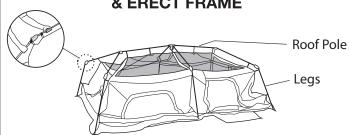


Locate roof poles and lift upwards from base, to the horizontal position.

The leg poles will angle at joints and partially stand up

Extend the vertical frame legs until they click into position, fully extended

Repeat on the legs in the center and other corners of the tent Place rainfly over the Inner tent so red webbing on the fly face the rear of the tent

#### STEP 3: SET UP VESTIBULE

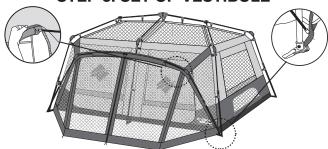


Place Vestibule pole through sleeve located at the front of the inner tent Insert Vestibule pole into black plastic molding

Insert Steel Portico Pole into opposite side of black molding

Connect base of Portico Pole to ring and pin on Grey Webbing stitched to Inner tent corner

Attach plastic clips to tent poles on vestibule

# STEP 4: PUT ON FLY AND SECURE INNER TENT

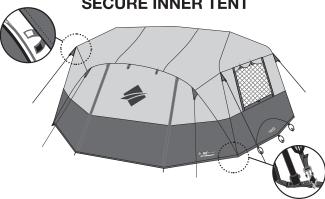

Place rain fly over the inner tent with vestibule facing the front
Secure rain fly to tent with Velcro tabs located on underside of rain fly
Connect the fly to the tent using the buckles on tent corners

### **STEP 5: ASSEMBLE THE AWNING**



Use the awning poles and additional ropes to suspend the door panel overhead

Peg out the tent and fly around the perimeter

# STEP 6: ALWAYS PEG OUT AND USE GUY ROPES



In windy and rainy conditions, awnings must be dismantled, and doors must be closed, and guy ropes must be set out

## PACK UP:

TO TAKE DOWN THE TENT, REVERSE THE PREVIOUS STEPS