ASSEMBLY INSTRUCTIONS

Wanderer 🛦

COMPACT EXPRESS GAZEBO 3 X 3M



PLU: 652565

WandererA

Before using the gazebo for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the gazebo by reading through the instructions first.

Parts included:

- 1 x Gazebo frame
- 1 x Canopy
- 1 x Storage bag
- 4 x Pegs for foot plates
- 4 x Guy ropes
- 4 x Pegs for guy ropes

GAZEBO SET UP INSTRUCTIONS





STEP 1

Place the gazebo frame in the Centre of the setup area. Hold the two outer legs and lift slightly for ground clearance. Take a few steps back and extend the frame to full arm's length, approximately one and a half metres.









STEP 2

Lift the side of the frame up and bend down slightly underneath the centre of the gazebo frame. Then, push up on the centre quick lift mechanism until it snaps into place and the entire frame is fully extended.



STEP 3

Place the canopy over the top of the frame. Use the hook and loop fasteners to secure each corner of the cover to the upper portion of each leg. Additionally, attach the hook and loop fasteners on the underside of the canopy to the frame to ensure the canopy is securely attached to the frame.



STEP 4

The adjustable legs offer multiple height positions. Pull the leg lock lever to unlock. Tilt one side of the gazebo upward and extend the lower leg section to the desired height, then press down to lower the leg lever to lock the leg in place. Repeat on the adjacent leg until all legs are extended.

Wanderer 🛦

GAZEBO PACK DOWN INSTRUCTIONS



STFP 1

Walk underneath the canopy to the centre. Reach up to the quick lift mechanism and then press the lever, pull down until the gazebo frame begins to close.



STEP 2 Pull the leg lock lever to unlock each of the four legs.





STEP 3

Remove the canopy from the gazebo; hold one side of the gazebo and lift slightly; walk toward the other side of the gazebo so the frame begins to fold. Keep walking until the frame is about half-way closed. Be sure to avoid pinching your hands or fingers. Hold the outside part of the legs and continue closing the canopy as you walk towards the other side. The completely folded gazebo should stand up on its own.

STEP 4

With the gazebo standing, slide the bag over the top with the zippered end at the bottom. Turn the gazebo over gently and zipper shut.

Wanderer 🛦

CARE AND MAINTENANCE

The following are some helpful tips on how to clean and properly store your gazebo.

- Wash frame and gazebo with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents,
- DO NOT spray insecticides or bug repellant directly or near any fabric. This may damage the water-repellant treatment.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- · Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.
- Never store the gazebo wet. If gazebo is wet, please take out from storage bag as soon as possible and leave spread out to dry completely before storing away.

WARNING

Before using the gazebo for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the gazebo by reading through the instructions first.

- Keep all flame and heat sources away from this gazebo. The fabric will burn if left in continuous contact with any flame source. Do not build fires under the canopy top.
- Ensure your site is free from any objects and obstructions by checking the area and clear away any rocks, tree branches or any sharp objects prior to setting up your gazebo.
- Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
- Gazebo must be securely pegged or weighed down to the ground using all the peg points provided. All guy ropes attached to the gazebo must be used at all times to create added stability and avoid possible damage to either property or persons. It is crucial to do this anytime you have the gazebo up to minimize the impact of unexpected wind gusts.
- The gazebo is designed to provide temporary shade. Do not use this gazebo in windy or rain conditions. Wind can damage the gazebo and could result in injury to you and others. Fold and pack away the gazebo before extreme weather events.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts.
- Keep children away from the set up area.
- When removing the pegs from the ground, never pull on the gazebo to remove. This may cause damage to either property or persons. Always pull on the peg itself.

This gazebo is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure.

Manufactured & packaged for SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue, Strathpine QLD 4500, Australia

MADE IN CHINA