<u>Wanderer 🛦</u>

METAL HAMMOCK STAND

Please read this user manual carefully before use and please keep it for future reference.



Hammock sold separately

PLU: 657147

SAFETY WARNINGS



WEIGHT CAPACITY: 220KG

MAX LOAD CAPACITY: 220KG

OPEN DIMENSIONS: 276 X 108 X100 CM



- PLACE ON FIRM, EVEN SURFACES ONLY.
- AFTER INSTALLING THE HAMMOCK, TIGHTEN THE PLASTIC SCREWS.
- DO NOT EXCESSIVELY SWING HAMMOCK OVER 15°, TO PREVENT STAND FROM TIPPING OVER.
- PLEASE OBSERVE THE FRAMES LOAD CAPACITY LIMIT.
- PROTECT AGAINST HUMIDITY AND STORE IN A DRY PLACE.
- The maximum load capacity must not exceed over 220kg.
- The product is designed for use by up to two adults whilst the maximum load capacity is observed.
- This product is designed to be used outdoors, however please do not leave me outside in the weather. To be stored undercover to be protected from rain, wind and sun damage.
- Never place hands or fingers in the mechanism of the product or their joints to avoid causing injury.
- Only set-up hammock stand on a firm, flat and even surface to prevent it from tipping over.
- Once the hammock stand has been built, affix your hammock (sold separately) as per the instructions to the carrier hooks. Sit on the hammock, then lean back and put your feet on the hammock. The user of the product should approach hopping into the hammock slowly, maintaining a centre of gravity at all times when entering, moving or getting up.

- Please note, it is not recommended to excessively swing more than on 15°. Use extreme caution at all times when on the hammock.
- To maintain stability and prevent the unit from tipping, never jump in/on or lie vertically across it.
- This metal hammock stand is designed for adults to use and is not recommended for children.
- Children must be supervised by responsible adults at all times when near the hammock stand. There is a danger of tripping over, falling and causing serious injuries, please take care.
- Before handling the product, make sure that the product is in a secure position.
- Any modifications to the product can be dangerous, never make modifications or changes to the product.
- Never place the product near fire, heat emitters, flying sparks, etc. The hammock is flammable and there is a risk of catching fire.
- It is recommended not to smoke or use open flames while using this product.
- Store the hammock inside in strong winds. A gust of wind could catch and capsize product, causing damage to property or health including damage to the product.
- The stand is designed only for attaching a hammock. Never use the stand for other purposes.
- Never swing or shake the stand on a stand without a hammock.
- Do not use the stand if it is damaged, deformed or excessively worn in any way.
- Do not use the hammock if you are under the influence of narcotic substances or alcohol.
- Do not use the hammock in case of medical indisposition, limited mobility, injuries to the body or limbs or serious illnesses.
- For the longevity of the product please do not store outside or use in weather events such as rain etc.

- Product should be disposed of and replaced if there is any signs of damage or deformation.
- Before use, the product must be assembled safely and stably according to the manufacturer's instructions.
- In combination with this product, use only accessories that the manufacturer expressly recommends. Any other accessory may pose a safety risk to the user and may damage product.
- Assemble the product on a firm non scratch surface.
- Check regularly that all bolted connections and carrier hooks are sufficiently tightened and that bed securely hung on supporting hooks.
- Bolts and connections should be tightened regularly.
- Avoid children playing with the product.
- Take care not to cut or puncture the carry bag, as this will house the necessary parts for the hammock stand.
- Take extra care not to cut or puncture the fabric of the bed.
- The weight of the user must at all times be evenly distributed over the entire surface of the fabric beds so as not to cause the the hammock to tip and cause injury.
- Always sit on the hammock bed in the centre between the foundation struts for balance. Sitting on the ends can cause the stand to overturn.
- Attention! Never overload the product beyond the maximum load capacity prescribed by the manufacturer. When overloaded, the tubular frame may collapse and injure the user.

SET-UP

 
PARTS LIST

| PART NAME | | PIECE |
|-------------------------|----------------|-------|
| Perpendicular strut (A) | | 2 |
| Foundation strut (B) | | 2 |
| Transverse strut (C) | | 1 |
| Carrier hook (E) | N - | 2 |
| Wing nut (F) | € | 2 |
| Fixing screw (G) | P | 5 |
| Washer (H) | 0 | 2 |
| Carry bag | | 1 |
| Manual | (<u>i</u> | 1 |

Please check the list of individual parts with the list of parts in the manual for assembly. If the product is not complete or some parts are damaged, do not assemble or use the product.


ASSEMBLY

1




On both sides mount the foundation strut (B) on both sides using 3 pcs of fixing bolts (G). Make sure the connections are securely locked in position and the attachment bolts (G) tighten sufficiently.



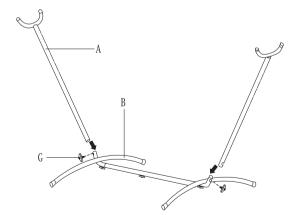


Install the perpendicular struts (A) on the foundation struts (B), align the individual parts of the frame so that overlap the attachment bolt holes (G) and tighten the joint sufficiently. Repeat the same procedure on the other end, see the figure above. Align the parts so the holes line up. Insert the bolts, nuts and washers.

3

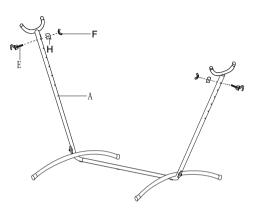

Select the bolt holes (above/below). According to the size of the hammock, its desired height, inclination and tension of the bed fabric.

Mount the support hooks (E) on both perpendicular struts (A) and tighten them with wing nuts (F) and washers (H).

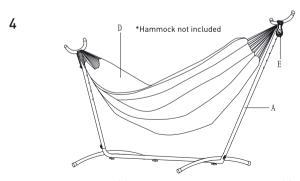

Hang the hammock fabric bed (D) on both sides using lugs and carrier hooks (E) mounted on perpendicular struts (A).

STORAGE INSTRUCTIONS

CARE AND MAINTENANCE OF THE PRODUCT

- With gentle, considerate and correct use, you will significantly extend the life of the product.
 The product needs virtually no special and demanding maintenance.
- Wipe the product with a damp and soft cloth, do not use aggressive cleaners or abrasives.
 This may damage the surface of the product structure.
- When not in use or in high wind conditions, secure product or place indoors. Always secure
 the product against damage and secure the construction thoroughly additionally. A gust of
 wind could damage the structure or it overturn and cause damage to persons or property.
 In such cases, we recommend the product move to protected places, for example, under a
 shelter, pergola, etc.
- We also recommend the product cover with a protective sheet when not in use. Regularly check the stiffness of individual joints and their tightening, as well as hinges, etc.
- We recommend storing the product in a dry, ventilated, protected and secure place. Never leave the product outside, unprotected from the weather, etc.
- Inspect and lightly lubricate parts of the structure regularly. In case of damage, scuffing of the surface or opaque paints, etc. Repair damaged areas with a new suitable coating to prevent corrosion.
- Out of season, it is necessary to store the product in a dry, secure and ventilated room.
 Before storage, it is necessary to let the hammock stand dry thoroughly and store only in a dry state. In case you use pack additional materials in the carry bag, make sure the items are thoroughly dry to prevent moisture. corrosion or mould.
- Changes in the colour stability of a substance or structure due to sunlight are a common characteristic and wear and tear and are not grounds for complaint.