

ASSEMBLY INSTRUCTIONS

W a n d e r e r 

BEACH GAZEBO WARLUKURLANGU



PLU: 664039

GAZEBO SET UP INSTRUCTIONS



STEP 1
Remove the frame from the carry bag and stand it up so the feet are on the ground.



STEP 2
Pull opposite corners away from each other to expand gazebo frame.



STEP 3
Slide each bracket up until all four are locked in place.



STEP 4
Extend gazebo legs to desired height.



STEP 5
Drape the canopy over the frame and fasten the canopy to the frame.




STEP 6
Wrap wall straps around legs below push-pins to keep wall tight.

GAZEBO PACK DOWN INSTRUCTIONS



STEP 1
Detach canopy from frame and fold it neatly, so it will easily fit into carry bag. Do not place in bag yet.

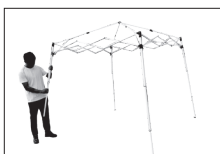

STEP 2
Release and push all gazebo legs down to their lowest position.



STEP 3
Push the release button located at the top of each corner. This will allow the gazebo frame to release.



STEP 4
With all pull-pins released, pick up and walk one corner of canopy towards the opposite corner.



STEP 5
Fully compress frame so it will fit easily into the bag

STEP 6
Slide the frame into the carry bag. The folded canopy will now fit in between the four legs.

CARE AND MAINTENANCE

The following are some helpful tips on how to clean and properly store your gazebo.

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- DO NOT spray insecticides or bug repellent directly or near any fabric. This may damage the water-repellent treatment.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.
- Never store the gazebo wet. If gazebo is wet, please take out from storage bag as soon as possible and leave spread out to dry completely before storing away.

WARNING

Before using the gazebo for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the gazebo by reading through the instructions first.

- DO NOT set up near open flame. The fabric will burn if left in continuous contact with any flame source.
- DO NOT use any form of flame or fuel burning appliances, heaters, candles or matches inside or under the canopy of the gazebo.
- Ensure your site is free from any objects and obstructions by checking the area and clear away any rocks, tree branches or any sharp objects prior to setting up your gazebo.
- Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
- Gazebo must be securely pegged or weighed down to the ground using all the peg points provided. It is crucial to do this anytime you have the gazebo up to minimize the impact of unexpected wind gusts.
- **The gazebo is designed to provide temporary shade. Do not use this gazebo in windy or rain conditions. Wind can damage the gazebo and could result in injury to you and others. Fold and pack away the gazebo before extreme weather events.**
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts.
- Keep children away from the set up area.
- When removing the pegs from the ground, never pull on the gazebo to remove. This may cause damage to either property or persons. Always pull on the peg itself.

This gazebo is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure.

Manufactured & packaged for SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue, Strathpine QLD 4500, Australia

MADE IN CHINA