

4x4

4x4 ACCESSORIES



DIGITAL DUAL TYRE INFLATOR/DEFLATOR

OWNERS MANUAL



WARRANTY

Our product is guaranteed to be free from quality and manufacturing defects for a period of 12 months.

If your product becomes defective during this period, SRGS PTY LTD will offer you either a replacement, credit or refund where a product is faulty; wrongly described; different from the sample shown to you or do not do what they are supposed to do.

This warranty will not cover substantially modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim the warranty, take the product to the front Service Desk of your nearest store of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Should you not be able to provide proof of purchase with a receipt or bank statement, identification showing name, address and signature may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you. For online store purchases, SRGS PTY LTD will pay for the return freight for any product assessed as having a major failure.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by SRGS PTY LTD, 6 Coulthards Avenue, Strathpine QLD 4500, Australia. Phone: 1300 175 010.

PLEASE READ AND UNDERSTAND THIS OWNERS MANUAL CAREFULLY BEFORE USING THIS PRODUCT.

CONTENTS


Digital Tyre Inflator/Deflator with dual 3m rubber air hoses with quick connect lock on chucks

5m rubber air hose with quick release female connectors

Storage bag

2 x AAA alkaline batteries

Owners manual

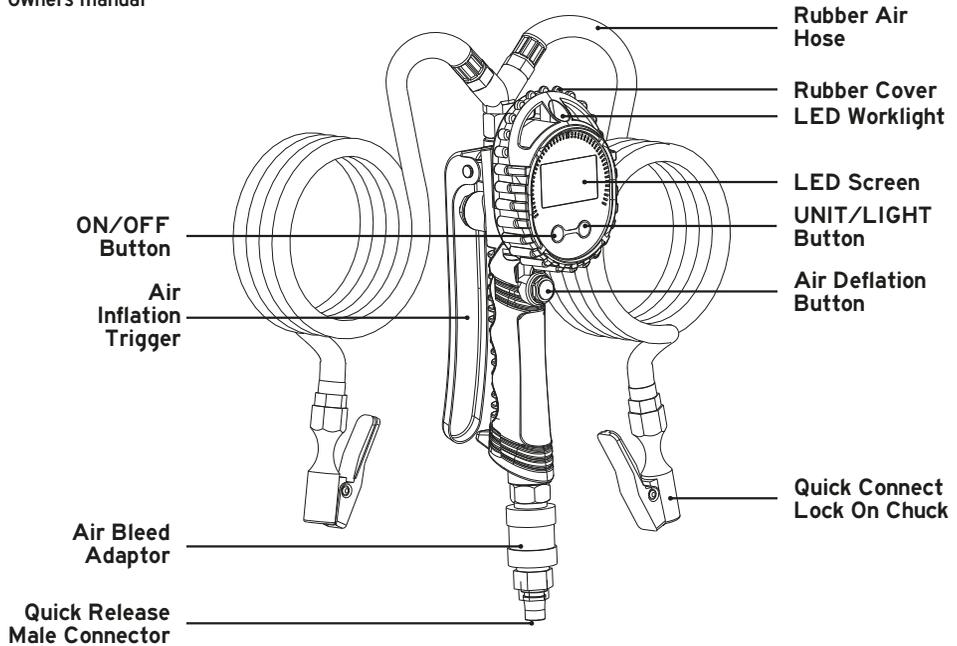

**Air Bleed Adaptor: Push UP to release air from air compressor
Push DOWN to close for tyre inflation**

IMPORTANT: PRESS AIR DEFLATION BUTTON TO RELEASE AIR FROM HOSES AFTER EACH USE. THE LED SCREEN WILL NOT TURN OFF UNTIL ALL PRESSURE IS RELEASED FROM THE HOSES.

INSTRUCTION FOR USE

1. Remove the rubber cover and install 2 x AAA alkaline batteries into the Dual Tyre Inflator/Deflator.
2. Remove the valve caps from your two front tyre valves, ensure that the tyre valves are clean and free from dirt.
3. Attach the quick connect lock on chucks from both the 3m rubber air hoses to your two front tyre valves.
4. Press the ON/OFF button once to power on the Dual Tyre Inflator/Deflator.
5. Keep pressing the UNIT/LIGHT button to cycle through the PSI, BAR, KPA and Kgf/cm² measurements reading, current tyre pressure will be displayed.
6. TO EQUALISE / DEFLATE: If the tyre pressures are higher than required, the pressures between two tyres will deflate and equalise automatically by pressing the air deflation button.
7. TO INFLATE: If the tyre pressures are insufficient, connect one of the quick release female connectors from the supplied 5m rubber air hose to the quick release male connector of the Dual Tyre Inflator/Deflator, connect the other quick release female connectors from the supplied 5m rubber air hose to an air compressor (not supplied). Pull the air inflation trigger and push the air bleed adaptor downwards for inflate the tyres. Occasionally release the air inflation trigger to re-check pressure. By pushing the air bleed adaptor upwards to release air from air compressor, you can have an accurate tyre pressure reading without turning off the air compressor.
8. Before disconnecting from air compressor, push the air bleed adaptor upwards to release air from air compressor.
9. Remove the quick connect lock on chucks from your two front tyre valves.
10. Remember to refit the valve caps back to your two front tyres after you have completed the deflation or inflation process.
11. Repeat steps 2 to 10 of the above for your two rear tyres if necessary.

IMPORTANT: PRESS AIR DEFLATION BUTTON TO RELEASE AIR FROM HOSES AFTER EACH USE. THE LED SCREEN WILL NOT TURN OFF UNTIL ALL PRESSURE IS RELEASED FROM THE HOSES.

WORKLIGHT

1. To use the worklight, press the UNIT/LIGHT button and hold for 3 seconds.
2. Press the UNIT/LIGHT button and hold for 3 seconds to turn the worklight off.

CAUTION

1. Ensure that the tyres are cool before measuring.
2. To turn off, either press the ON/OFF button and hold for 3 seconds or the Dual Tyre Inflator/Deflator will turn off automatically after 30 seconds of inactivity (air released from hoses).
3. Always follow the vehicle / tyre manufacturer recommendations for correct tyre pressure.

SPECIFICATIONS

Measurements: PSI, BAR, KPA and Kgf/cm²

Pressure range: 3-150 PSI

Accuracy: $\pm 1.5\%$

Display resolution: 0.1 PSI



PLU: 667975 CODE: YD630-XTM
Manufactured and packaged for
SRGS PTY LTD ABN 23 113 230 050
6 Coulthards Avenue, Strathpine QLD 4500, Australia
MADE IN CHINA

