

ASSEMBLY INSTRUCTIONS

W a n d e r e r 

INSTANT NIGHTFALL TENT 4P



PLU: 668136

PARTS LIST:

DESCRIPTION	QTY
Inner (Instant pole system is included)	1
Fly	1
Awning Poles	2
Steel Pegs	15
Carry Bag	1
Guy Ropes	2

Awning Poles



x2



Carry Bag



Pegs




Guy Ropes

SET UP INSTRUCTIONS

STEP 1


Ensure the ground is free from sharp objects, unfasten the inner tent and Hold roof poles and gently lift the roof, unfold the leg poles.

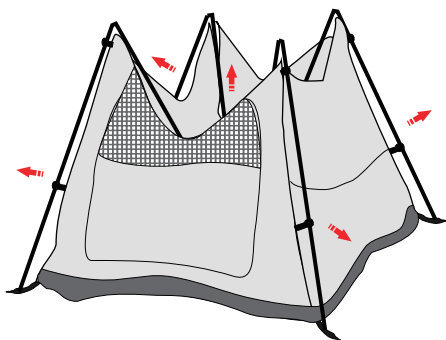

STEP 2


Slide the leg poles out until hear "click", the push button will pop up and the poles are now in place. Attention: When sliding out the leg pole, do not press the push button, otherwise the pole will detach on the joint may cause damage to the tent.

Peg down all peg points on the inner tent before moving to the next step.

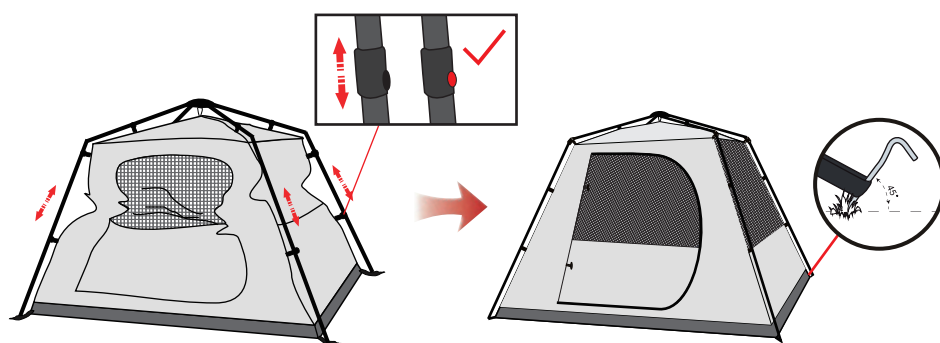


STEP 3

Take flysheet and drape over inner tent with door facing correct direction. Secure the flysheet and the buckles on each corner using the hook and loop tapes.

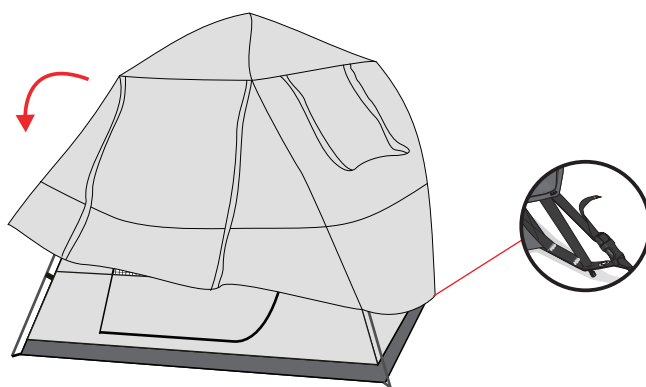


STEP 4

Peg down the remainder of fly. Using guy ropes provided peg out away from the tent to maximize stability.

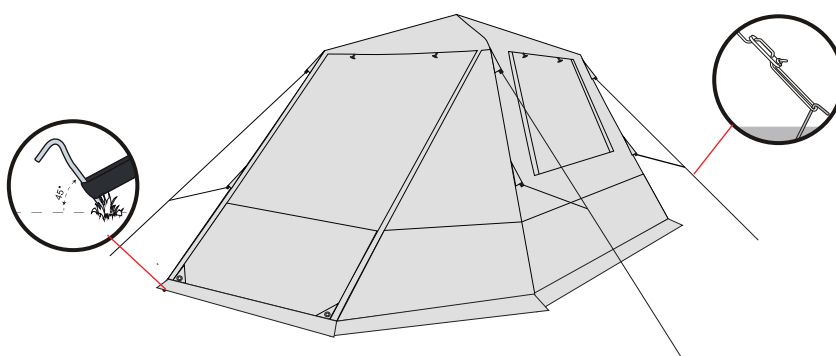

STEP 5

To assemble the awning use the steel poles and guy ropes provided. Pass the pole spigots through the eyelets on each corner of the door. Peg down with guy ropes to secure the poles.

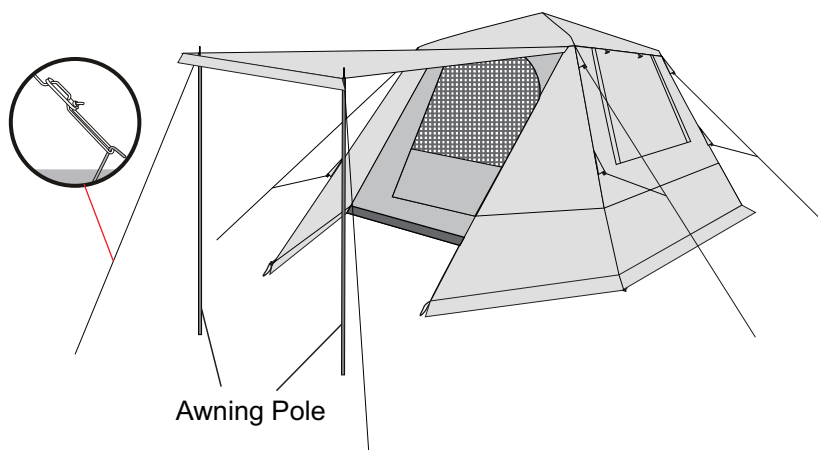

WARNING

Before using the tent for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the tent by reading through the instructions first.

- DO NOT set up near open flame. The fabric will burn if left in continuous contact with any flame source.
- DO NOT use any form of flame or fuel burning appliances, heaters, candles or matches inside or under the canopy of the tent.
- Ensure your site is free from any objects and obstructions by checking the area and clear away any rocks, tree branches or any sharp objects prior to setting up your tent.
- Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
- Tent must be securely pegged to the ground using all the peg points provided. All guy ropes attached to the tent must be used at all times to create added stability and avoid possible damage to either property or persons. It is crucial to do this anytime you have the tent up to minimize the impact of unexpected wind gusts.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts.
- Utility hooks are designed for small hanging objects only. Do not hang any object heavier than 2kgs. Check the hook every time before use. Do not use if it comes loose!
- The set up of this tent is recommended as a two person set up.
- Keep children away from the set up area.

- When removing the pegs from the ground, never pull on the tent to remove. This may cause damage to either property or persons. Always pull on the peg itself.

This tent is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure.

Care and maintenance

The following are some helpful tips on how to clean and properly store your tent.

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- DO NOT spray insecticides or bug repellent directly or near any fabric. This may damage the water-repellant treatment.
- Always return the tent to the carry bag after use. Be sure the tent is completely dry before storing it.
- Never store the tent wet. If tent is wet, please take out from storage bag as soon as possible and leave spread out to dry completely before storing away.
- Due to cold air outside and warm air inside the tent, may develop condensation on the inside of the tent. This is a natural event and adequate ventilation will help minimise this.

Manufactured & packaged for SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue, Strathpine QLD 4500, Australia

MADE IN CHINA