


4x4 ACCESSORIES

+ ROOFTOP TENT HARDTOP LIGHT XTM Owner's Manual

297mm

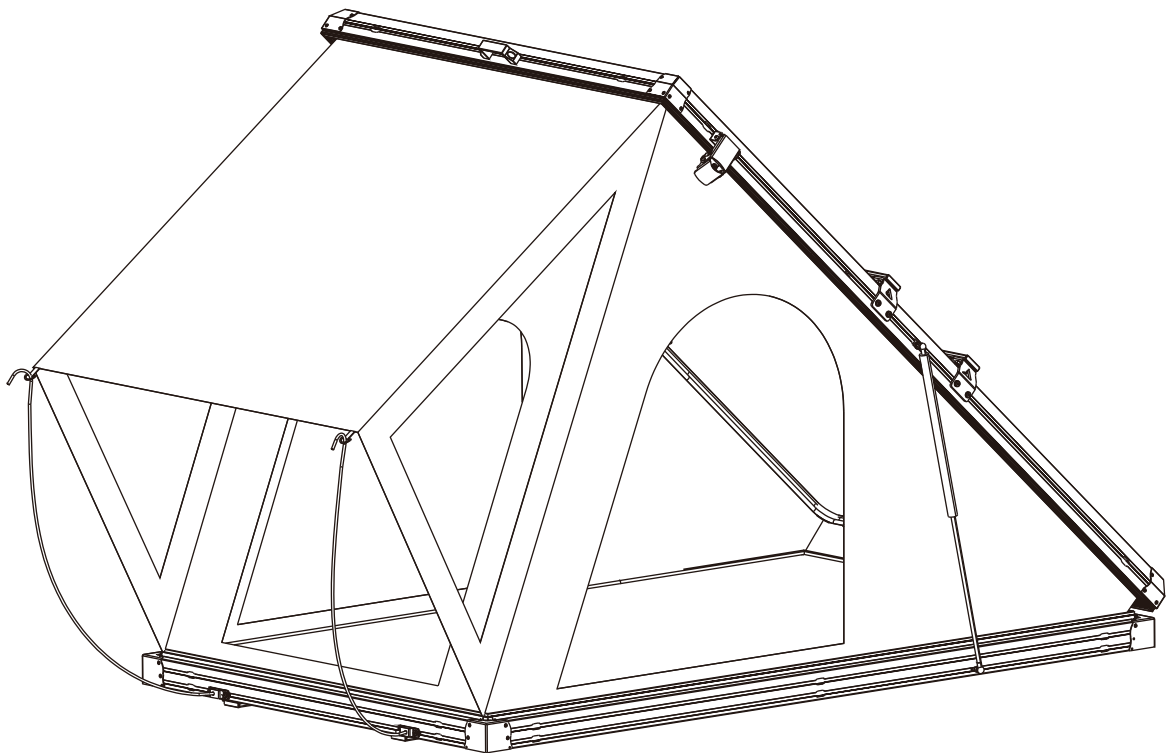

+ CONTENTS

+ WARNING & CARE AND MAINTENANCE 1

+ ROOF RACK REQUIREMENTS 1

+ PARTS LIST 2

+ PRE-INSTALLATION 3

+ FITTING THE ROOF TOP TENT TO YOUR ROOF RACKS..... 4

+ LADDER OPERATION 5

+ ROOFTOP TENT SETUP 6

+ PACKING UP YOUR ROOFTOP TENT 7

+ WARNING

Not all roof racks can safely accommodate rooftop tents. Even if your roof rack can accommodate your rooftop tent you need to check the weight capacity of your vehicle from your vehicle manufacturer before installation.

- + Before using the rooftop tent for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the rooftop tent by reading through the instructions first.
- + DO NOT set up near open flame. The fabric will burn if left in continuous contact with any flame source.
- + DO NOT use any form of flame or fuel burning appliances, heaters, candles or matches inside the rooftop tent.
- + DO NOT smoke inside the tent.
- + Ensure engine is turned off and handbrake brake fully engaged before setting up the rooftop tent.
- + Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
- + The rooftop tent is designed to provide temporary shelter. Strong wind can damage the rooftop tent and could result in injury to you and others. Pack down the rooftop tent before extreme weather events.
- + To keep the Roof Top Tent upright in the event of a rare failure of the gas struts, please ensure that the support pole inside the tent is secured into place with the hook and loop provided.
- + Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts.
- + It is recommended a four person lift when installing to vehicle.
- + Keep children away from the set up area.

Any elements carried on the vehicle roof can change normal vehicle handling. If you are using your car more than your tent, consider removing it to prevent accidental damage from the elements or theft. The manufacturer disclaims all responsibility in case of accidents due to improper use, wrong maintenance or not checking the tightness of the fastening hardware on the roof rack system and tent.

+ CARE AND MAINTENANCE


 

 

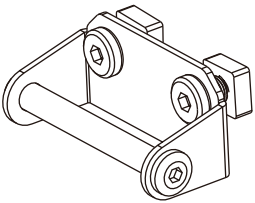

 
- The following are some helpful tips on how to clean and properly store your rooftop tent.
- + DO NOT use soap or detergent. Clean only with cold water and a brush. DO NOT expose to petrol, oil or solvents.
 - + Wash frame, ladder and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
 - + DO NOT spray insecticides or bug repellent directly or near any fabric as there is potential to cause damage to the fabric.
 - + Inspect frame periodically to ensure all bolts and nuts are tight.
 - + Never store the rooftop tent wet. If rooftop tent is packed when wet, set up under cover as soon as possible. Leave rooftop tent open to dry completely before storing away.
 - + Due to cold air outside and warm air inside, the rooftop tent may develop condensation on the inside of the rooftop tent. This is a natural event and adequate ventilation will help minimise this.

+ ROOF RACK REQUIREMENTS

Rooftop tents can be mounted to many vehicle makes and models. Before fitting, please check the load rating of your vehicle's roof is sufficient to support the weight of the tent, two people and extra gear. Please take into consideration the weight of the rooftop tent and ensure you have checked the static and dynamic load capacity of your roof racks before mounting the tent. Rooftop tent weighs approximately 94kgs. To avoid damage to your vehicle and rooftop tent, avoid exceeding a speed limit of 100km/h. We recommend you check the maximum speed limit for your roof racks before starting your trip.


+ PARTS LIST

Unpack the Aluminium RTT from the box, all components are stored inside the tent.

M8 x 55 Bolt x 8 	Mounting plate x 4 
M8 Nyloc nut x 8 	M8 Washer x 8 
M8*100 Bolt x 8 	Ladder bracket x 2 
Spring pole x 2 	Allen key x 1 

Note: The 4mm hex key and spanner are for disassembly of the locks before installing accessories to the side rails.


+ PRE-INSTALLATION

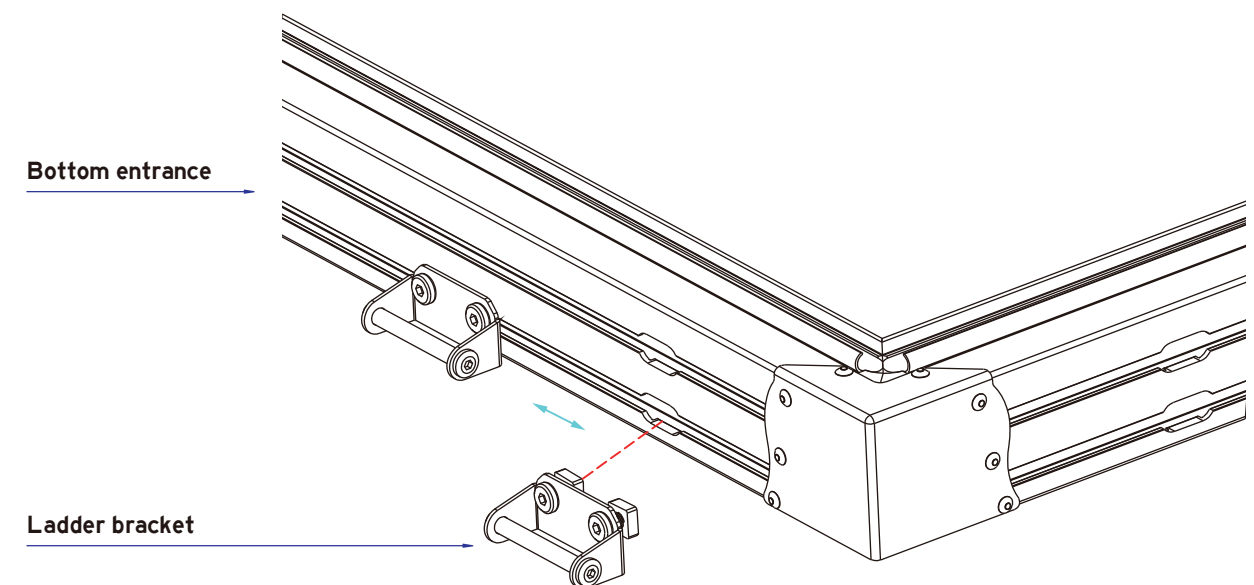


Slide the two ladder brackets into the slot on the base. Secure the screws with the Allen key provided.

+ FITTING THE ROOF TOP TENT TO YOUR ROOF RACKS



Some roof platforms allow mounting of the roof top tent directly onto the platform. Ensure you check your roof platform manufacturer before attempting to mount the roof top tent. See below for standard instructions for mounting your roof top tent with the hardware provided.

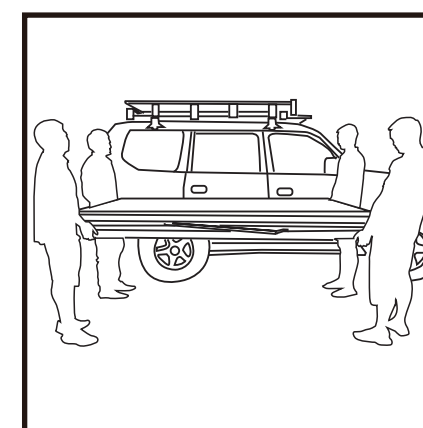

1. With no less than four people, lift the rooftop tent onto the roof platform. Make sure the main door is facing backwards from the vehicle before attempting the lift. Centre the tent ensuring the weight is distributed evenly. Ensure the rear of the tent is flush with the vehicle so the ladder can be fitted.

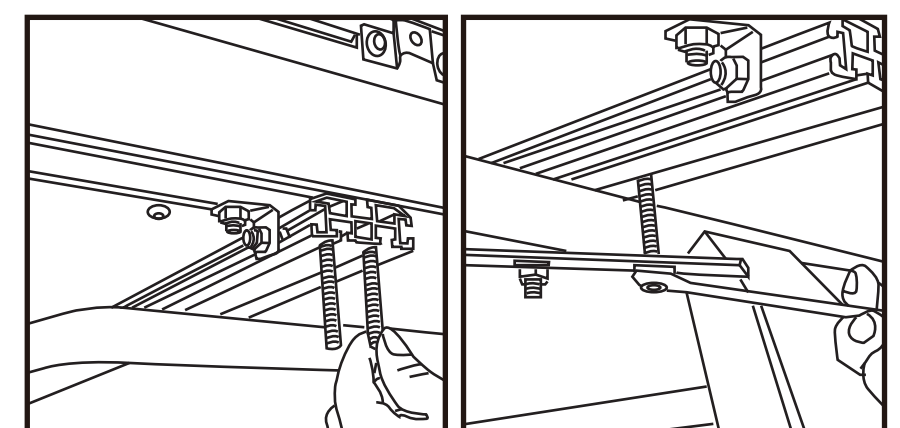



2. Secure each of the four corners with the brackets and screws provided. Each mounting point requires two 55mm M8 screws that slide into the slots on the mounting bar. Tighten the Nyloc with washer using the spanner provided.

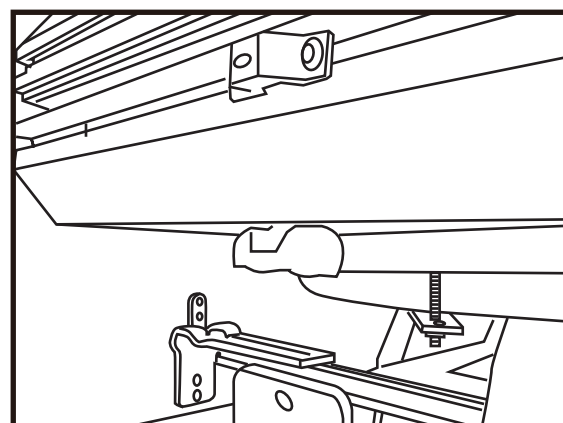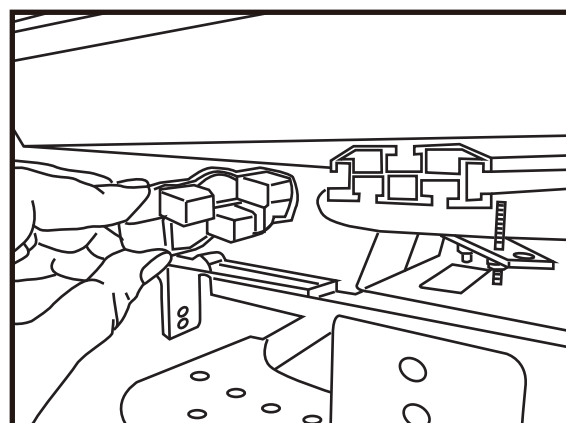


3. Insert the optional end caps to the end of the extrusions.

+ LADDER OPERATION


The ladder maximum load rating capacity is 150kg.

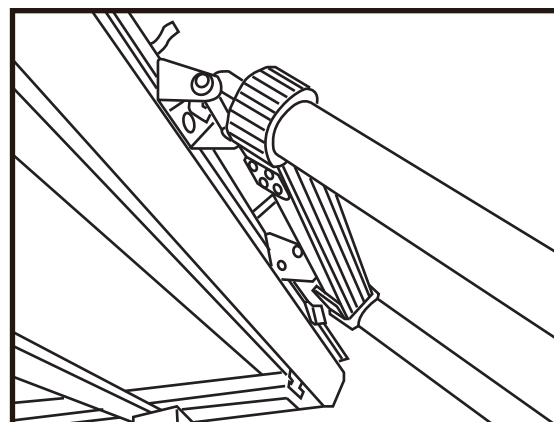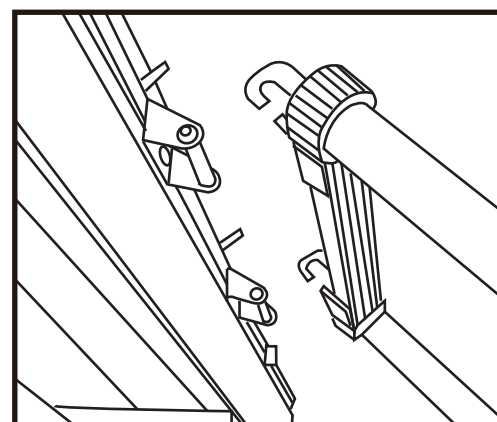

1. Take the ladder out from the storage bag and remove the strap that is holding the retracted ladder in place. Clamp the ladder onto the brackets on the rooftop tent extending each rung sequentially. Before attempting to extending the next rung pull each rung to its full extension and ensure that the locking mechanism is engaged. Place the ladder in an upright position ready for use. To keep the ladder firmly in place, step on the bottom rung. Continue in this manner for several steps until you reach the desired height.

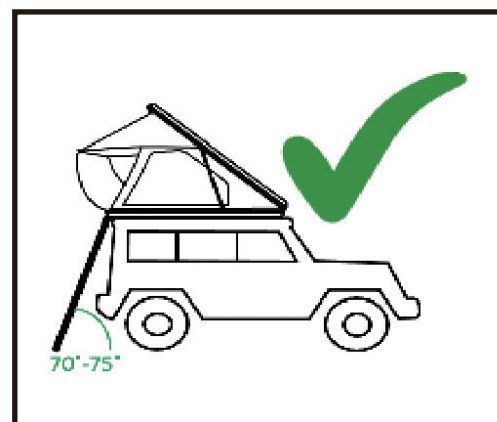


2. Adjust the length of the ladder to make sure the angle is approximately 75 degrees between the ladder and the ground.

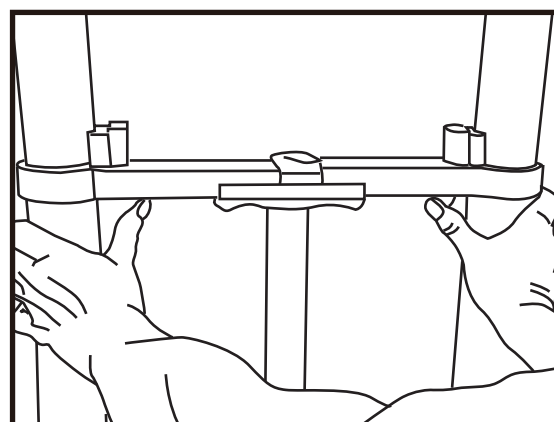


3. To close the ladder, grasp with both hands and press the left and right switches on the lowest cross piece. Slowly collapse the ladder in the opposite sequence to opening it.


+ ROOF TOP TENT SETUP

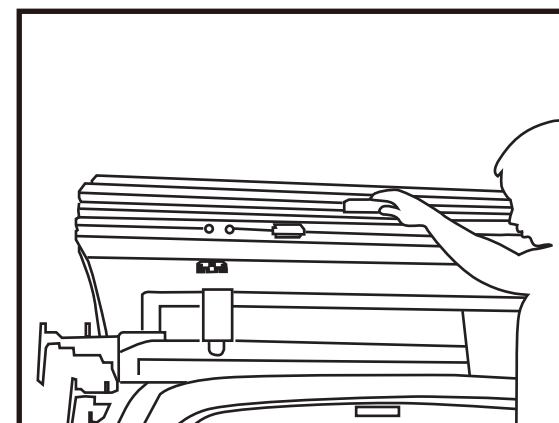

1. Pull up the handle to enable the tent to open fully.

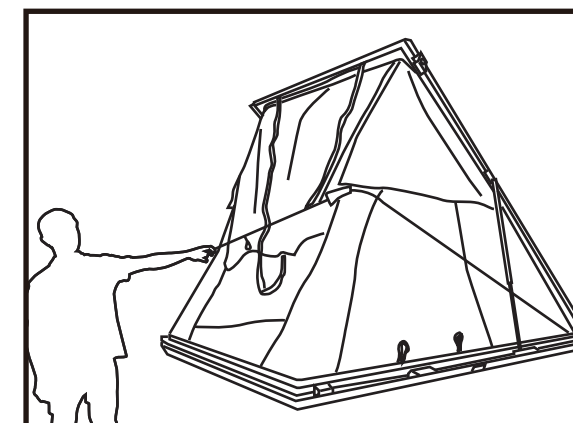


2. The elastic helps keep the tent inside the housing. Slide the elastic strap down and place it around the tent base when setting up.

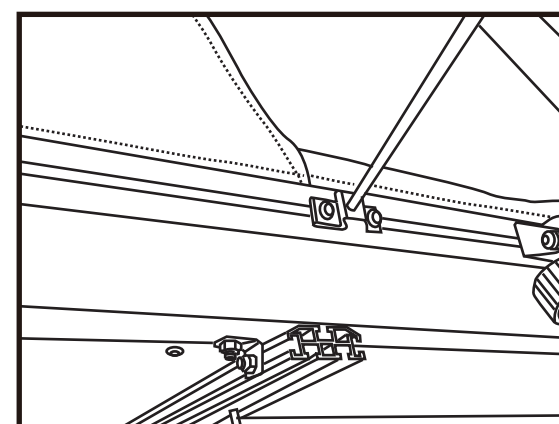

3. Set up the awning with two spring poles. Insert the straight end to the bracket on the base and the other end to the hook on the awning.

Note: Sudden release of the spring pole may cause injury, handle with care.

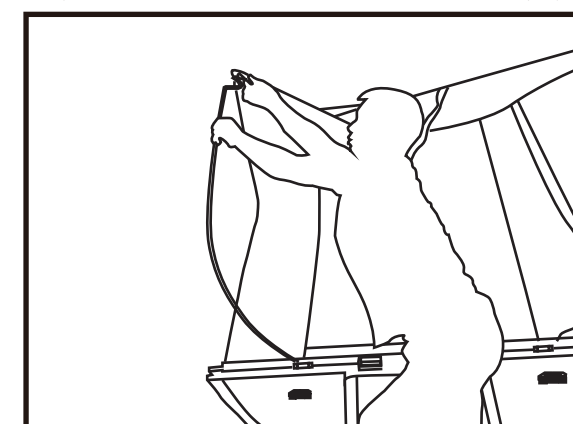

+ PACKING UP YOUR ROOFTOP TENT

+ Pack tent up in reverse order to set up.

PLU: 691595 CODE: LM-LRT01A-V4
Manufactured and packaged for
SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue
Strathpine QLD 4500, Australia
MADE IN CHINA