

Wanderer

camping and outdoors

Instruction for use


1. ON/OFF button: Long press for 2s to turn the fan on or off.
2. Speed Up/Down button: Press up button to increase fan speed and press down button to decrease fan speed.
3. On status indicator lights display: Green light (Fully charged)→Yellow light (Half charged)→Red light→Red light flash (Battery low).
4. Charging indicator lights display: Red light flash (Battery low)→Yellow light flash (Half charged)→Green light flash→Green light (Fully charged).

Maintenance:

- Clean with a damp, soft cloth only.
- Do not use any abrasive cleaners or harsh chemicals.
- Do not expose to heat source, rain or submerge into liquid.
- When battery is low, fan should be recharged immediately.
- Do not use the fan during charging, it may damage battery.
- Use only with included charge cable [USB to USB-C] to charge.
- Fully Charge the fan when it has not been used for 3 months or more.

Safety and Warning:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It must only be supplied at safety extra-low voltage corresponding to the marking on the appliance.
- Li-ion battery charging temperature range: 0 to 45 C.
- Cleaning and user maintenance shall not be made by children without supervision.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- Do not expose the appliance or battery to excessive temperatures.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.
- This appliance contains battery that is non-replaceable.
- When the battery is at end of life, the product shall be properly disposed of. Place the battery and electrical components in the specially provided containers or entrust to authorized organization that will ensure they are recycled.
- When the battery leaks, please separate storage cells and batteries from other types of waste and recycle them via your local collection facility.

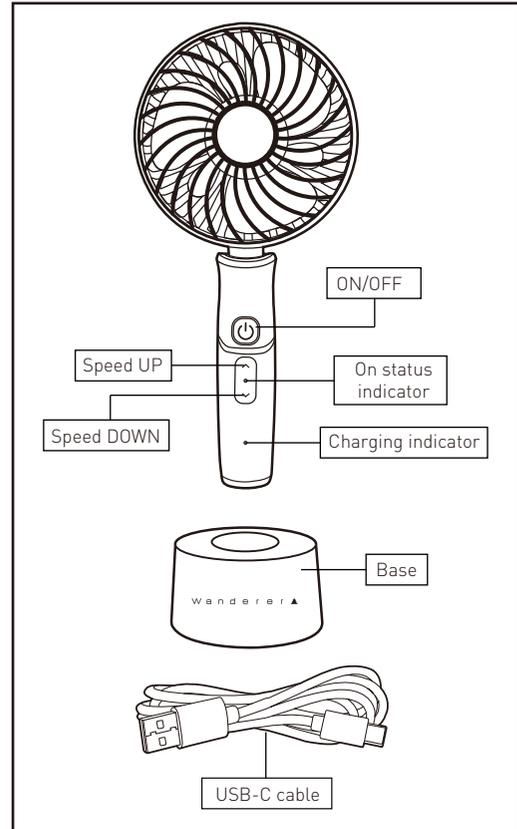

PLU: 692987
DESC: Mini Handheld Fan Rechargeable
CODE: GS120216
Manufactured & packaged for
SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue
Strathpine QLD 4500, Australia
MADE IN CHINA