 
 


W a n d e r e r 


## MAGNETIC FLY SCREEN DOOR 1750 X 622 MM

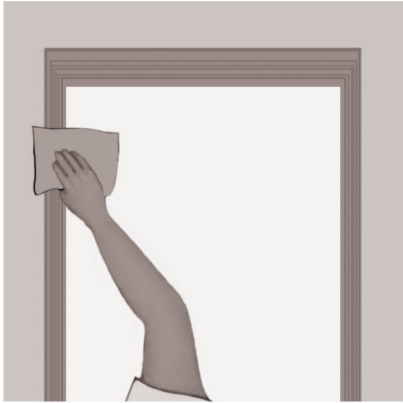

 
1. Clean the door frame and wait for a few minutes until the door frame is completely dry.

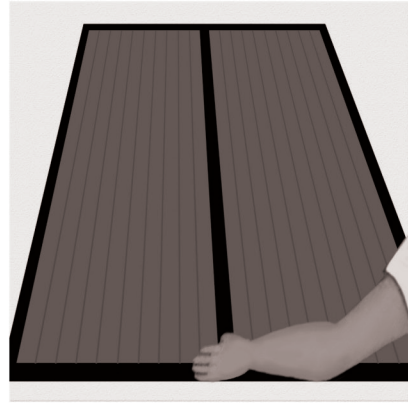

2. Place the mesh flat on the floor with the sewn hook and loop webbing facing up.

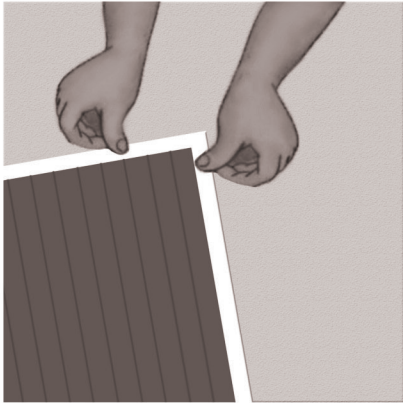


3. Attach the supplied hook and loop webbing to the top and each side without removing the white backing tape.

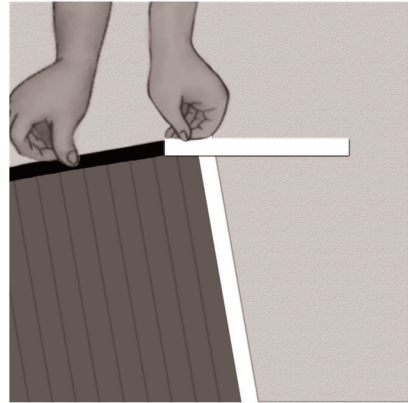

4. Peel off the backing tape from the top hook and loop webbing.



5. Stick the mesh to the top of the door frame. Make sure the mesh is in the proper position and the centre of the mesh is slightly higher than the sides. Peel off the white backing tape from the two sides and slowly stick the hook and loop webbing to the door frame from top to bottom. Ensure the mesh isn't pulled too tightly across the middle, so the magnets line up and close easily.

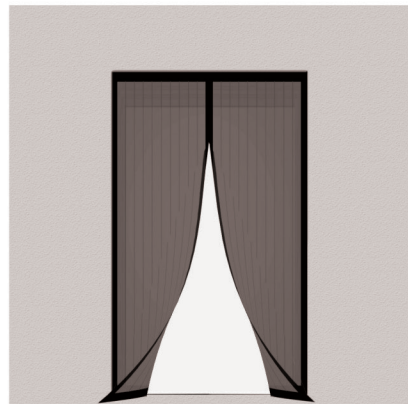

6. Check the mesh opens and closes correctly, making adjustments where necessary.

PLU: 701900  
CODE: ST-2489  
DESC: FLY SCREEN MAGNETIC WANDERER  
Manufactured & packaged for  
SRGS PTY LTD  
ABN 23 113 230 050  
6 Coulthards Avenue,  
Strathpine QLD 4500, Australia  
MADE IN CHINA