 


68.00 mm

68.00 mm

Wanderer

HAND HELD FAN
STELLER



INSTRUCTION MANUAL

Please read this user manual thoroughly before using the product.

PRODUCT INTRODUCTION

Cold Plate

Heat Sink

Display screen

Control Button

Handle

Fan Blades

USB-C Port

Lanyard Hole

INSTRUCTIONS FOR USE

Cooling Button

Display screen

Fan Button

Fan Button Functions:
Short press to turn on the fan (displays 01)
Long press to increase airflow gradually (01 to 100)
Double tap to check battery level
Cooling Button Functions:
Short press to activate cooling (snowflake icon lights up), press again to turn off
Long press to decrease airflow gradually (100 to 01)
Usage Notes:

- Cooling can only be activated after the fan is turned on
- While charging, the battery level is shown with a flashing “%” symbol; the indicator turns off when fully charged


IMPORTANT NOTES

This product uses a lithium battery with no memory effect. Overcharging or over-discharging will affect its lifespan. Please charge it promptly and disconnect the power once fully charged.
The fan blades rotate at high speed during operation. Do not insert fingers to avoid injury.
This product is not a toy. Children under 10 should use it under adult supervision.
Please use an adapter that meets national standards for charging, with a current of 1A or lower.
DO NOT operate if ANY PART of the fan appears damaged. To avoid overheating, use an appropriate power adaptor as described in these Operating Instructions.
DO NOT charge longer than the advised Charging Time. DO NOT leave unattended while charging. DO NOT leave the fan on while unattended.

PRODUCT SPECIFICATIONS

Model: M57
Product Name: WANDERER STELLER HAND HELD FAN
Rated Input: 5V d.c. 1A
Battery Capacity: 5000mAh
Product Weight: 220g
Product Dimensions: 156×60×59 (mm)

Battery

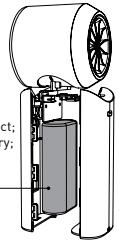

Important Notes:
The battery must be removed before disposing of the product;
Ensure the device is powered off before removing the battery;
Dispose of the battery safely.
Steps to Remove the Battery:
Pry open the back cover;
Disconnect the battery compartment from the motherboard and remove the battery.

Please use a Type-C USB charger with a 5V/1A output to charge the fan.
If the output is below 1A, charging may be slower or the fan may not turn on.
If not used for a long time, please recharge the fan every three months to prolong its lifespan.
Do not insert fingers into the fan grille while it is operating to avoid injury.
Children under 3 should only use it under adult supervision.
Do not disassemble or open the front or rear covers of the fan.
As the fan contains a built-in battery, do not expose it to direct sunlight for extended periods.

SPECIFICATIONS

Material	ABS+PC	
Blade Size	4.4 cm	
Input	5V d.c. 1A	
Battery Type	Rechargeable Li-ion battery	
Battery Capacity	5000mAh	
Charging Time	< 6H	
Runtime	Run time with cooling: • Speed 1: ≥3 hours • Speed 50: ≥2 hours • Speed 100: ≥1.5 hours	Run time without cooling: • Speed 1: ≥14 hours • Speed 50: ≥5.5 hours • Speed 100: ≥2.5 hours
Fan Size	15.6 x 6 x 5.9 cm	
Net Weight	220g	

PLU: 709566 CODE: M57

DESC: WANDERER STELLER HAND HELD FAN

Manufactured and packaged for

SRGS PTY LTD

ABN 23 113 230 050

6 Coulthards Avenue

Strathpine QLD 4500, Australia

MADE IN CHINA