 




# Installation & User Guide

Breeze Pro Caravan & RV Fan  
TVD-FAN4

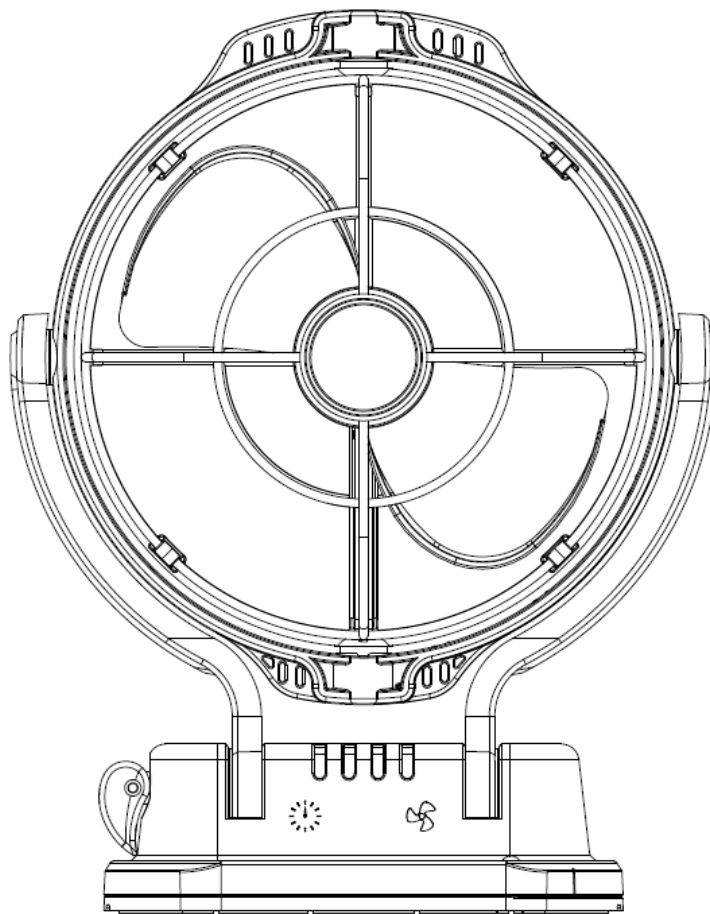

## Important

Please be sure to read and save the entire manual before using your product. Misuse may result in damage and/or cause harm or serious injury. Read the manual in its entirety before using the unit and save the manual for future reference.




**IMPORTANT – READ BEFORE OPERATING****Tools Required for Installation:**

- Phillips-head screwdriver


**What's In the box:**

- 1 x Fan
- 1 x Power Lead
- 2 x Screws
- 2 x Nuts
- 1 x Backing Plate
- 1 x Adhesive Pad

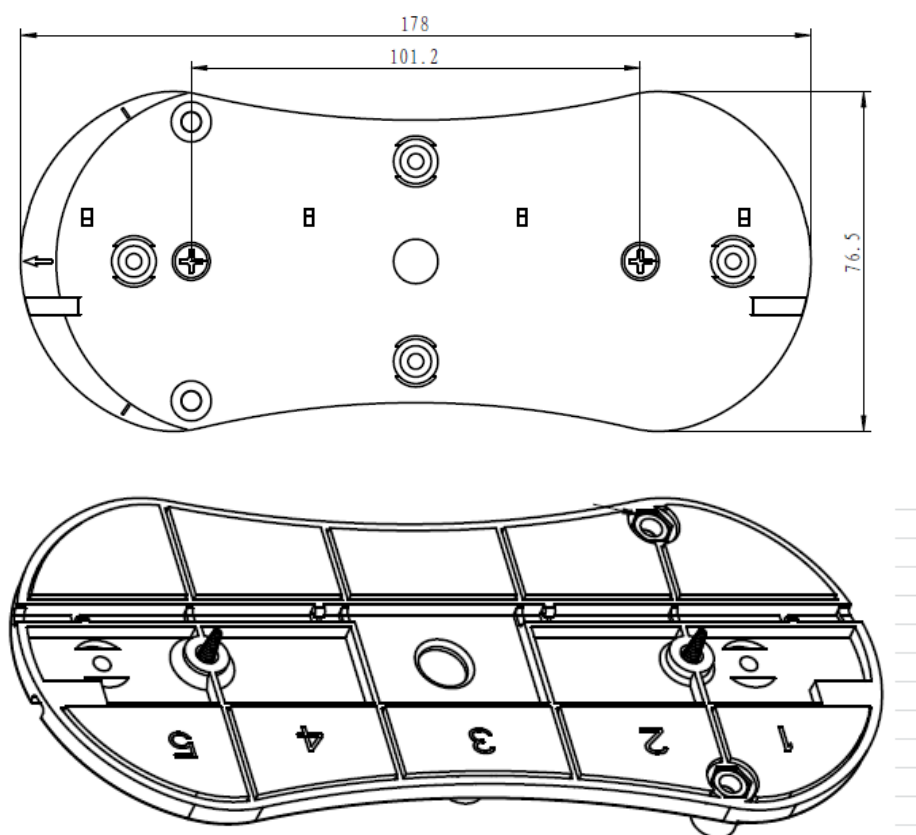
**Backing Plate Dimensions:**

**Installation**

1. Test the positioning of the fan before starting installation.
2. Place the 2 nuts in the hex holes on the back of the backing plate before mounting.
3. Using the double-sided tape provided, attach backing plate to the wall.  
(Note this is a semi-permanent adhesive)
4. Secure the backing plate to the wall using 2 screws.
5. Feed the power wire through the notch on either end of base or through holes on backing plate.

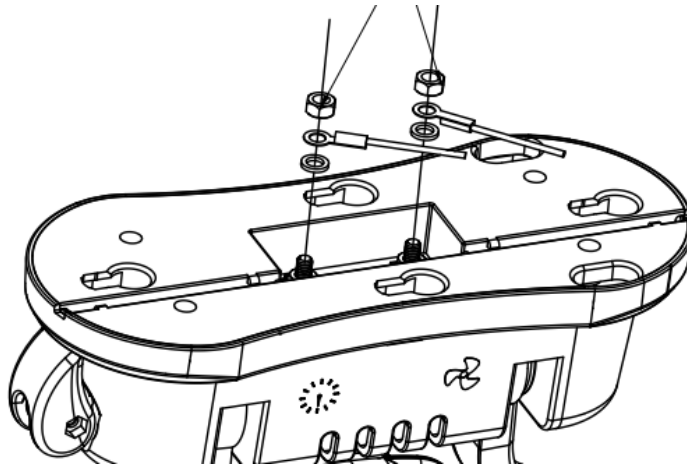

6. Slide the fan base onto a firmly secured backing plate.
7. Secure fan to backing plate with two screw-nuts provided.

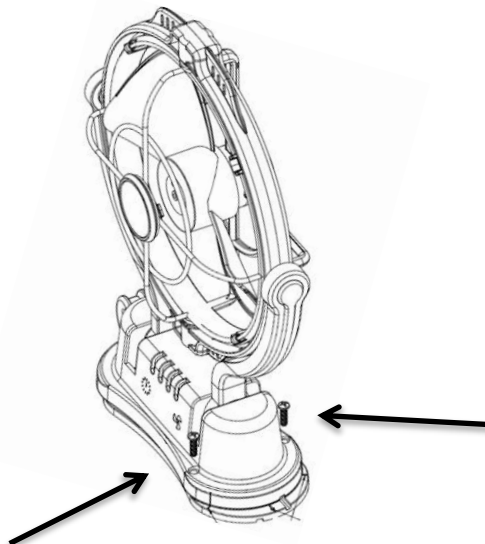


### Operation

#### Important Notes:

- The fan blade must be clear of any obstructions.
- Always lock fan arm in position before turning on.


#### Lock Latch:

- Flip Lock Latch upwards to unlock fan arm.
- Rotate fan arm to desired direction.
- Push latch back down to lock fan in position.

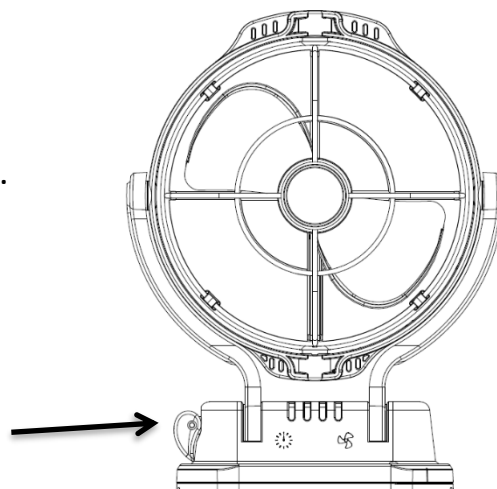

#### Speed Selection:

- Press button one time for low speed
- Press button two times for medium speed
- Press button three times for high
- Press button four times to turn fan off.

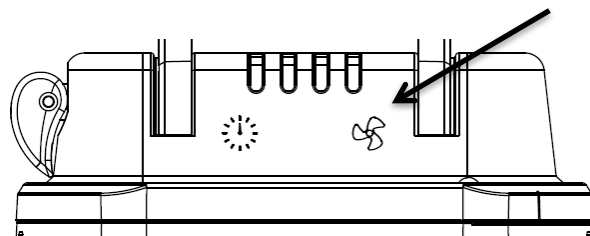


#### Timer Function:

The fan is equipped with a timer feature that allows you to set a running time of 3, 6, 9 or 12 hours.

To set the timer, press the timer button 1, 2, 3 or 4 times. The LED will light up beside the selected time and the fan will automatically turn off after the timer expires.

To turn the fan off mid timer, press the timer Button until the LED bars disappear and then press the Power/Speed button to turn the fan off.

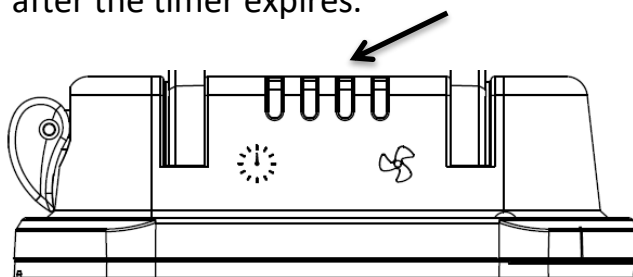

### Specifications

Fan Speed	Current Draw (Amps)		RPM
	12 Volt	24 Volt	12 & 24 Volt
Low	0.2	0.1	1100±100
Medium	0.25	0.14	1400±100
High	0.30	0.16	1700±100

Maximum Airflow: 140 CFM (Cubic Feet Per Minute)

## Care and Maintenance

The Breeze Pro Fan requires little to no maintenance

By following the instructions within this manual, the fan will operate problem free for years. Turn power off to clean. A vacuum can be used to clear the fan of dust build up and a dry cloth may be used to wipe the surface. Do not use any chemicals to clean fan.

## Warnings

- Do not position the fan too closely to any object or material that may be sucked or drawn into the blade.
- Do not allow any object to obstruct or stop the spinning of the blade.
- Inhibiting the blade's ability to spin may result in a shortened lifespan.
- Do not use outdoors.
- Do not use on wet surfaces or immerse in water.
- Do not allow water, cleaning products or other liquids to be sprayed on to the fan.
- Do not use if the power supply cord becomes frayed, brittle or damaged.
- Do not use gasoline, thinners or other harsh chemicals to clean the fan.
- Do not use near fireplaces, furnaces, stoves or mechanical equipment that produce excessive heat.
- Children should be supervised to ensure that they do not play with the fan.

## Warranty

Your Breeze Pro Fan is covered by a 2 Year Australian Warranty

In the unlikely event that a technical issue arises please initially contact your original place of purchase or contact the 12 Volt Direct Support Team on 02 9191 7359.

Warranty will not apply where the device has been misused, altered, neglected, improperly installed or physically damaged, either internally or externally or damaged from proper use or use in an unsuitable environment. We shall not be liable for damages, whether direct, incidental, special, or consequential. or economic loss even though caused by negligence or another fault. If the device requires warranty service, please return it to the place of purchase along with a copy of the proof of purchase.

## Service Contact Information

12 Volt Direct

Unit 13, 32-38 Belmore Road North, Punchbowl NSW Australia 2208

02 9191 7359 | [www.12voltdirect.com.au](http://www.12voltdirect.com.au) | [info@12voltdirect.com.au](mailto:info@12voltdirect.com.au)

© Copyright SPC Enterprises Pty Ltd. All rights reserved.