



## IMPORTANT – PLEASE READ BEFORE USING THIS PRODUCT

Congratulations on the purchase of this Genuine Thermos® Brand product. By taking care of this item, you can expect years of dependable service.


### GENERAL CARE

- Wash and rinse all parts of the product thoroughly before first use. Allow time to dry.
- Hand washing is recommended. Do not put in an automatic dishwasher.
- To achieve maximum thermal efficiency, pre-heat/chill for 5 to 10 minutes before each use with hot tap water for hot drinks and cold tap water for chilled drinks, then empty prior to filling with beverage. Ensure stopper/lid is attached when pre-heating or chilling to avoid spillage.
- Contents should not be left in container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water, allow all parts to dry completely prior to next use or storage.
- Check periodically to make sure any gaskets, O-rings, straws or stoppers are positioned properly, and are replaced if worn or damaged as missing or misaligned components may cause leakage of hot contents which may burn or scald user.
- It is always best to keep product upright when transporting in case of leakage.

### ASSEMBLY & USE

#### Twist-And-Pour Stopper

Image for reference only: actual product may vary

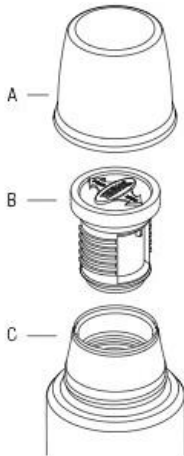

1. Remove lid-cup (A) by twisting counterclockwise. Then, remove twist-and-pour stopper (B) by twisting counterclockwise.
2. Wash all parts separately.
3. Fill container (C) with contents. Do not overfill: Leave space for the twist-and-pour stopper (B), to avoid overflow.
4. To pour, twist twist-and-pour stopper (B) counterclockwise  $\frac{1}{2}$  - 1 turn. Orient product so pour indicator is pointing down while pouring into lid-cup (A). Note: Twist-and-pour stopper (B) does not need to be removed completely to pour contents.
5. Replace twist-and-pour stopper (B) by twisting clockwise until tightly closed.
6. Replace lid-cup (A) by twisting until tightly closed.
7. After filling, always ensure both twist-and-pour stopper (B) and lid-cup (A) are closed and secured tightly to product.

### CLEANING

- Use warm water and dishwashing liquid to clean the product before and after each use, removing all traces of food or beverages. Do not fully immerse in water. Allow time for product to dry thoroughly. Store with the stopper and cup off. Reassemble parts prior to each use.
- Residual contents may become trapped between parts, under gaskets, O-rings, or in straws. Removing all parts and washing with dishwashing liquid and warm water is recommended to ensure that these parts of the product are thoroughly cleaned.

- For excessive staining, fill the product with hot water, add one teaspoonful of bicarbonate soda and soak overnight. DO NOT ATTACH STOPPER / LID when using this cleaning method. Rinse thoroughly before using the product again.

## CAUTION

- Always test temperature of contents before consuming.
- DO NOT overfill the product. Leave sufficient space at the top of container for lid and stopper (if present), to avoid overflow and to enable the stopper to fully engage. Ensure both the stopper and the lid are always tightly closed after filling. Hot contents may burn or scald user.
- DO NOT use abrasive cleaners or scrubbers as they may damage the surface of the product.
- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- Keep the product away from any heat source to protect plastic components from damage.
- DO NOT store dry ice, or any carbonated beverages in the container as they may cause the stopper to eject forcefully.
- In general, contents should not be left in container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy, homemade soup, and/or tomato may start to spoil much sooner. Spoilage may occur faster when contents have been partially consumed and may occur sooner with the opening and reclosing of a product holding contents. Proceed with caution when using the product with quick spoiling or partially consumed contents, as pressure may build up in the container and possibly cause forceful ejection of the stopper or contents. If contents have been left in the container for a prolonged period, or you suspect spoilage, use caution when opening the container. In such circumstances, before attempting to open container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER OR OTHER PERSONS TO AVOID INJURY.
- If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.
- DO NOT use tools or devices to force container open.
- To prevent scalding, always pour contents into a cup. DO NOT drink directly from the container. Do not drink directly from the stopper.
- KEEP OUT OF REACH OF CHILDREN AT ALL TIMES, especially when product contains hot contents, which may burn or scald users.
- NEVER use in microwave oven, conventional oven, or any other heat source.

## 5 YEAR WARRANTY

Thermos Pty Ltd warrants that this Genuine Thermos® Brand product is free from defects in workmanship and materials for 5 years from the date of purchase. If as a result of normal use in compliance with the manufacturer's instructions the product fails to operate within the warranty period, we will repair or replace the product.

This warranty does not extend to cover any damage or defects in plastic components, such as stoppers, cups, straws etc. which are less durable than steel, and are therefore more susceptible to wear and tear, so their useful life will vary depending upon the amount of usage of the product. This warranty does not cover ordinary wear and tear or colour fading, or any condition affected by abuse, neglect, alteration, accident, improper use or maintenance, or commercial use.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits given to you in this warranty are in addition to other rights and remedies under the law in relation to the goods or services to which this warranty applies. In the event of product failure, the goods should be returned at your cost to the original place of purchase, with specific details of the complaint, and a copy of the purchase receipt. You may also contact us:

**Thermos Pty Ltd**  
**318/14-16 Lexington Drive, Bella Vista, NSW 2153**  
**Ph. 02 8853 5400      Fax. 02 8853 5499      E: thermos@thermos.com.au**