
21x14.85cm

Wanderer 🛦

HANDHELD MISTING FAN

HANDHELD MISTING FAN OPERATING INSTRUCTION

Please read this user manual carefully before use and please keep it for future reference.

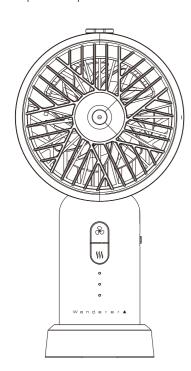

PLU: 712107


Package List

Misting Fan * 1 USB-C Charging Cable* 1

Wanderer

User manual * 1 Bottle * 1

- (1) Blades and Frames
- (2) Spray Outlet
- (3) Fan On/Off Button
- (4) Spray On/Off Button
- (5) Spray/Fan On Indicator (6) Base
- (7) Water Injection Port
- (8) Water Tank
- (9) Charging Port
- (10) Power Switch
- ① USB-C Charging Cable

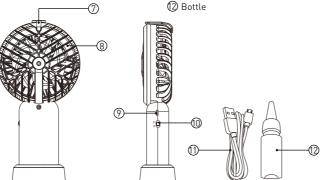

Use Instructions

1. How to charge the fan:

- Turn off the fan while charging.
- Connect a USB-C charging cable to the charging port.
- Whilst charging: the third indicator light turns on.
- Fully charged: the third indicator light turns off.

WandererA

HANDHELD MISTING FAN

Wanderer▲

HANDHELD MISTING FAN

2. How to use the fan blower function:

• To use the product, trigger the power switch first, then press the fan on/off button to start the fan at the low gear and the first blue indicator light turn on. Press the second for the medium gear. Press the third for the high gear. Press the fourth time to turn off.

3. How to use the fan misting function:

• Trigger the power switch first, then press the spray on/off button to start the misting at the low gear and turn on the blue indicator light, long misting timing sets 15 minutes. Press the second for the second gear, short misting timing sets 30 minutes. Press the third to turn off.

4. Fan Maintenance Tips:

- When the fan is not in use, please cover the spray cap to prevent dust from being absorbed or blocking the spray port.
- Non-professionals do not disassemble the fan for cleaning or maintenance.
- Please wipe the fan casing with a dry cloth, and store the fan in a dry box.

5. Failure Causes and Solutions:

- Failure1: Machine does not work Solution: Low battery, please recharge.
- Failure2: When the machine turns on and the indicator light is on, but there is no spray or the spray quantity is small. Solution:
- Low battery, please recharge.
- The water does not flow smoothly, please shake the machine gently.
- There is no water in the water tank, please add water and restart.
- There is water in the spray nozzle, please gently dry with a cotton swab or paper towel.

Cautions:

- 1. This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety.
- 2. Children should be supervised to ensure that they do not play with the fan. 3. The power source used for charging this fan must be an SELV circuit (Safety
- Extra Low Voltage) according to fan rating label.
- 4. This fan contains batteries that are non-replaceable.
- 5. When the fan stops working or the LED light is not on, please charge the fan. Please charge the fan at least every three months to extend the product life

- Do not put your fingers through the fan shroud when the fan is on. Children should only use the fan under adult supervision.
- Do not open the front and back cover of the fan to reassemble this product.
- 8. Due to the built-in battery, please don't expose the fan to sunlight for a long
- 9. Do not use this product near fire or in wet areas.
- 10. The product is suitable for using mineral water, natural clean tap water, and is not suitable for using pure water, distilled water and high-concentration
- 11. When the water tank is filled with water, a small amount of water droplets are discharged from the atomizing port due to the air pressure in the water tank. It can be dried with a cotton swab or paper towel.
- 12.DO NOT operate if ANY PART of the fan appears damaged. To avoid overheating, use an appropriate power adaptor as described in these Operating
- 13.D0 NOT charge longer than the advised Charging Time.
- 14.DO NOT leave unattended while charging.
- 15 DO NOT leave the fan on while unattended

Specifications

ABS+PP
5V d.c.1A
Lithium Rechargeable Battery
2000mAh
5h
12ml
Fan High-speed: 3.5 h
Fan Mid-speed: 5 h
Fan Low-speed: 9 h
Continuous mode: 50±15ml/hour
175 x 92 x 39mm

Users can access manual at this website: https://www.bcf.com.au/

PLU: 712107 CODE: DT25021901-PK

Manufactured and packaged for SRGS PTY LTD

ABN 23 113 230 050, 6 Coulthards Avenue, Strathpine QLD 4500, Australia MADE IN CHINA