## 13cm

Wanderer 🛦 **NOOSA PREMIUM QUAD FOLD BEACH CART ASSEMBLY INSTRUCTIONS** WEIGHT **CAPACITY** KGS WARNING: THIS CART IS NOT DESIGNED FOR TRANSPORTING CHILDREN/ADULTS. WARNING: Please be aware some vinyl and indoor hard floor surfaces may be damaged or stained by the wheels from this carts. It is recommended they are not stored on some vinyl and indoor hard floor surfaces as these are for outdoor use only. Assembly: Front Swivel Wheel Back Wheel Take out the beach cart and wheels. Remove the base Pull out the lock and push down the strap loop area board from the side pocket and unzip the carry case. to unfold the cart.

1cm

21cm

