


# Jackery

Model: JE-600C

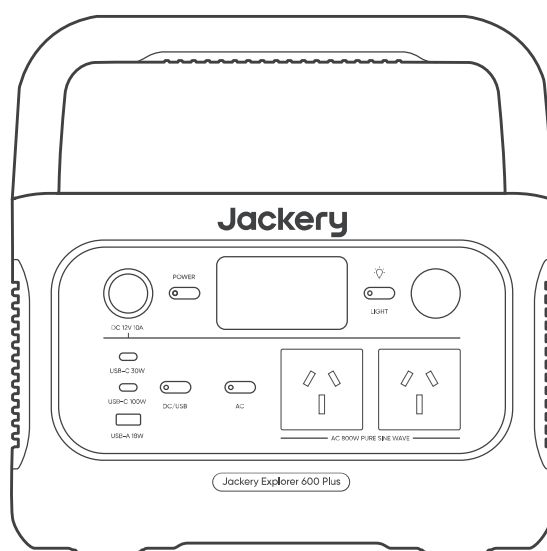

## USER MANUAL

### Jackery Explorer 600 Plus

**Contact us:**  
[hello.aus@jackery.com](mailto:hello.aus@jackery.com)



Congratulations on your new Jackery Explorer 600 Plus. Please read this manual carefully before using the product, particularly the relevant precautions to ensure proper use. Keep this manual in an accessible place for frequent reference.

In compliance with laws and regulations, the right of final interpretation of this document and all related documents of this product resides with the Company.

Please kindly notice that no further notifications will be given in case of any update, revision or termination.

## TECHNICAL SPECIFICATIONS

Product Name	Jackery Explorer 600 Plus
Model No.	JE-600C
Capacity	15.2Ah/41.6V DC (632.3Wh)
Cell Chemistry	LiFePO4
Weight	About 16.1lbs/7.3 kg
Dimensions	11.8 x 8.6 x 7.76 in/30 x 21.9 x 19.7 cm
Cycle Life	4000 cycles to 70%+ capacity
DC Input	11V~16V $\equiv$ 8A Max; 16V~60V $\equiv$ 10.5A/200W Max
AC Input	220V~240V~ 50Hz, 10A Max
2 x AC Output	230V~ 50Hz, 3.48A
AC Total Output	800W Rated, 1600W Surge peak
USB-C1 Output	30W Max, 5V $\equiv$ 3A, 9V $\equiv$ 3A, 12V $\equiv$ 2.5A, 15V $\equiv$ 2A, 20V $\equiv$ 1.5A
USB-C2 Output	100W Max, 5V $\equiv$ 3A, 9V $\equiv$ 3A, 12V $\equiv$ 3A, 15V $\equiv$ 3A, 20V $\equiv$ 5A
USB-A Output	18W Max, 5~6V $\equiv$ 3A, 6~9V $\equiv$ 2A, 9~12V $\equiv$ 1.5A
Car Port	12V $\equiv$ 10A Max
Charge Temperature	0°C~45°C (32°F~113°F)
Discharge Temperature	-10°C~45°C (14°F~113°F)


## CERTIFICATIONS

## UN38.3

※ USB Type-C<sup>®</sup> and USB-C<sup>®</sup> are registered trademarks of USB Implementers Forum.


## PACKAGE LIST

①

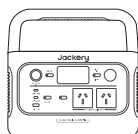


Jackery Explorer 600 Plus

 ②



AC Charging Cable

 
③




User Manual

GET TO KNOW YOUR GEAR

Product Appearance

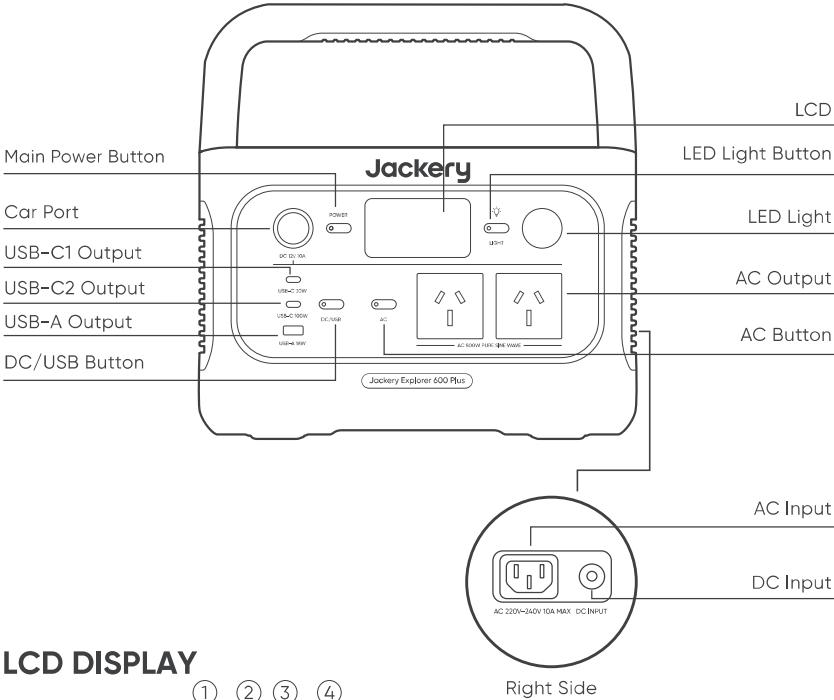

LCD DISPLAY

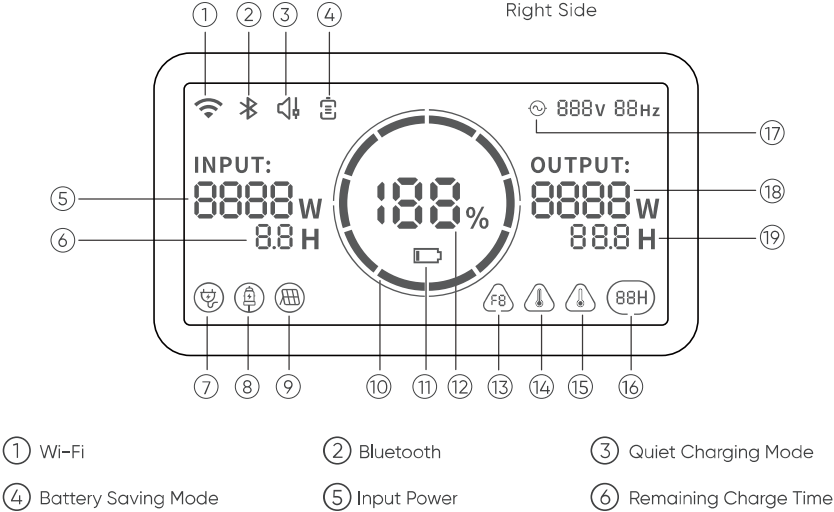

- ⑦ AC Wall Charging Indicator   ⑧ Car Charging Indicator   ⑨ Solar Charging Indicator  
 ⑩ Battery Power Indicator   ⑪ Low Battery Indicator   ⑫ Remaining Battery Percentage  
 ⑬ Fault Code   ⑭ High Temperature Warning   ⑮ Low Temperature Warning  
 ⑯ Energy Saving Mode   ⑰ AC Power Indicator   ⑱ Output Power  
 ⑲ Remaining Discharge Time

#### UPS:

Once you have connected the mains and the AC input port of the product via the AC charging cable, you can use the AC output port of the product to power your unit (at this point the AC power comes from the mains, not the battery of the product). In the event of a sudden loss of mains power, the product can automatically switch to battery mode within 20ms. This product does not support 0ms switching. Do not connect to equipment with high uninterruptible power requirements such as data servers and workstations. Please test several times to confirm compatibility before use and it is recommended to connect to only one device. Do not use more than one unit at a time to avoid triggering the overload protection. Failure to follow these instructions may result in equipment failure or loss of data for which we cannot be held responsible.



#### Battery Power Indicator

When the product is being charged, the orange circle around the battery percentage will light up in sequence. When charging other devices, the orange circle will stay on.



#### Low Battery Indicator

When the battery is less than 20%, the Low Battery Indicator will stay on. When less than 5%, the Low Battery Indicator will flash. When it is being charged, this Indicator will be off.



#### Energy Saving Mode

To avoid forgetting to turn off the output which results in battery consumption, the product turns the Energy Saving Mode on by default. This occurs when no device is connected or the connected device is less than or equal to a certain value (Refer to the table below for more details), the device will automatically turn off all outputs after 12 hours.

Output	Output Power	Defaults
AC Output	≤25W	All outputs turned off automatically after 12 hours
USB Output	≤2W	
Car Output	≤2W	

#### To turn off the Energy Saving Mode

Long press the AC Button and Main Power Button until the Energy Saving Mode icon disappears. In Non-Energy Saving Mode, please remember to turn off the products to avoid battery consumption.

### To turn on the Energy Saving Mode

Long press the AC Button and Main Power Button until the Energy Saving Mode icon lights up on the screen.



### Fault code

In order to respond to the feedback quickly, we set up common fault codes F0-FE in the system: If the F8 code appears, please remove the load or unplug the charging plug, the product can restore by itself; if not, please contact after-sales service; If the F9 code appears, please remove the load and the product can recover by itself; if not, please contact after-sales service. In case of any other code appears, please contact our after-sales service.



### High-temperature warning

If it appears on the screen, do not worry, the battery will restore automatically after cooling.



### Low-temperature Warning

If it is displayed on the screen, do not worry. It will automatically restore after the ambient temperature is restored.



### Quiet Charging Mode

When Quiet Charging Mode is activated, the charging power is reduced, charging speed is slowed down, and noise during charging is significantly reduced (please enable/disable this feature in the app).



### Battery Saving Mode

When Battery Saving Mode is activated, the available battery capacity of the product decreases, extending the lifespan of the battery cells (please enable/disable this feature in the app).

## BASIC OPERATIONS

### Main Power On/Off

Press the "Main Power Button" and the working indicator lights up and the LCD display is illuminated. If you need to turn off the main power, please press and hold the "Main Power Button" until the working indicator turns off. The default standby time of this product is 2 hours. (the product will automatically shut down after 2 hours without charging or discharging) The automatic shutdown time can be set on the Jackery App.

\*In Energy Saving mode, turn on DC output or AC output, or it will automatically shut down after 12 hours if there is no charging input or discharging output.

**AC Output On/Off:** Ensure that the main power supply is turned on. Press the AC Button, the AC Output Power indicator lights up. Then you can connect the equipment that needs AC charging. Press the AC Button again to turn off the AC Output.

**DC Output On/Off:** Ensure that the main power supply is turned on. Press the DC/USB Button, the DC Output Power indicator lights up. Then USB/Car Port Output Ports can be connected to external load devices. Press the DC/USB Button again to turn off the USB/ Car Port Output.

### LCD Screen On/Off

To turn on, press the Main Power Button or when there's a charging input, the screen display will light up automatically. To turn off, press the Main Power Button again and the screen display will turn off.

### LCD is off automatically

If there is no operation in 2 minutes, the product will enter a sleep state and the screen display will automatically turn off.

**Turn on/off the Always-on Display** (under charging or discharging state), follow these steps:


After the display screen lights up, double-click the Main Power Button and the Always-on display mode will be on, then press it again to turn off the screen.

Tip: During Always-On Display mode, the screen automatically turns off after 2 hours without charging or discharging.

### LED Light

The LED light has three modes: Low Light mode, High Light mode, and SOS mode.

Press the LED light button and the LED light will turn on. The default mode is Low Light mode. Press the LED button again to switch it to high light mode, SOS mode, or turn off the LED light in sequence. In any of such modes, you can press and hold the LED button to turn off the LED light.

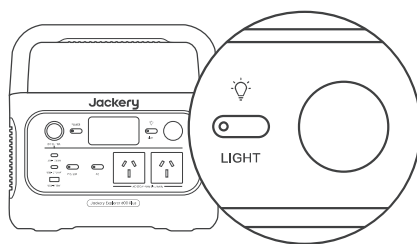

## APP CONNECTION

This product supports the connection of Jackery App for intelligent control and operation. Users can download the Jackery App through App Store or Google Play. For more information, please refer to Jackery App User Manual.

## CHARGING YOUR JACKERY EXPLORER 600 PLUS

Fully charge the device before its first use.

### Note:

1. The recommended charging temperature for the product is between 0°C to 45°C (32°F to 113°F), and the discharging temperature is between -10°C to 45°C (14°F to 113°F). Operating the product outside this temperature range may restrict its charging and discharging capabilities, or even render it unable to charge or discharge.
2. The charging power and battery capacity of the product may vary due to temperature fluctuations.


### Charging via AC Wall Outlet

Connect the AC charging cable to the input port of the power station and plug it into the wall outlet.

### Emergency Charging Mode



Under this mode, you can rapidly power up the portable power station using the AC charging method. This emergency charge function can be activated or deactivated through the Jackery app. When in emergency charging mode, the circular light indicating the state of charge (SOC) will blink at an increased pace.

\* To maximize battery life, it is best to charge at normal speed. We recommend using emergency charging mode only when necessary. It's not recommended for regular, long-term use.

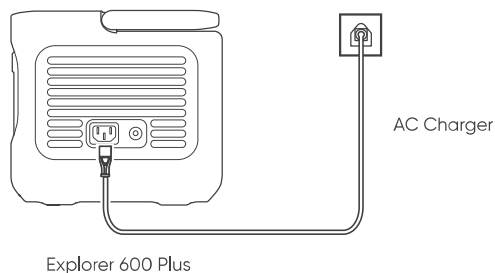

### Charging via Solar Panel

The Jackery Explorer 600 Plus can support one 200W solar panel or two 100W solar panels in series at most. You can directly connect the DC8020 port on Explorer 600 Plus and the solar panel for charging. When it is connected with two solar panels, please refer to the figure below for charging through the solar panel connector (sold separately, not included as standard).

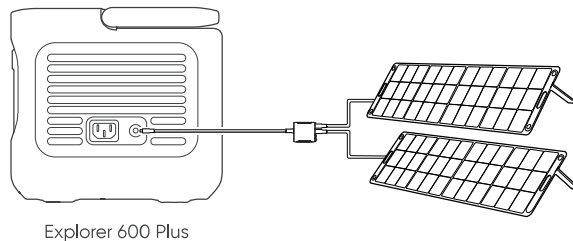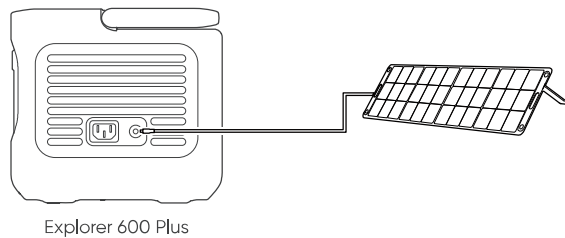


### Charging via Car Charger

This product can be charged with a 12V car charger. Ensure that the car charger and the car cigarette lighter provide a good connection.

\*Please start the vehicle before charging your power station.

\*If the vehicle is running on bumpy roads, it is forbidden to use the car charger in case it burns due to a poor connection. The Company will not be responsible for any loss caused by non-standard operation.

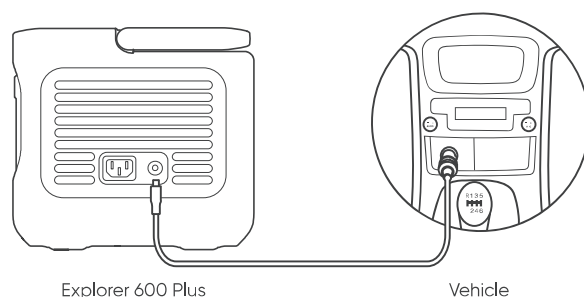

## SAFETY PRECAUTIONS WHEN USING

**The basic safety precautions should be followed when using this product, including:**

- a. Please read all instructions before using this product.
- b. Close supervision is required when using this product near children to reduce the risk.
- c. Risk of electric shock may occur if using accessories recommended or sold by non-professional product manufacturers.
- d. When the product is not in use, please unplug the power plug from the product's socket.
- e. Do not dismantle the product, which may lead to unpredictable risks such as fire, explosion or electric shock.
- f. Do not use the product through damaged cords or plugs, or damaged output cables, which may cause electric shock.
- g. Charge the product in a well ventilated area and do not restrict ventilation in any way.
- h. Please put the product in a ventilated and dry place to avoid rain and water to cause electric shock.
- i. Do not expose the product to fire or high temperature (under direct sunlight or in vehicle under high heat), which may cause accidents such as fire and explosion.
- j. When using it for the first time, please fully charge the device before use. If this product is stored for a long period of time (3 months – 6 months) with the power depleted, its performance will deteriorate and may even become unchargeable.



## WARRANTY

We only provide our warranty to customers who purchase from the official Jackery website, Jackery-branded third-party platforms, or local authorized dealers.

\*Warranty period and details may vary according to local laws, regulations, and authorized dealers.

### Limited Warranty

Jackery warrants to the original consumer purchaser that the Jackery product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in the 'Warranty Period' section below, subject to the exclusions set forth below.

This warranty statement sets forth Jackery's total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sale of our products.

### Warranty Period

**3 Years Standard Warranty:** The standard warranty period for Jackery Explorer 600 Plus is 36 months. In each case, the warranty period is measured starting on the date of purchase by the original consumer purchaser. The sales receipt from the first consumer purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

**2 Years Extended Warranty:** To activate the Warranty Extension, you must register your product online or contact our customer service team at [hello.eu@jackery.com](mailto:hello.eu@jackery.com) to extend the standard warranty runtime.

### Exchange

Jackery will replace (at Jackery's expense) any Jackery product that fails to operate during the applicable warranty period due to defect in workmanship or material. A replacement product assumes the remaining warranty of the original product.

### Limited to Original Consumer Buyer

The warranty on Jackery's product is limited to the original consumer purchaser and is not transferable to any subsequent owner.

### Exclusions

Jackery's warranty does not apply to:

Misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in Jackery's current product literature.

Attempted repair by anyone other than an authorized facility.

Any product purchased through an online auction house.

Jackery's warranty does not apply to the battery cell unless the battery cell is fully charged by you within seven days after you purchase the product and at least once every 6 months thereafter.

# User Manual for Jackery App


## 1. To download the App and log in

Search for "Jackery" in Google Play or App Store to install the App. After that, you can register and log in.


## 2. To add device

2.1 Click the button  to add your device;

2.2 Long press the "POWER" button on the device to turn on, the Wi-Fi and Bluetooth icons on the device flash to indicate that the device has entered the network configuring mode, click the "Icon Flashed" button and allow the App to connect to nearby devices and open Bluetooth permissions;

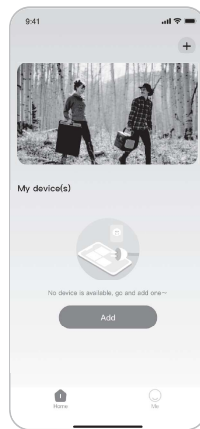


2.1

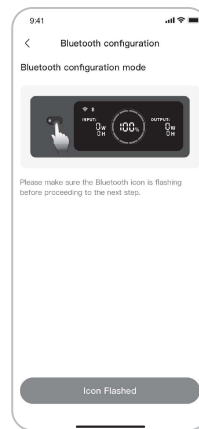

2.2

Remarks: After being turned on, if the APP is not connected within 5 minutes, the device will automatically turn off Wi-Fi and Bluetooth. Now, it is required to press and hold "DC/USB Button" and "AC Button" to turn on Wi-Fi and Bluetooth again.

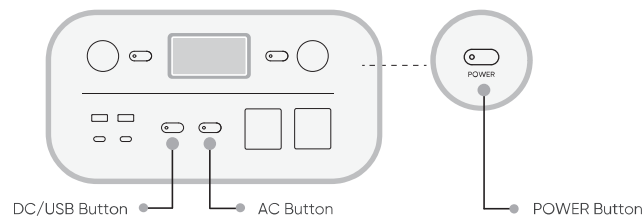

2.3 After clicking the searched device icon, the App automatically connects the device via Bluetooth.

Remarks: If "the device has been bound" is prompted during the binding process, the following two ways can be used for connection:


- The device owner will share this device with other users through the App.

- Press and hold the "POWER Button" and "DC/USB Button" for 3 seconds to reset the device, and then re-bind the device.


2.4 After the device is successfully connected, it is necessary to enter your Wi-Fi password and tap the OK button;

Remarks: Please select a Wi-Fi network in 2.4GHz band. The device does not support a Wi-Fi network in 5GHz band.

2.5 After the device is successfully added on the home page of the device, the Wi-Fi icon on the device will be always on;

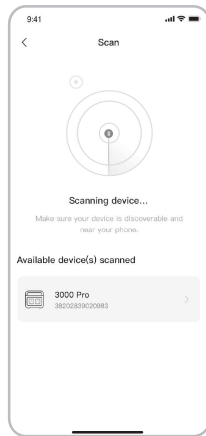

2.3

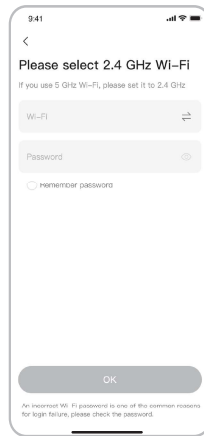

2.4



2.5

The above screenshots are for reference only.

### 3. To unbind the device

Click the Settings button in the upper right corner of the main interface of the device to enter the settings page, and click the Unbind button at the bottom of the page to unbind the device.

### 4. Notes

#### 4.1 To turn on Wi-Fi & Bluetooth:

- Wi-Fi & Bluetooth are automatically turned on after the device is on, and the Wi-Fi & Bluetooth icons on the screen light up;
- Press the DC/USB button and the AC button at the same time until the Wi-Fi & Bluetooth icons on the screen light up;

#### 4.2 To turn off Wi-Fi & Bluetooth:

- Press the DC/USB button and AC button at the same time until the Wi-Fi & Bluetooth icons on the screen are off;
- Wi-Fi & Bluetooth will be automatically turned off if no device is connected within 5 minutes;

#### 4.3 To reset Wi-Fi & Bluetooth:

- Press the POWER button and DC/USB button at the same time for 3 seconds to reset Wi-Fi & Bluetooth to factory settings and reboot the system. The connected App account will be unbound.

Download the Jackery Mobile App



**JACKERY AUSTRALIA PTY LTD**

39 ANTIBES ST PARKDALE VIC 3195

E-mail: [hello.aus@jackery.com](mailto:hello.aus@jackery.com)

Website: [au.jackery.com](http://au.jackery.com)