

GERMANICA

FROZEN DRINK MAKER

GRFRDMA01



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Before first use	6
Product Overview	7
Operation	8
How to use the Frozen Drink Maker	8
Cleaning & Maintenance	10
Troubleshooting	11
Specification	Last Page
Customer Support	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the product.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Do not expose this product to rain or moisture.
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact

- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- No naked flame source, such as candles, should be placed on the product.
- This appliance is not to be used by persons (including children) with reduced physical, sensor or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
Children being supervised not to play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

Inside the Top compartment where you insert the Ice, The blade is sharp. Use extreme caution during assembly, while operating, disassembly and cleaning.

- Do not use if blade is broken, cracked or loose. Do not leave appliance unattended while it is operating its service agent or similarly qualified persons in order to avoid a hazard.
- Never place fingers or utensils into the feed or discharge areas to reduce the risk of service injury to persons or damage to the shaver.

GENERAL SAFETY (CONT.)

- If you notice any unusual odors or smoke around the unit, immediately turn off the device and contact the service center. Failure to do so may result in fire or electric shock.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Protected from excessive dust or grease.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

This appliance is intended to be used in household and similar applications as:

- staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
-
- Switch off the appliance and disconnect from supply before changing accessories or approaching that move in use.
 - Warn of potential injury from misuse.

GENERAL SAFETY (CONT.)

Before first use

- Unpack the product and accessories and ensure all parts of the product are undamaged and in good working order.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the power cord to its full length and inspect it for damage before each use. Do not use the product if it or its cord has been damaged or is not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- Ensure the product is not exposed to direct sunlight or placed near a heater or other heat source.

Please check all packaging material carefully before discarding.


Many accessory parts are contained within the packaging material.

Hand-wash the transparent cup, stirring rod, auger drum, securing nut and lid in warm, soapy water. Rinse and dry thoroughly.

Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.

Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.

PRODUCT OVERVIEW

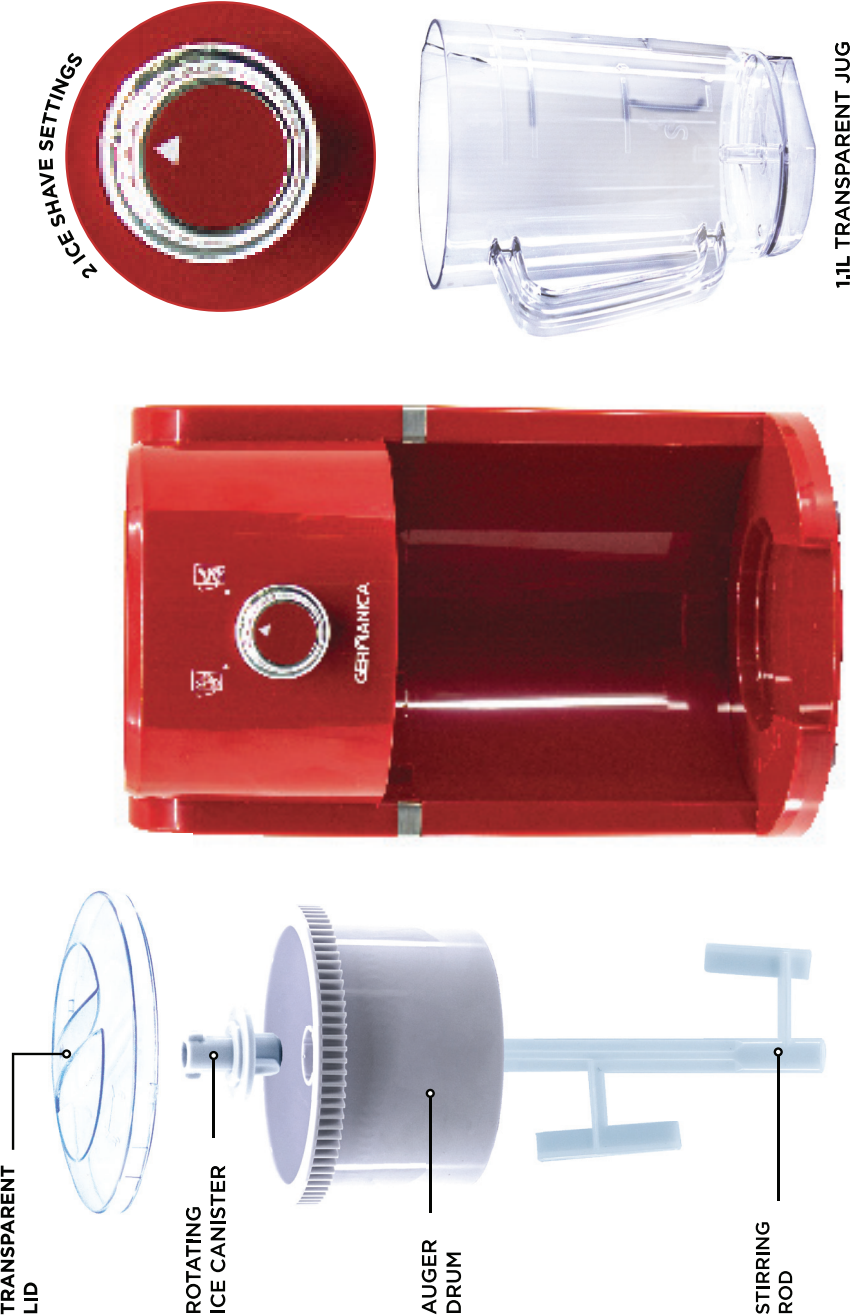

OPERATION

USING YOUR FROZEN DRINK MAKER

1. Line up the four outside tabs of the mainbody assembly with the matching grooves on the auger drum, place the auger drum inside the main body, Lock the auger in place with the securing nut by turning nut clockwise. Push gently in place to secure.
CAUTION: The mainbody contains a sharp shaving blade, handle with care.
2. Place the stirring rod into the transparent cup (Note: the bottom hole of the stirring rod must insert into the middle post of the transparent cup); Then put the transparent cup on the main body bottom and rotate clockwise into place.
3. Add ice cubes to auger.
4. Plug the frozen drink maker into a 220-240V, AC electric outlet only.
5. Place the lid on top of the main body, aligning the tabs. Turn the lid counterclockwise until the lid tab engages the interlock switch. The motor will start and the ice will begin shaving.
6. To stop shaving ice, turn the lid clockwise to disengage the motor switch.
7. Unplug from power supply immediately after use.
Note: There will always be a small amount of ice remaining in the auger after shaving. Discard the remaining ice.
8. Counterclockwise and remove the transparent cup, then you can enjoy the shaved smoothie.

OPERATION (Cont.)

CAUTION: Do not run frozen drink maker continuously for longer than 5 minutes as overheating may occur. Allow motor to cool down before repeat usage.

- A small amount of smoke and/or odor may occur upon use due to the release of manufacturing oils- this is normal.
- Some minor expansion/contraction sounds may occur during use - this is normal.
- Adjusting knob can adjust the size of shaved ice;
- Before shaved ice cube, you can add the right amount of drink to the transparent cup (This approach is recommended); Under normal circumstances, process a rotary cylinder of square ice (about 250 grams, size 2*2*2cm), add about 170 grams of drink; two rotary cylinder of ice about add 420 grams of drink;
- In either case, processed crushed ice must not exceed the maximum scale of the transparent cup.

CLEANING & MAINTENANCE

1. Always unplug appliance before cleaning.
2. Hand wash parts in warm, soapy water. Rinse and dry thoroughly.
CAUTION: Be extremely careful of shaving blade in main body as blade is very sharp.
3. Clean exterior of the appliance with a damp, soft cloth and wipe dry.
Note: Do not immerse motor housing in water or other liquid.

NEVER ATTEMPT TO SHARPEN SHAVING BLADE AS INJURY MAY OCCUR.

This appliance has no user serviceable parts.

HELPFUL HINTS

- Be sure you have an adequate supply of ice cubes.
- If your motor is laboring or if you get poor shaving results, soften your ice cubes. This can be done by letting your ice sit at room temperature for a few minutes, or running briefly under cool tap water.
- DO NOT overfill the auger; the cover should sit flush without forcing.
- Cube shaped ice performs better than the half-moon shaped ice from ice makers or round cubes from store-bought bagged ice.

TROUBLESHOOTING

Troubleshooting

If your products stops working, contact our call centre at info@ayonz.com.

Do not attempt to open and repair the unit yourself.

SPECIFICATIONS

Power Supply	220-240V ~ 50/60Hz, 30W
--------------	-------------------------

GERANICA

CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd