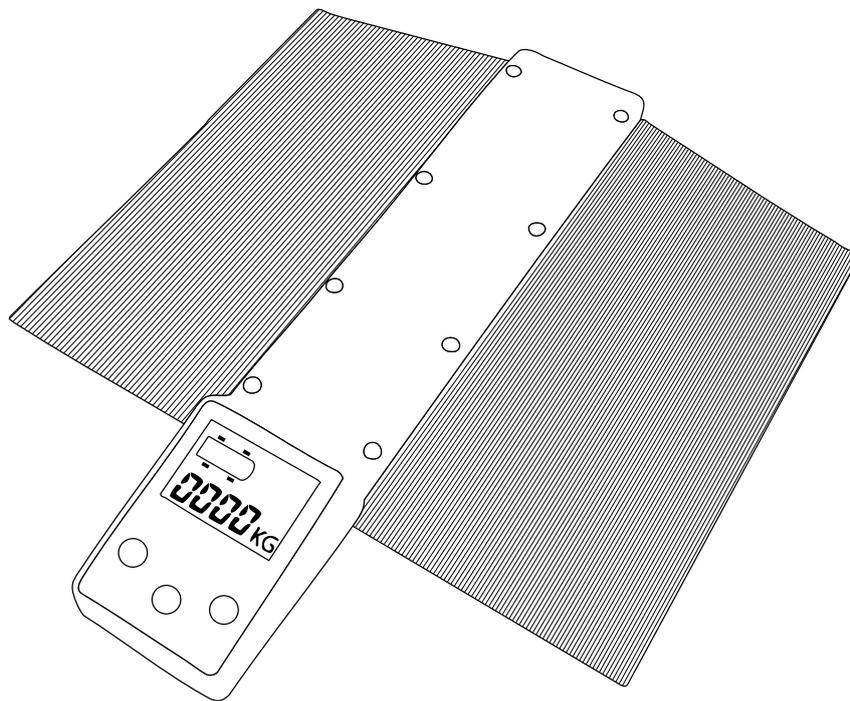




1500KG DIGITAL WHEEL WEIGHT SCALE

USER MANUAL



READ CAREFULLY BEFORE USING
RETAIN MANUAL FOR FUTURE REFERENCE



Read this installation instruction thoroughly.
 Incorrect installation or operation may void any warranty.
 Incorrect use or operation may cause serious injury.

PRODUCT INTRODUCTION

This portable scale is easy to use with high accuracy for assessing the weight of your car, caravan, motorhome, or trailer. To get started, simply select your setup on the LCD display, then drive each tyre onto the scale. The scale will calculate your vehicle's weight with less than 2.5% deviation accuracy.

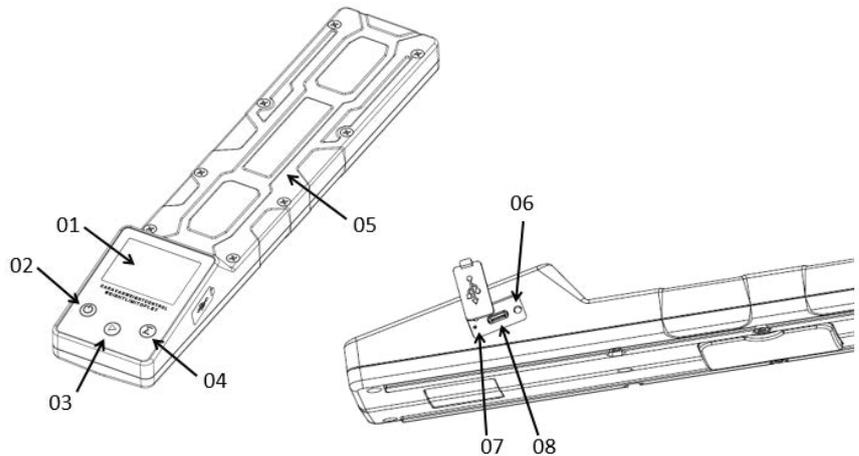
The Aussie Traveller Wheel Weight Scale provides vital information on weight distribution across each side of your vehicle, helping you achieve balanced, safe loading before you set off. You can view the weight of each wheel, the combined weight for one side, or the total vehicle weight.

For added convenience, the scale features a USB-C rechargeable lithium battery, offering fast charging and up to 10 hours of run time.

Suitable for most RVs, including single and dual-axle caravans, the Aussie Traveller Wheel Weight Scale is an essential tool for both new and seasoned travellers.

WHEEL WEIGHT SCALE DIAGRAM:

1. Digital display
2. Power (On/Off) button
3. Mode button
4. Sum button
5. Load bearing area
6. Battery indicator
7. Reset button
8. TYPE-C charging connection, charging cable included



SPECIFICATIONS:

| | |
|------------------------------------|--------------------------------------|
| RUN TIME | 10 hours, approx. 60 uses |
| BATTERY | 3.7V 600mAh Lithium Battery |
| INPUT VOLTAGE | 5V / 0.6A |
| MAX. WEIGHT LIMIT | 1500kg |
| DEVIATION | <2.5% |
| WATER & DUST RESISTANCE | IP44 rated |
| CHARGING CONNECTION | USB-C, USB-C to USB-A cable included |
| DIMENSIONS (L×W×H): | 320 × 360 × 43mm |
| WEIGHT | 2kg |



CE IP44

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061



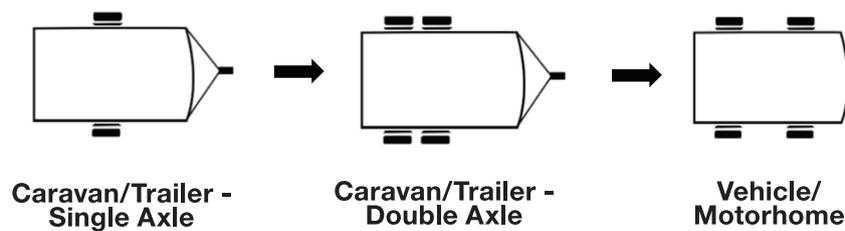
OPERATION

SWITCH ON/OFF:

- Press the power button (reference number 2, see previous page) to switch on and hold the power button for 3 seconds to switch off.

SWITCH BETWEEN MODES:

1. Press the power button to start.
2. Press and hold the SUM button (reference number 4, see previous page) and then press the Mode button (reference number 3, see previous page) to change the mode between Vehicle/Motorhome, Caravan/Trailer - Single Axle and Caravan/Trailer - Double Axle.



RECOMMENDED USAGE:

- Position the product approximately 40-50cm away from the tires.
- Start the vehicle, release the brake completely, and avoid pressing the accelerator.
- Drive at a steady pace through the designated area.
- Reverse mode is recommended to use.

RESETTING YOUR DEVICE:

If the display or the on/off function fails or the device no longer responds, please insert the reset tip into the hole (reference number 7, see previous page) and press the reset button. The scales will now be reset to the factory settings.

BATTERY INDICATOR:

When fully charged the device does not show the battery icon. When the power is less than 15% the battery icon will be present on the digital display.

WARNING:

1. Do not use the scale for weights over 1500kg.
2. The operating display should not be compressed by heavy objects.
3. The product should not be immersed in water or used/stored in a humid environment for a long period of time.
4. When weighing the object, the accuracy tolerance is 2.5%
5. Ensure that this product is used on a flat, hard surface and the area is clear of debris.
6. Please ensure that you do not drive over the display with your vehicle/trailer.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

OPERATION (CONT.)

MODE 1 & 2 - SINGLE AXLE CARAVAN/TRAILER & DOUBLE AXLE CARAVAN/TRAILER












1. Place the scales on as level and hard a surface as possible.
2. Switch on the scale by pressing the Power button.
3. Select one of the following 3 modes. Press and hold the Sum button and press the Mode button to change modes.
4. Press the Mode button once, the axle wheel should now start flashing.
5. Place the axle wheel on the scales.
6. As soon as the weight flashes, you can remove the axle wheel from the scales.
7. Press the Mode button, and the left wheel (driver's side) should now start flashing.
8. Place the scales about 5-10cm in front of the wheel so that the load area is under the wheel.
9. Drive slowly over the load area to obtain an accurate measurement.
10. If the measurement is successful, the weight is displayed, if you have driven too fast over the scales, a 'Jaguar' will appear on the display, repeat step 9.
1. Press the Mode button to select the next wheel.
2. Repeat steps 8-10 until you have taken all the measurements.
3. After you have carried out all measurements, press as follows:
 - Press the Sum button once: Total weight
 - Press the Sum button twice: Reset

MODE 3 - MOTORHOMES & OTHER VEHICLES

4. Place the scales on as level and hard a surface as possible.
5. Switch on the scale by pressing the Power button.
6. Select one of the 3 modes, in this case Mode 1. Press and hold the Sum button and press the Mode button to change.
7. Press the Mode button once, and the left front wheel (driver's side) should now start flashing.
8. Place the scales about 5-10cm in front of the flashing wheel so that the load area is under the wheel.
9. Drive slowly over the load area to obtain an accurate measurement.
10. If the measurement is successful, the weight is displayed. If you have driven too fast driving over the scales, a 'Jaguar' will show on the display. Repeat step 6, driving slowly.
11. Press the Mode button to select the next wheel.
12. Repeat steps 6-8 until you have taken all the measurements.
13. After you have carried out all measurements, press as follows:
 - Press the Sum button once: Total weight
 - Press the Mode button twice: Driver's side weight
 - Press the Mode button 3 times: Passenger side weight
 - Press the Sum button 4 times: Reset

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061
          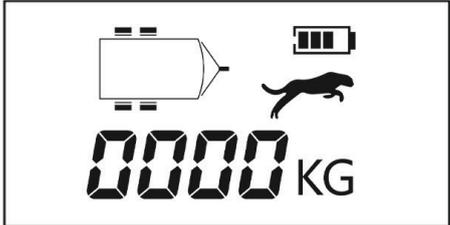
| Mode 1 | Mode 2 | Mode 3 |
|--|--|---|
| <p>Caravan/Trailer - Single Axle</p>   <p>Weigh the jockey wheel of the caravan</p>  <p>Weigh the left wheel of the caravan</p>  <p>Weigh the left wheel of the caravan</p>  <p>Total weight of the caravan</p> | <p>Caravan/Trailer - Double Axle</p>   <p>Weigh the jockey wheel of the caravan</p>  <p>Weigh the left wheels of the caravan</p>  <p>Weigh the left wheels of the caravan</p>  <p>Total weight of the caravan</p> | <p>Vehicle/ Motorhome</p>   <p>Weigh the front left wheel of the vehicle</p>  <p>Weigh the rear left wheel of the vehicle</p>  <p>Weigh the front right wheel of the vehicle</p>  <p>Weigh the rear right wheel of the vehicle</p>  <p>Total weight of the left side of the vehicle</p>  <p>Total weight of the right side of the vehicle</p>  <p>Total weight of the vehicle</p> |
|  <p>0000 KG</p> | | |
|  <p>You have driven too fast over the Weight Scale. Re-weigh this wheel.</p> | | |
| <p>■ Symbol is flashing</p> | | <p>■ Symbol is lit up</p> |

IMPORTANT

This digital wheel weight scale is designed to provide indicative measurements of weight of each side and total weight of a vehicle, caravan or trailer. It is intended to assist users in understanding weight distribution within their vehicle.

The measurements provided are a general guide and should not be considered as exact measurements of weight. For precise measurements, it is recommended to visit an official weigh station.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

WARRANTY STATEMENT

Aussie Traveller Pty Ltd ACN 642 775 460 (**Aussie Traveller**) offers the following warranty in relation to the products it supplies directly or through an authorised manufacturer, dealer or approved service repair agent (**Product**).

Australian Consumer Law

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

If you are a consumer as defined in the Australian Consumer Law: *Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.*

Warranty

Aussie Traveller warrants that, subject to the exclusions and limitations below, all parts of the manufacture and assembly of the Product will be free from defects in materials and workmanship (**Warranty**) for a period of 12 months from the date of purchase as follows:

1. This Warranty is activated at the time of purchase by the final retail customer (being the owner of the Product).
2. In the event the Product is purchased by a manufacturer, dealer or approved service repair agent, this Warranty will commence at the time the final retail customer makes payment for the Product to the wholesale purchaser.
3. If the Product is purchased directly from Aussie Traveller for use by final retail customer and not to be on sold in any way, the Warranty will commence at the time of the original purchase.

Warranty Period

This Warranty cannot be assigned or transferred to a subsequent owner of the Product.

The purchaser or final retail customer should inspect the Product immediately when received or at vehicle handover, to ensure that it appears free from any damage or defect, and matches the description provided.

If after accepting the Product, a defect appears in the manufacture or assembly of the Product before the end of the Warranty Period and Aussie Traveller finds the Product to be defective in materials or workmanship, Aussie Traveller will, in its sole discretion, either:

- a. replace, repair or refund the Product or the defective part of the Product free of charge; or
- b. cause the Product or the defective part of the Product to be replaced or repaired by a qualified repairer free of charge.

In arranging Warranty inspection, service and repair, Aussie Traveller will seek to provide the details of an approved service agent within your geographic area. Should one not be available, or if the Product is in use in travel, Aussie Traveller reserves the right to seek to arrange a repair or replacement at the next available location on the route of travel.

Aussie Traveller reserves the right to replace defective parts of the Product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Products presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the Product.

Aussie Traveller Awning Products

This Warranty covers specified defects in materials or workmanship for Awning Products as follows:

1. The vinyl fabric is warranted against:
 - a. holes caused by mildew (mildew will form on dust and dirt and stain fabric if fabric is not kept clean).
 - b. excessive cracking, peeling, hardening or loss of strength while used under normal conditions.
 - c. excessive fading (a slight colour change may occur due to ultraviolet rays).
2. All hardware components including the roller are warranted not to bend or break under normal use (excluding high winds, water pooling and accidents).

Making a Warranty Claim

If a defect covered by this Warranty appears, the Customer must first contact Aussie Traveller within 7 days of first becoming aware of the defect. Aussie Traveller will assist the Customer to rectify and resolve any Product issue that may arise.

When making a claim under this Warranty, Aussie Traveller requires that the following information be provided before any further action will be taken.

1. Original Invoice (Document or Number);
2. Make and model of the Product;
3. Make and model of the vehicle (if Product fitted);
4. Vehicle build date (if Product fitted);
5. Vehicle chassis number;
6. Description of damage and/or repair required;
7. Photos of the damage and/or repair; and
8. Appropriate documentation (such as historical and maintenance records).

Aussie Traveller reserves the right to request more information or images should what is provided not be sufficient to make an assessment for the Warranty claim.

The Product must be made available to Aussie Traveller or its authorised repair agent for inspection and testing. If such inspection and testing find no defect in the Product, the final retail customer must pay Aussie Traveller's usual costs of service work and testing.

The final retail customer must bear the cost of the transport of the Product to and from Aussie Traveller or the authorised repair agent, and all insurance of the Product.

Exclusions

This Warranty will not apply where:

- the Product has been repaired, altered or modified by someone other than Aussie Traveller, or without the written consent of Aussie Traveller or an authorised repair agent;
- the alleged defect in the Product is within acceptable industry tolerances and variances;
- Aussie Traveller cannot establish any fault in the Product after testing and inspection;
- the Product has been used other than for the purpose for which it was designed;
- the alleged defect in the Product has arisen due to the final retail customer's failure to properly use and maintain the Product in accordance with any of Aussie Traveller's instructions, recommendations and specifications (including applicable maintenance schedules);
- the alleged defect in the Product has arisen due to the final retail customer's request to customise the Product;
- the Product has been subject to abnormal conditions, including environment, temperature, high or excessive wind, water, fire, humidity, pressure, stress or similar;
- the alleged defect has arisen due to abuse, misuse, neglect or accident;
- unauthorised parts or accessories have been used on or in relation to the Product;
- the Product has been overloaded or involved in an accident;
- the alleged damage or defect has been caused by normal wear and tear;
- the alleged damage to fabric has been caused by storm, wind or rain, or stretching of fabric caused by water pooling on fabric;
- breakage or bending of hardware components has been caused by storm, wind or rain, or water pooling on fabric.

Replacement Warranty Item

If, under Warranty, a Product is replaced or repaired by Aussie Traveller or an Aussie Traveller agent, unless provided in writing to indicate otherwise, the replacement Product will carry the **remaining** Warranty terms and conditions, including length of time, of the original purchased Product.

Change of Mind

Aussie Traveller understands that at times, final retail customers may change their mind. Choose carefully as return and credit requests for items purchased by mistake or "change of mind" reasons may not be approved. Aussie Traveller will not accept Product returns under these circumstances unless by written approval by an authorized Aussie Traveller representative. If approved, an administration and restocking fee may apply.

Limitations

Aussie Traveller makes no express warranties or representations other than set out in this Warranty.

The repair or replacement of the Product or part of the Product is the absolute limit of Aussie Traveller's liability under this express Warranty.

Contact

Australia Wide: 1300 663 868

Melbourne Office

235 Barry Road
Campbellfield, Melbourne, 3061
Ph: +61 3 9357 6565
enquiries@aussietraveller.com.au

Brisbane Head Office, Factory & Showroom

11-15 Oasis Court
Clontarf, Brisbane, 4019
Ph: +61 7 3284 3284
enquiries@aussietraveller.com.au

To receive a copy of the Aussie Traveller Warranty Terms & Conditions or information regarding specific Aussie Traveller products, please contact Aussie Traveller Head Office on (07) 3284 3284 or email enquiries@aussietraveller.com.au.