


# weber Smoque

## ASSEMBLY GUIDE










**8655837**



04/02/25  
AU/NZ

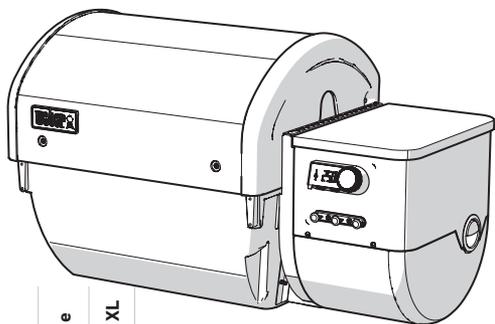

Weber Smoque	Weber Smoque XL	
1	1	
1	1	
0	1	
1	1	
2	2	
1	1	
1	1	

Weber Smoque	Weber Smoque XL	
1	1	
1	1	
1	1	
2	2	
2	2	
1	1	
1	1	
1	1	
1	1	
2	2	

     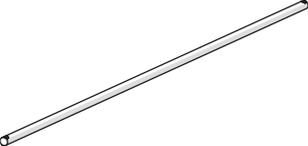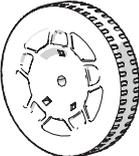
Weber Smoque	Weber Smoque XL	
1	1	
1	1	
1	1	
1	1	
1	1	
1	1	
1	1	
1	1	
2	2	

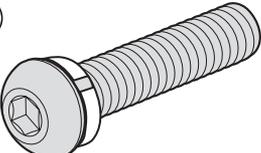 Weber Smoque	Weber Smoque XL	
2	2	
1	1	
2	2	<b>C</b> 
4	4	<b>D</b> 
2	2	<b>E</b> 
24	24	<b>B</b> 
4	4	<b>G</b> 
1	1	<b>H</b> 


**TOOLS INCLUDED:**



 **TOOLS REQUIRED:**




- EN**
- ⚠ Two people required for assembly.
  - ⚠ Assemble barbecue on a flat, level, and soft surface.
  - ⚠ Do not use power tools for assembly.
  - ⚠ Always keep the lid closed while assembling or moving the barbecue unless otherwise instructed.
  - ⚠ Make sure all parts are assembled and all hardware is tightened before operating your barbecue.
  - ⚠ Remove all packaging materials and protective film before operating your barbecue.
  - ⚠ Keep all packaging to prevent damaging the barbecue during assembly.

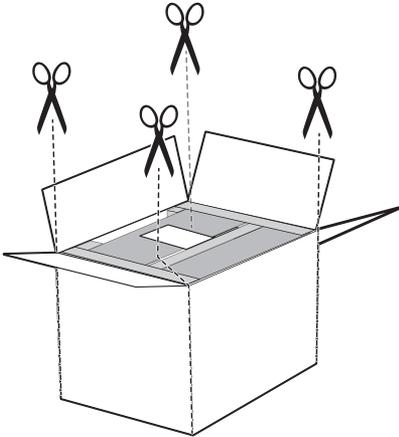

**1**

**Note:** Two people are required for this assembly step.


⚠ Remove enough packages from the cookbox to remove the lid, then remove all remaining packages from the cookbox.

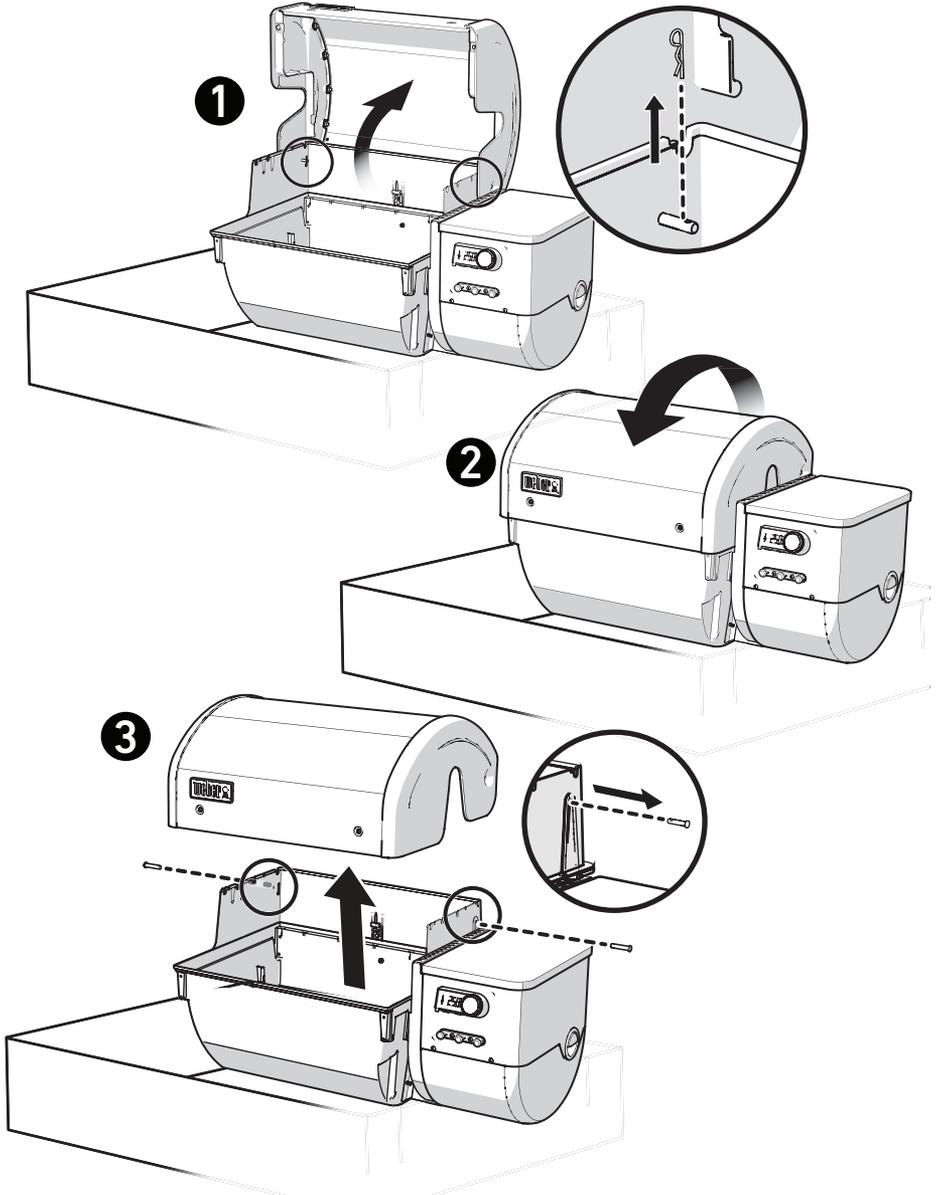


**2**

**Note:** Two people are required for this assembly step.

△ Use packaging to protect the barbecue from damage during assembly.


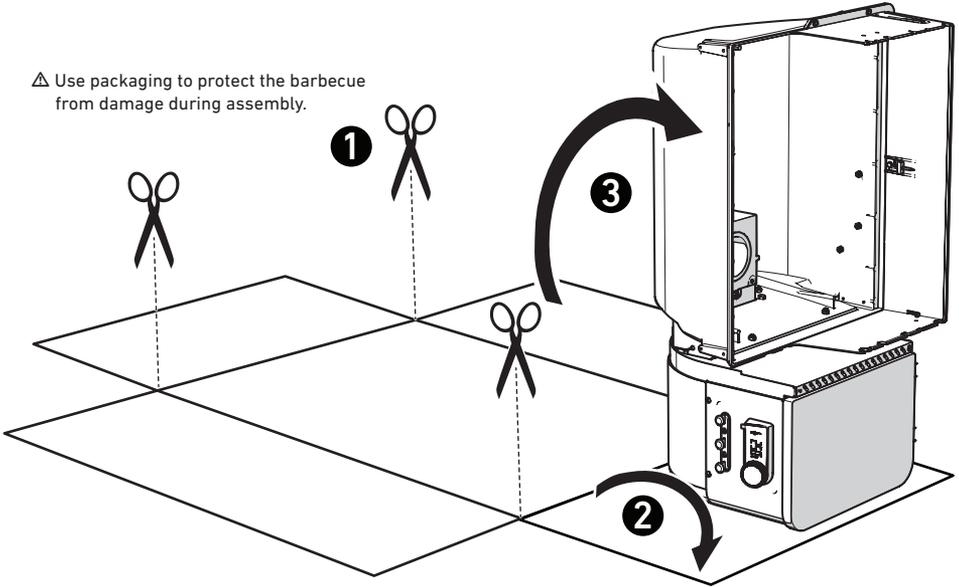
**3**

**Note:** Two people are required for this assembly step.

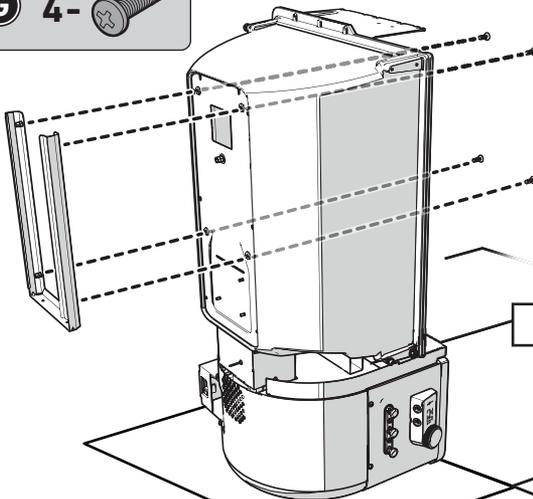

**FULLY** tighten screws.

 4

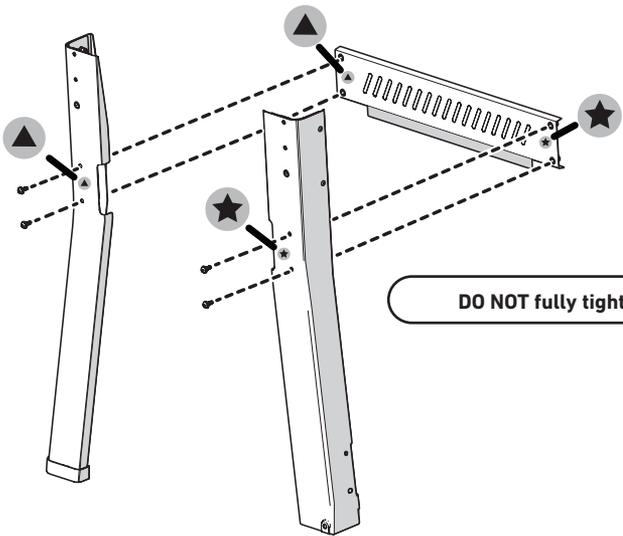

DO NOT fully tighten screws.

5




Note: Two people are required for this assembly step.



FULLY tighten screws.


△ Use packaging to protect the barbecue from damage during assembly.

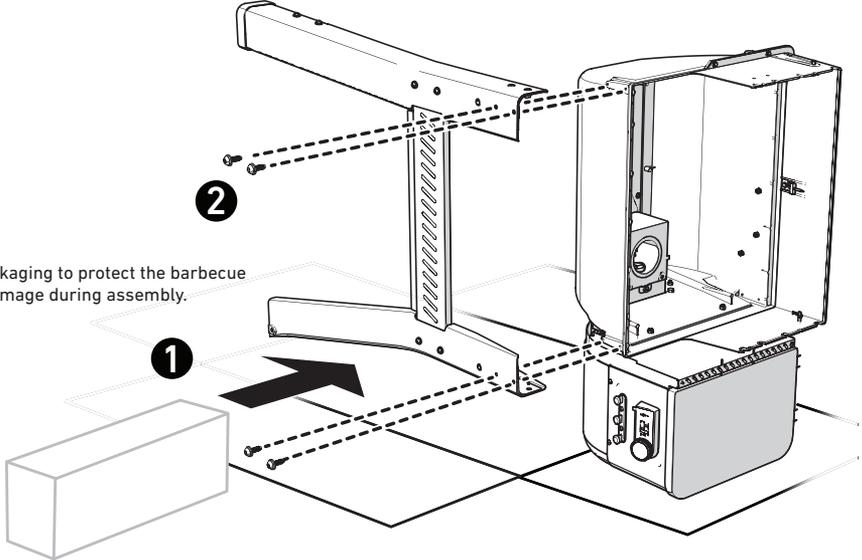

6

B 2- 


DO NOT fully tighten screws.

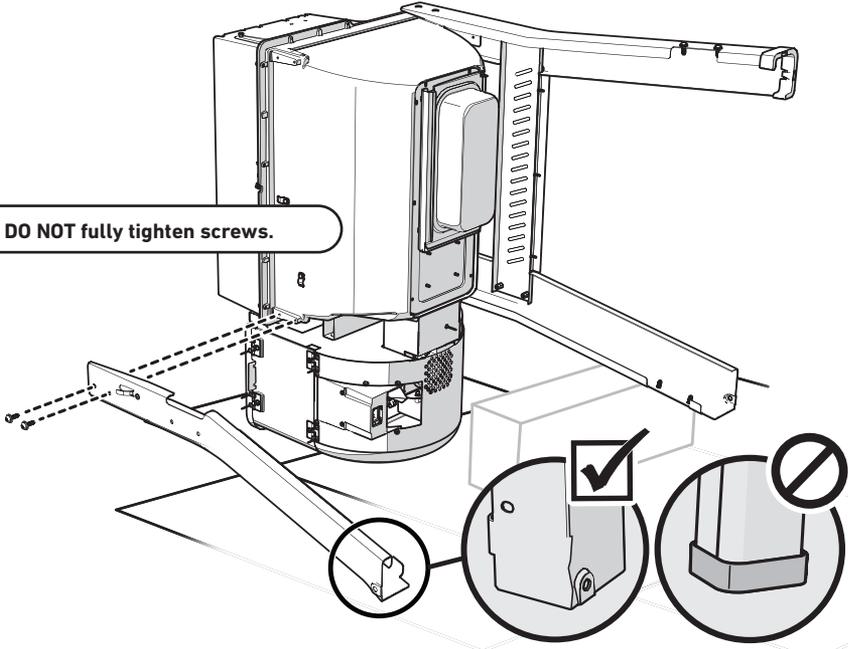

7


B 2- 

DO NOT fully tighten screws.

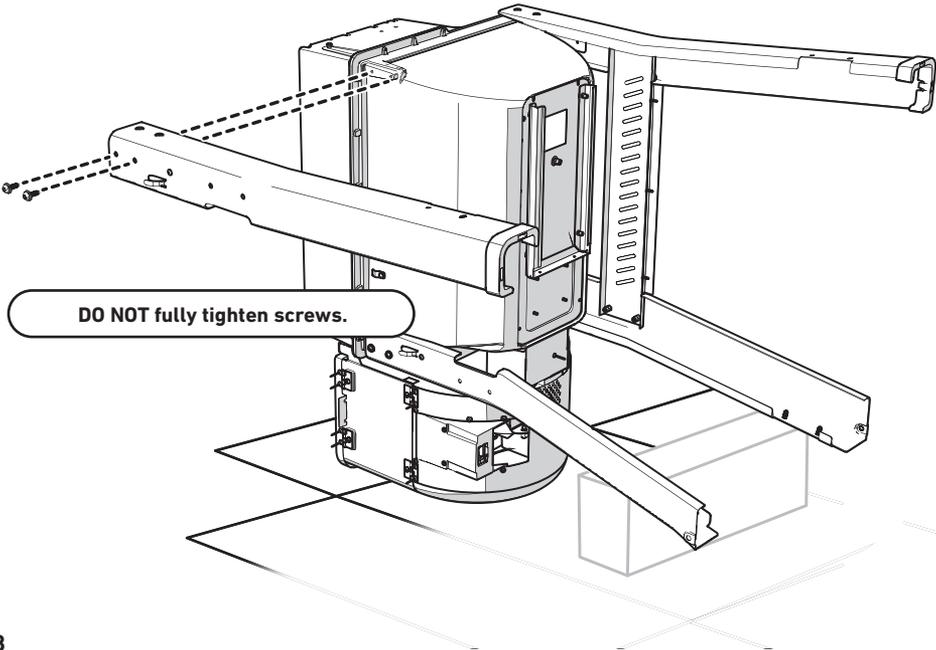


8



B 4- 

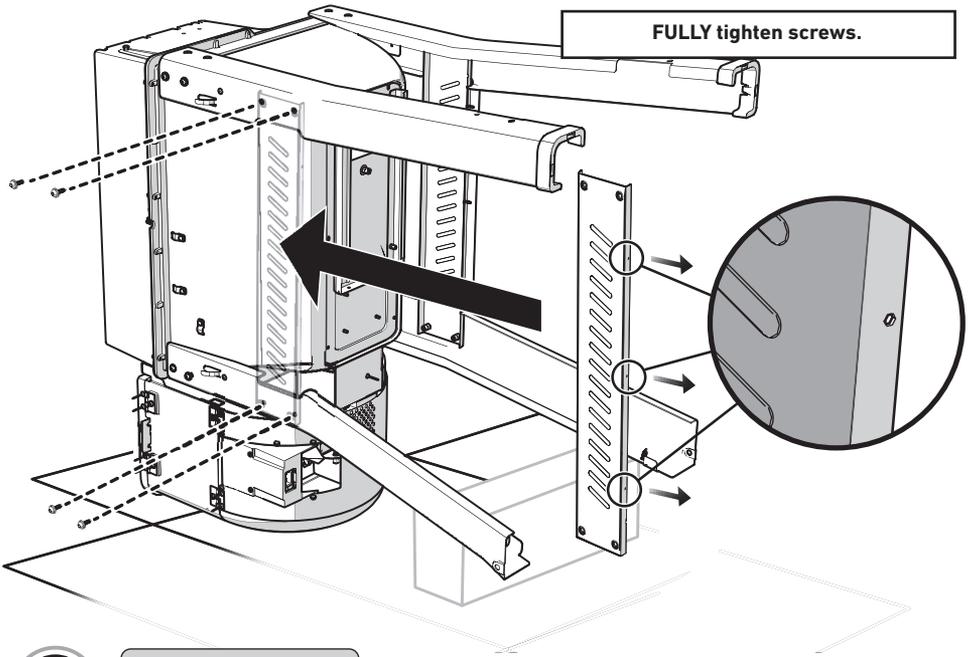

9


B 4- 

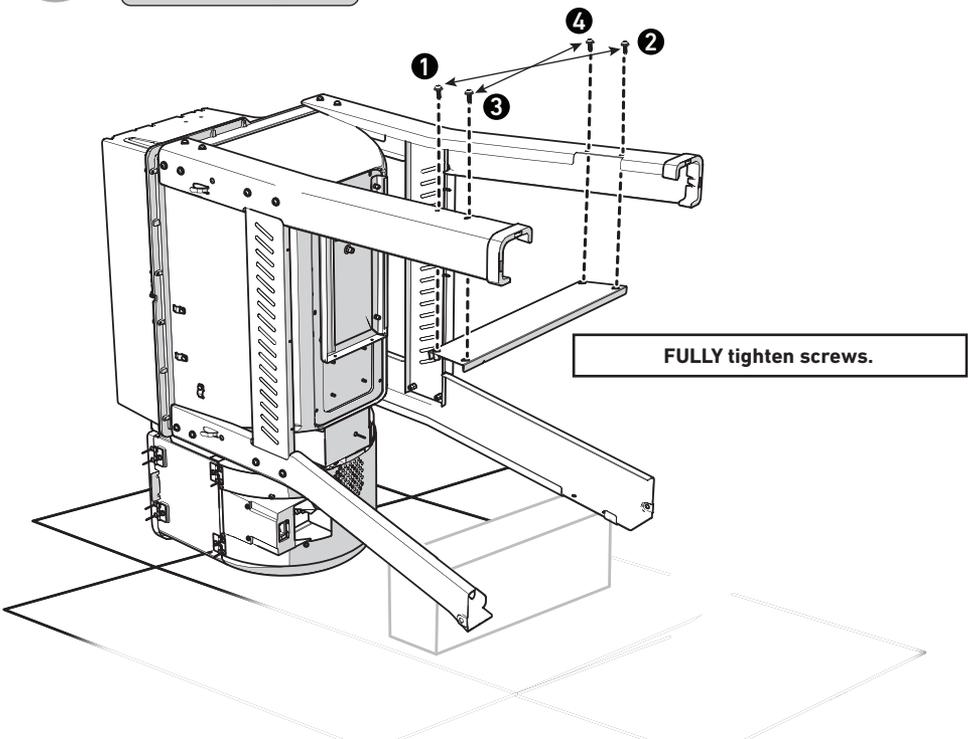

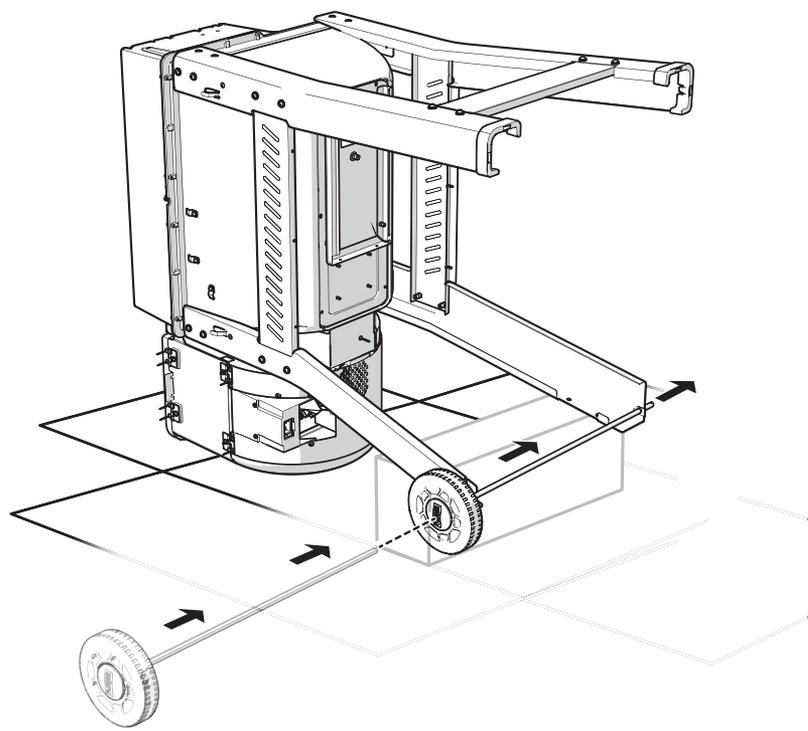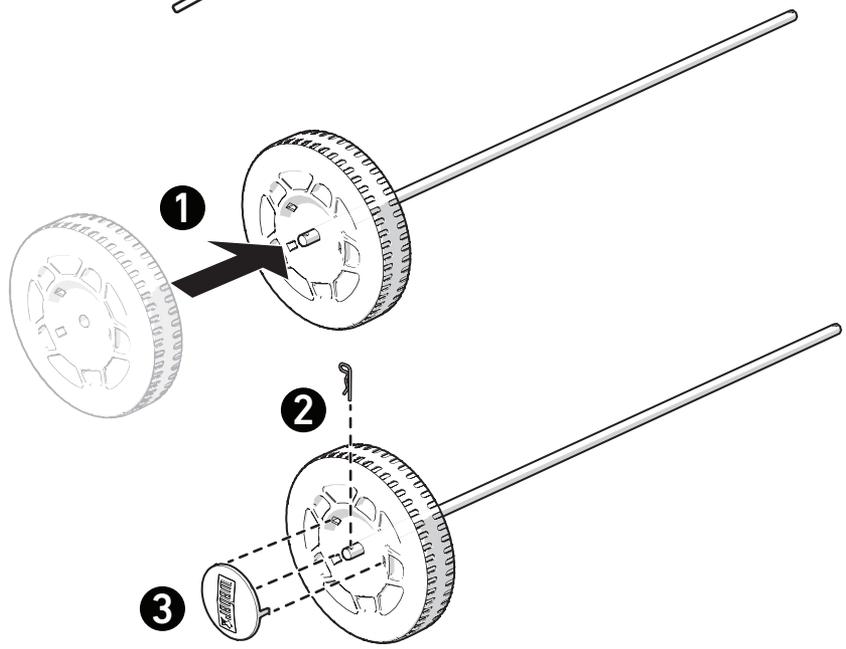



11

C 1- 

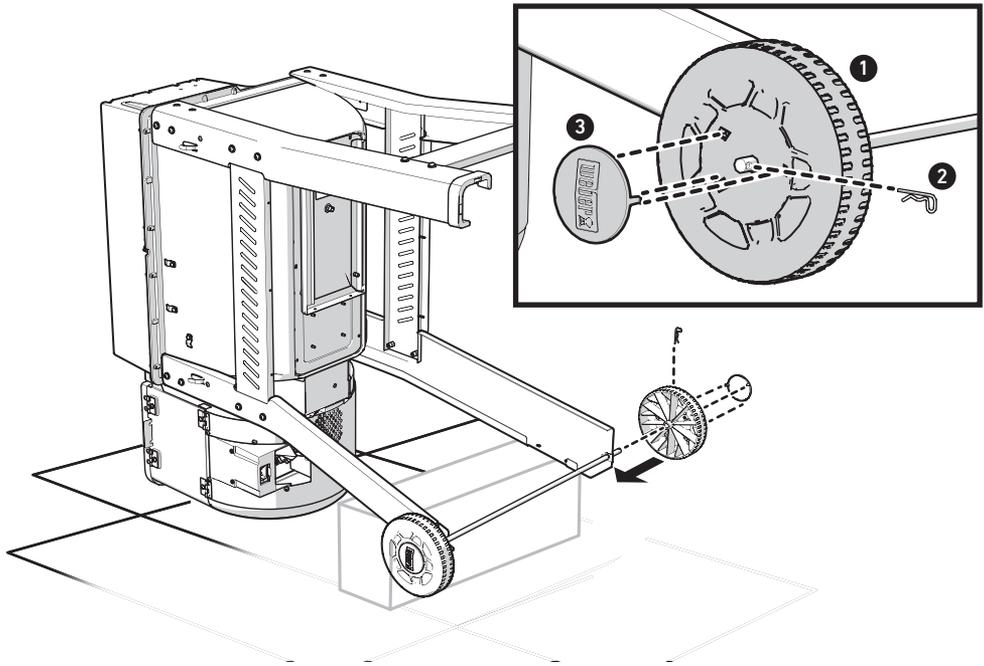

12

 D 4- 

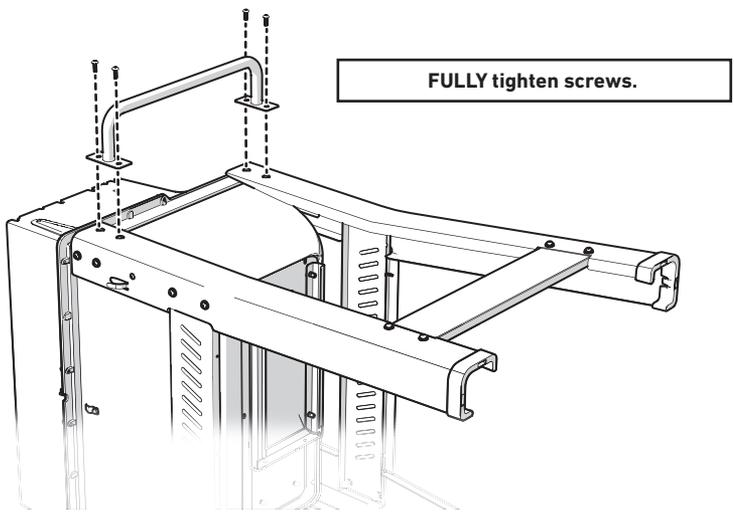


13




**Note:** Two people are required for this assembly step.

**DO NOT** fully tighten  
all screws prior to lifting  
the barbecue upright.

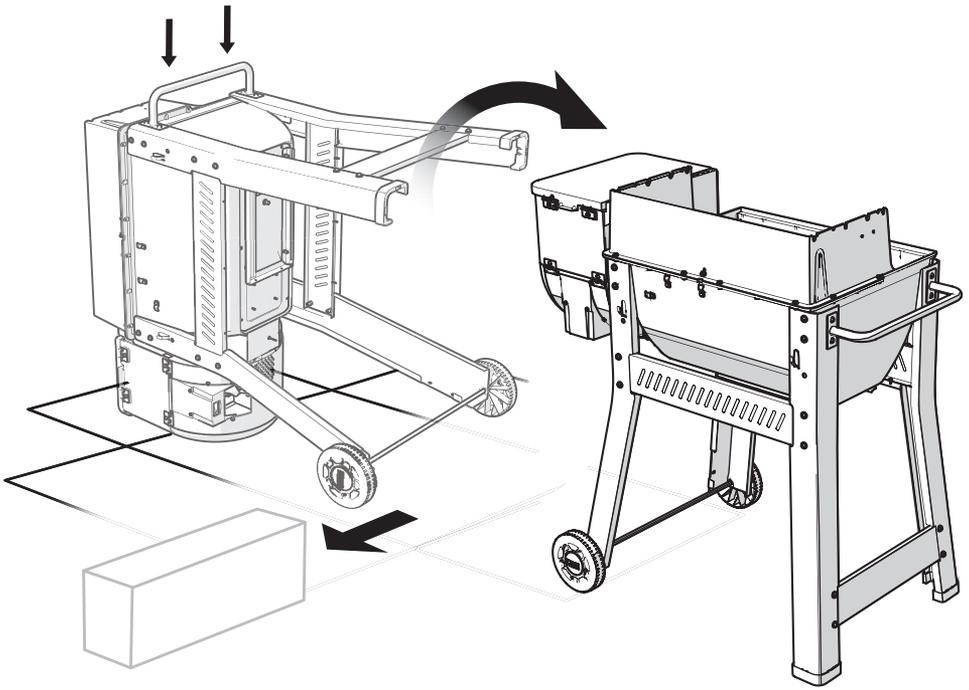


**14****B****4-**

When the barbecue is upright,  
install the final cross-bracket and  
tighten the screws half way.

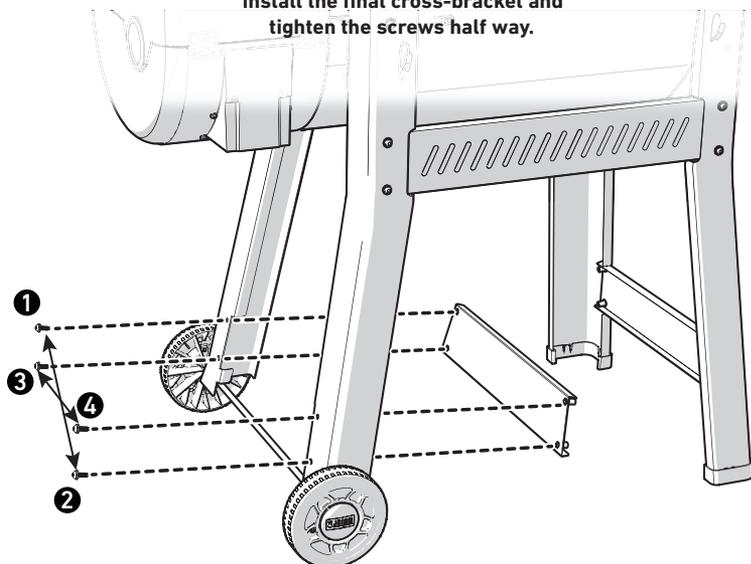
**15**

Once all 4 cross-bracket screws  
are installed half way, **FULLY** tighten  
those and **ALL** screws around the legs  
of the barbecue.



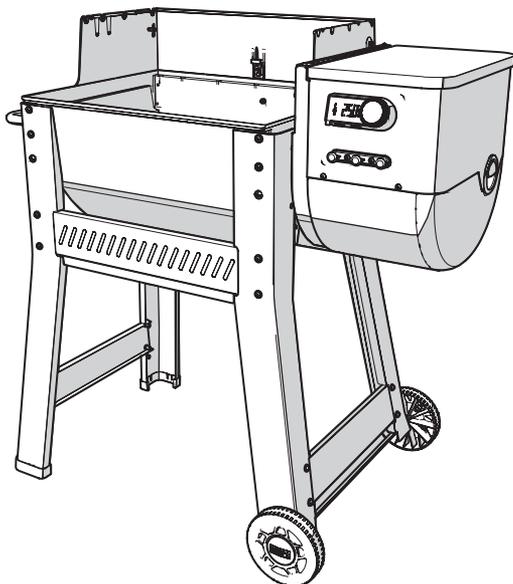


16




H 1-

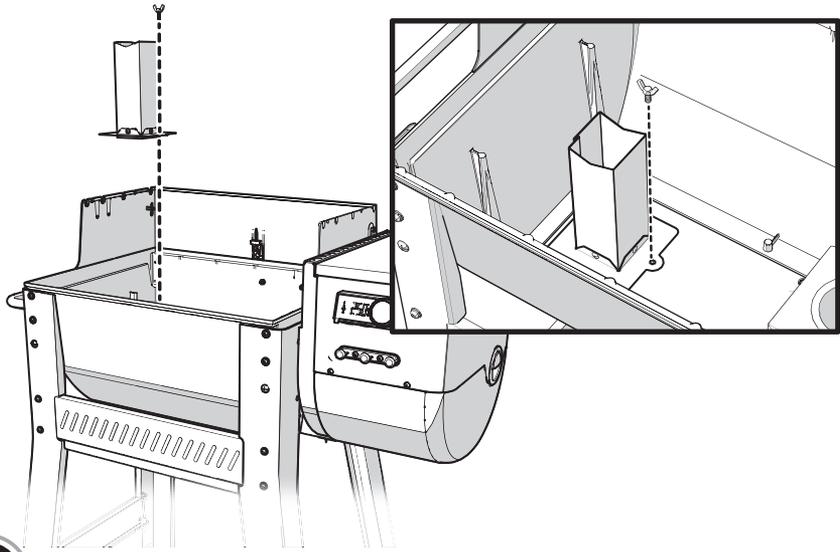



17

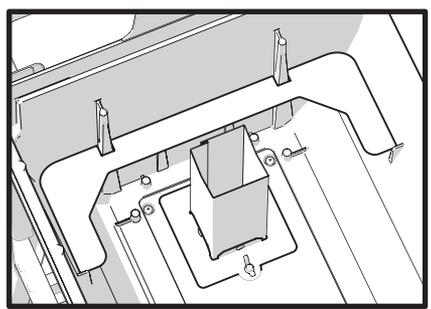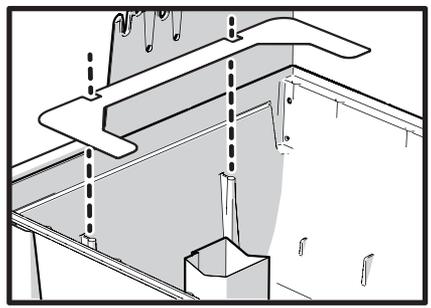
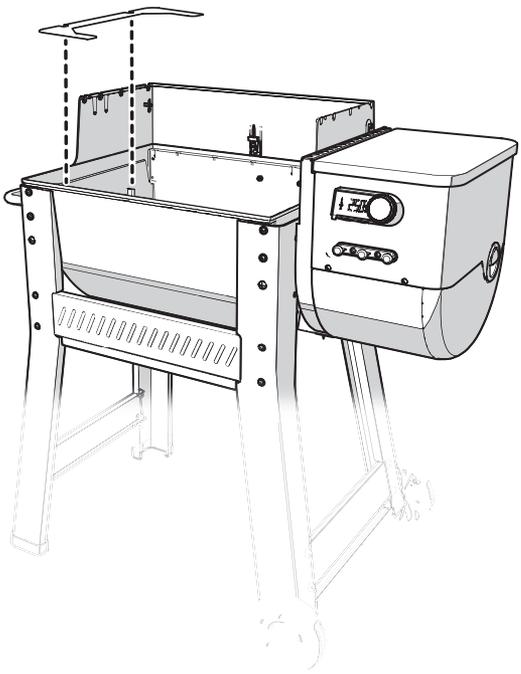


18

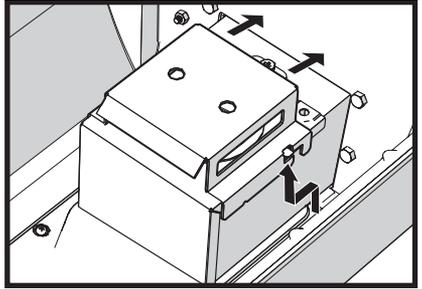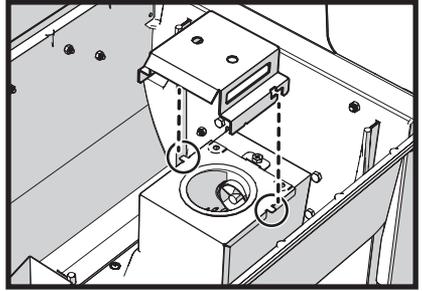
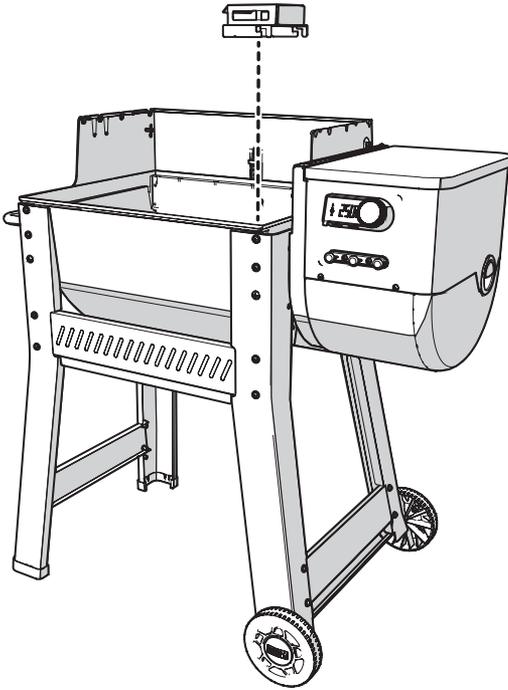


19

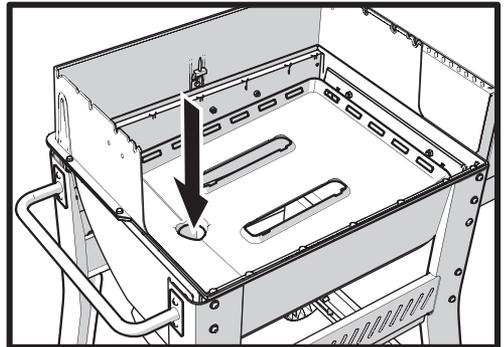
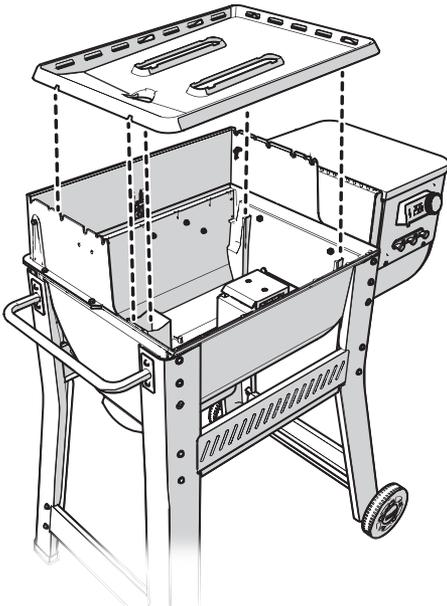


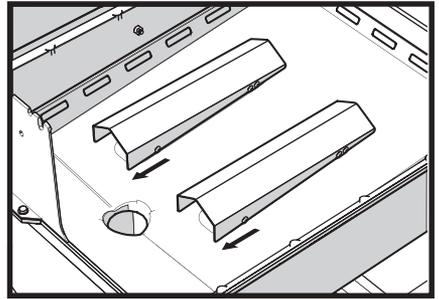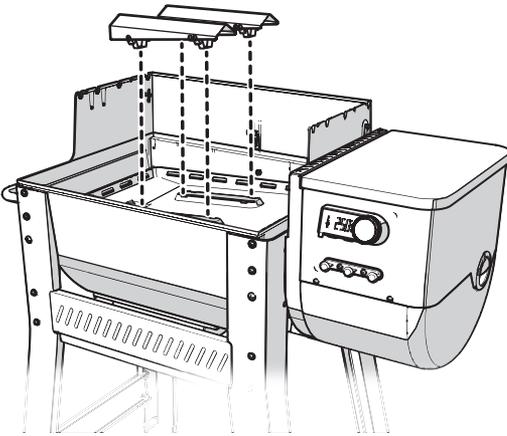

**Note:** Two people are required for this assembly step.

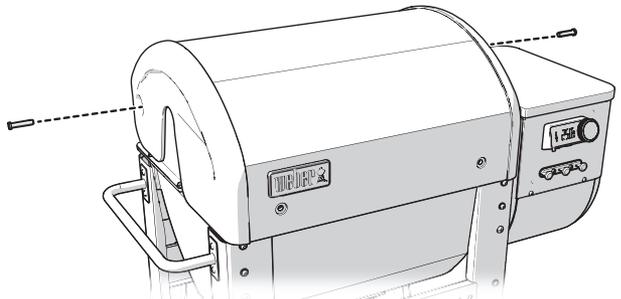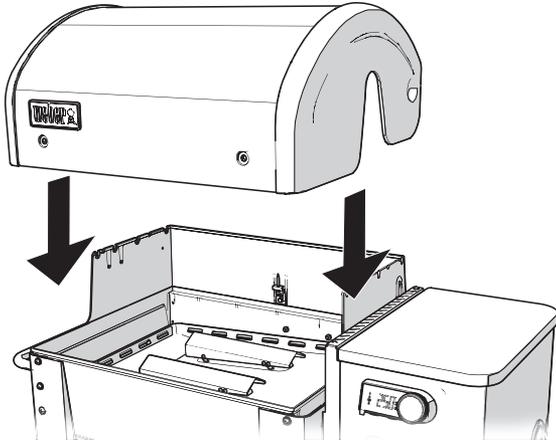


22

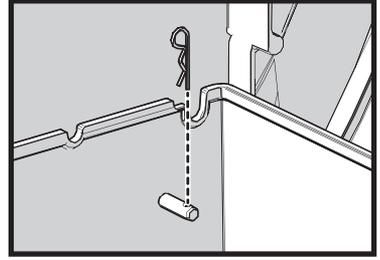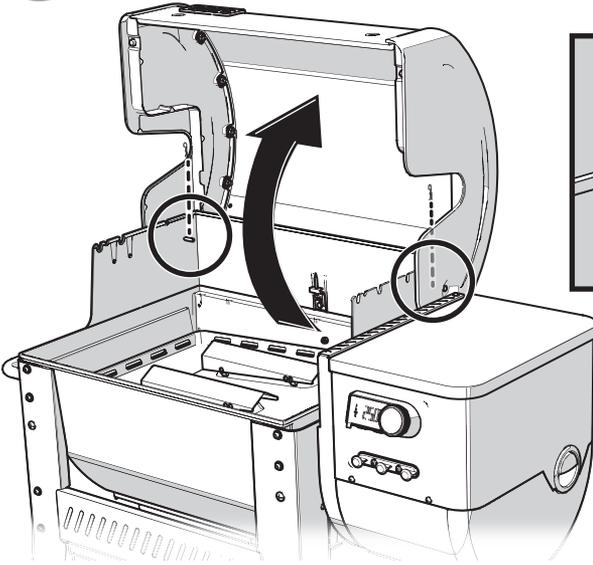

23



E

 2-




F

2-


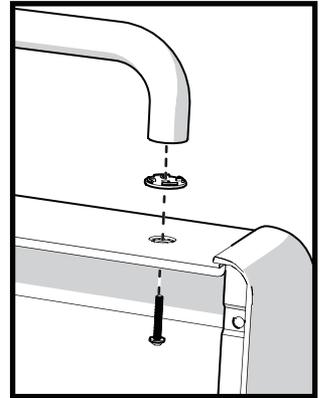
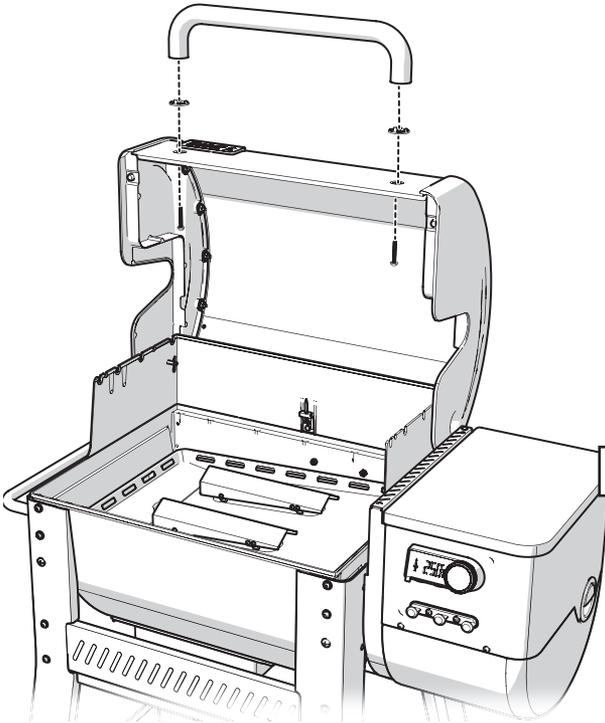


FULLY tighten screws.



24

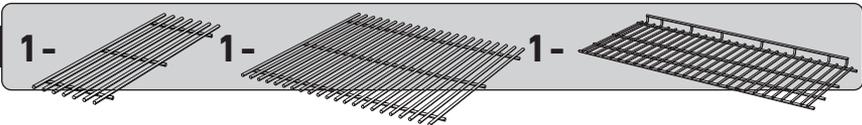


# WEBER SMOQUE

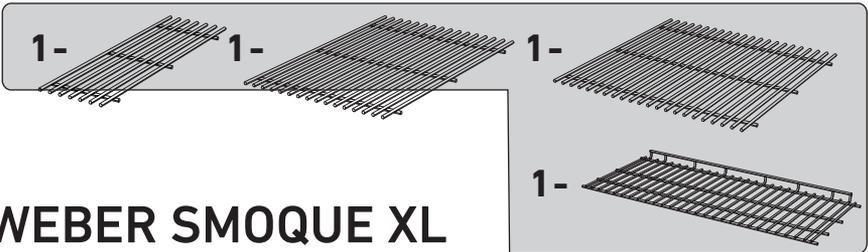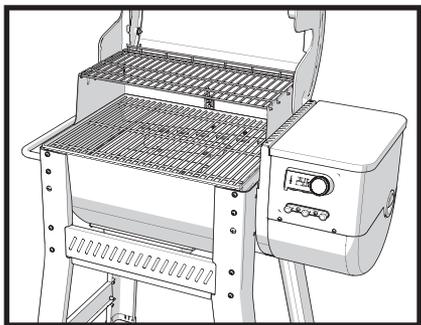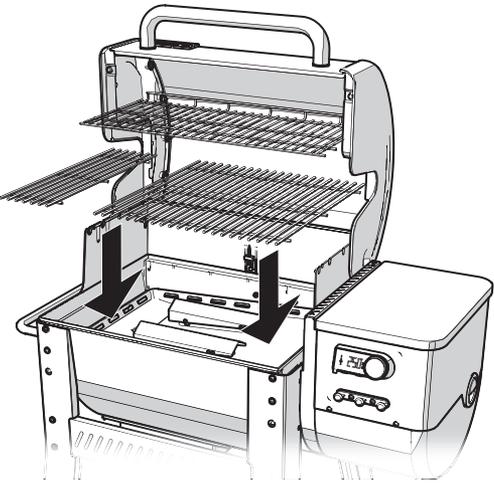


# WEBER SMOQUE XL

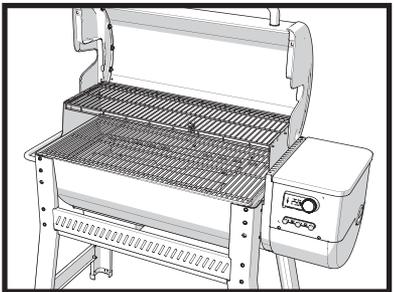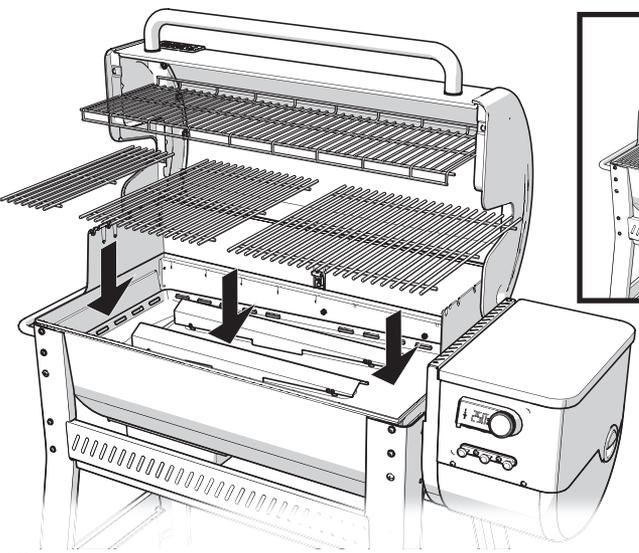


25

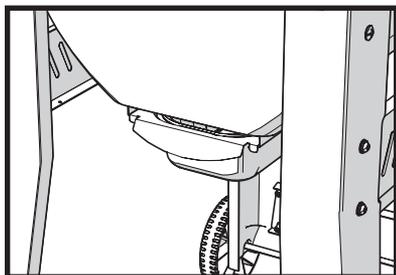

26

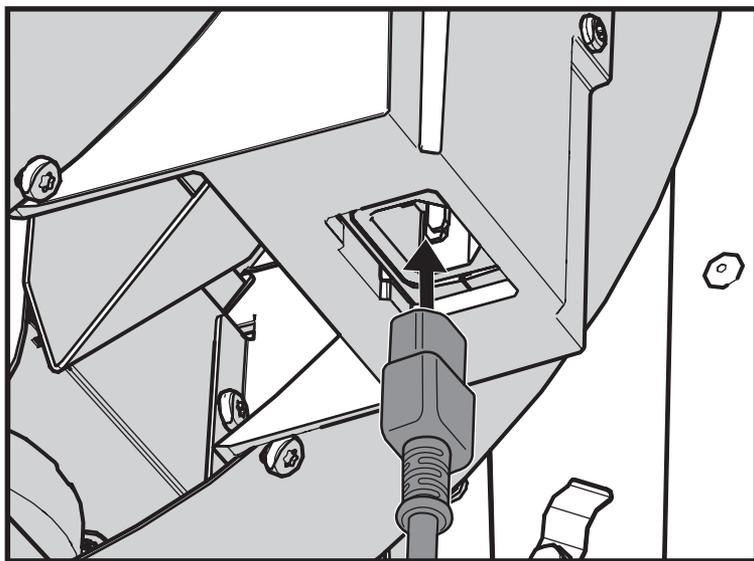

27

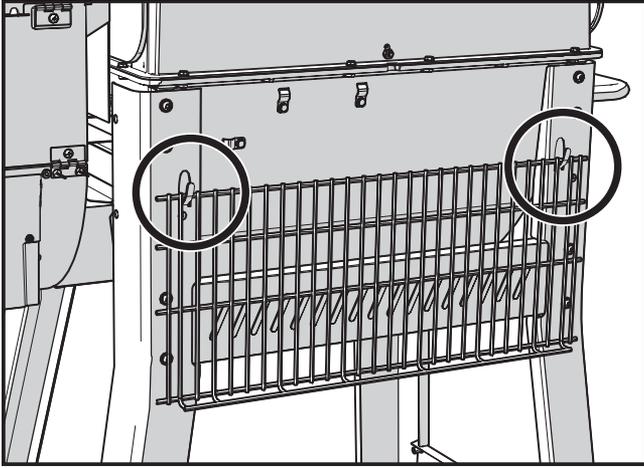

28

- Make sure all parts are assembled and all hardware is tightened before operating your barbecue.



Scan the QR code to download the WEBER CONNECT app.

To fully activate and update your new WEBER CONNECT digital LCD controller, it is important to first download the WEBER CONNECT app.

**Download, connect and register to receive:**

- Flip and Serve Notifications
- Food Readiness Countdowns
- Custom Food Doneness Alerts
- Step-by-step Barbecuing Assistance







WEBER-STEPHEN PRODUCTS LLC  
[www.weber.com](http://www.weber.com)

© 2025 Designed and engineered by Weber-Stephen Products LLC,  
1415 S. Roselle Road, Palatine, Illinois 60067 USA.