

COMPANION[®]

TRUSTED SINCE 1941

AEROBREEZE LUMOS FAN

20CM FAN



INSTRUCTION MANUAL

Model No. 10001916

COMPANION[®]

AEROBREEZE LUMOS FAN | OWNERS MANUAL

IMPORTANT

- Please read this instruction manual carefully before operating the unit.
- To maximise battery life, it is recommended to fully charge the battery every three months.


SAFETY INFORMATION

- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
- Children must be supervised at all times when around this unit.
- Place unit in a well ventilated area when in use or recharging the battery.
- Do not attempt to disassemble or replace the batteries.
- To be repaired by qualified persons only - contact Customer Service on 1300 362 921.
- Do not expose to heat source, rain or submerge in liquid.
- If charging cords become damaged, they must be replaced by a qualified person.
- Do not damage the USB cable, forcefully bend it, pull it, twist it, or use it if frayed or broken.
- Do not use the USB cable if dust has collected or the Type-C connection is loose.
- Do not use with anything other than the dedicated USB cable.
- Do not use near fire or in high-temperature areas.
- If the unit is damaged, stop use immediately and contact Customer Service on 1300 362 921.
- Ensure the cable is fully inserted and not loose.
- Use only the included USB cable for charging.
- This product is for household use only. Do not use for commercial purposes.
- Do not use in places where it may come in contact with water and avoid exposure to rain.
- Do not use if the product is cracked, deformed, or damaged.
- Do not bring face or hair close to the fan outlet or air intake.
- Do not use near materials that easily get sucked in (e.g. curtains, thin cloth, etc).
- Do not drop or subject the unit to strong impact.
- When unplugging the USB cable, always hold the connector - do not pull on the cord.
- Use and store the product in a location with temperature between -10°C and 40°C.

COMPANION[®]

AEROBREEZE LUMOS FAN | OWNERS MANUAL

UNDERSTANDING THE APPLIANCE

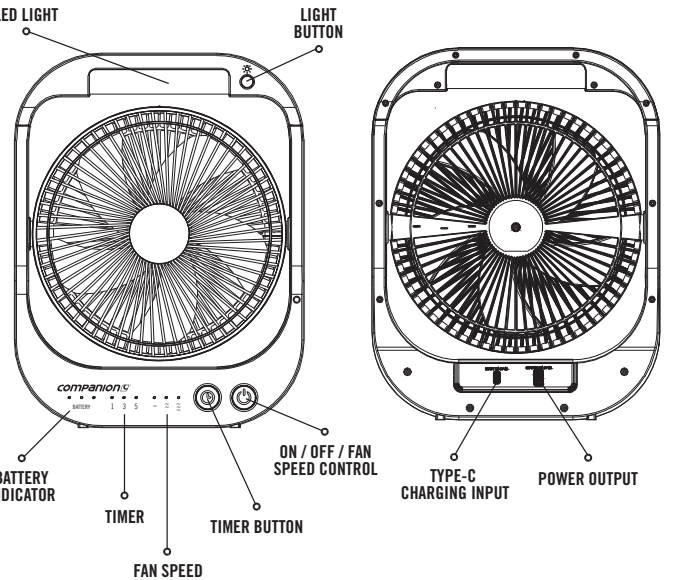

TO CHARGE

- Step 1.** Connect the USB cable (included) to the fan's Type-C port, and the other end to a USB port on an AC adapter (not included) or a power source.
- Step 2.** The battery level indicator light will flash during charging.
- Step 3.** Once completely charged, the light will stay on.



NOTE: To fast charge the fan, a 5V/2A adapter needs to be used. If a 2A device is not used, then charging time will be longer than stated.

COMPANION[®]

AEROBREEZE LUMOS FAN | OWNERS MANUAL

FAN OPERATION

- Step 1.** Press the **POWER** button to turn the fan on.
- Step 2.** Press the **POWER** button repeatedly to cycle through the four air flow speed settings. The fan speed will increase with each press of the **POWER** button.
- Press 1 (1 light) - Low
 - Press 2 (2 lights) - Medium
 - Press 3 (3 lights) - High
 - Press 4 (3 lights) - Max
- Step 3.** Press the **POWER** button until all fan speed indicator lights turn off. The fan will stop once all indicator lights are off.

- Press 1 (1 light) - Low
- Press 2 (2 lights) - Medium
- Press 3 (3 lights) - High
- Press 4 (3 lights) - Max

SETTING THE TIMER

- A timer can be set to automatically stop the fan after **1 hour / 3 hours / 5 hours**.
- Step 1.** Press the **POWER** button to turn the fan on to the required air flow setting.
- Step 2.** To set the timer, press the **TIMER** button to select the required timer setting. When the timer is active, the corresponding LED lights up.
- Step 3.** To cancel the timer, press the **TIMER** button until all the timer LEDs are off.

NOTE: If timer is not set, the fan will run continuously.

LIGHT OPERATION

- Step 1.** Press the **LIGHT** button to turn on the light.
- Step 2.** Press the **LIGHT** button repeatedly to cycle through low light and high light modes.
- Step 3.** Press the **LIGHT** button again to turn off the light.



CLEANING INSTRUCTIONS

- Step 1.** Ensure unit is switched off and disconnected from a power source before cleaning.
- Step 2.** Clean with a damp cloth only.
- Step 3.** DO NOT use any abrasive cleaners or harsh chemicals.
- Step 4.** Ensure all components are completely dry before storing the unit.

COMPANION[®]

AEROBREEZE LUMOS FAN | OWNERS MANUAL

MAINTENANCE

For further information or assistance please contact customer service on 1300 362 921 or email: info@adventureoperations.com

TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
Fan does not turn on	Battery is low or not charged	Charge the unit with the included USB cable
Blades are spinning, but no wind	Dust or debris has accumulated around the fan or motor	Clean the fan thoroughly
Fan stops during use	Battery is drained	Recharge the battery fully
Fan won't run while charging	Battery is too low	Wait about 30 seconds after connecting the power, then try turning it on
Unusual noise during operation	Debris is caught in the fan	Turn off the unit and remove the debris safely

SPECIFICATIONS

Part No.	10001916
Size	20cm
Dimensions	23L x 6.3W x 30D (cm)
Weight	850g
Runtime (fan only)	72hrs (low) / 24hrs (medium) / 12hrs (high) / 6hrs (max)
Runtime (light only)	45hrs (low) / 13hrs (high)
Runtime (fan / light)	13hrs (low) / 10hrs (medium) / 7hrs (high) / 5hrs (max)
Fan Timer	1hr / 3hr / 5hr
Battery	1000mAh Lithium battery
Input	5V 2A
Output	5V 2A
Charge Time	Approx. 6 hrs (based on 2A)
Material	ABS Plastic
Operating Temperature	-10°C to 40°C
Pack Contents	1 x Aerobreeze Lumos Fan 1 x USB Charging cable 1 x Instruction Manual

COMPANION[®]

AEROBREEZE LUMOS FAN | OWNERS MANUAL

WARRANTY POLICY

- Products distributed by Adventure Operations Australia Pty Ltd and any of our subsidiaries come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if products fail to be of acceptable quality and the failure does not amount to a major failure.
- In addition, we warrant that this product will be free from defects in materials and workmanship under normal use as described in the published product documentation for **1 year** from the date of original purchase (Limited Warranty). This Limited Warranty is only valid and enforceable in Australia and will apply only if you have purchased the product from us or our authorised resellers.
- To the extent permitted by the Australian Consumer Law and any applicable local law:
 - our obligations under this Limited Warranty are limited to the repair, replacement or refund of covered parts that prove defective under normal use during the Limited Warranty and does not extend to any claim for damages that you or any other person may have for any loss (including without limitation consequential damages or loss of profit, freight/shipping or travel costs), or damage howsoever caused whether or not such loss or damage arises as a result of any defect in the product or from the failure or omission on our part to comply with any obligation at law;
 - in replacing a defective product under the Limited Warranty, we may, at its discretion, substitute a model of equivalent nature where the exact model is unavailable;
 - this Limited Warranty does not apply to damage caused by failure and damage caused by improper use and abuse, fair wear and tear, accidents, misuse (including failure to follow instructions regarding care and maintenance of the product), neglect, disassembly, alterations or external causes such as, but not limited to, water damage, exposure to sharp objects, exposure to excessive force, anomalies in the electrical current supplied to the product (if applicable), and extreme thermal or environmental conditions;
 - we may elect, at our discretion and as an alternative to repairing or replacing a defective part to refund the cost of the relevant product upon it being returned to us; and
 - this Limited Warranty does not extend to any products acquired for the purposes of re-supply, or for use in a manufacturing, or repair processes.
- This warranty may be claimed by:
returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase;
- If you have any questions concerning this warranty policy, you may contact us in writing:
Adventure Operations, 71 Charles Ulm Place, Eagle Farm, 4009 QLD, or by email:
warranty@adventureoperations.com or visit our website: www.adventureoperations.com

TO THE EXTENT PERMITTED BY LAW, ADVENTURE OPERATIONS AUSTRALIA PTY LTD, ITS SUBSIDIARIES AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY SIMILAR STANDARD IMPOSED BY APPLICABLE LEGISLATION AND ADVENTURE OPERATIONS AUSTRALIA PTY LTD

WARRANTY - For details see www.companionoutdoor.com
Companion[®] is a registered trademark of **Adventure Trading Australia Pty Ltd**
Designed by: **Adventure Trading Australia Pty Ltd**
71 Charles Ulm Place, Eagle Farm, QLD 4009 AUSTRALIA
Made in China

