

T050801840_Sew In Instruction Manual

Stitched in label

Location: Sewn into the internal seam of storage bag

FRONT

2 Colour Print:



Black

10mm
Stitch

210mm

RAPID NIGHTGLO 6P INSTANT TENT T050801840

DARCHE[®]
OUTDOOR GEAR

IMPORTANT

Before setting up for the first time read the instructions carefully.

WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS STRUCTURE AT ALL TIMES.

BE AWARE OF POTENTIAL PINCH POINTS DURING ASSEMBLY AND PACK DOWN.

ENSURE ALL GUY AND PEG POINTS ARE PEGGED DOWN. IN WINDY CONDITIONS ATTACH ALL WALLS IN THE FRONT FLY SECTION.

FLYSHEET INCLUDES 95% BLACK OUT COATING. BE AWARE PIN LIGHT MAY OCCUR WHICH IS COMPLETELY NORMAL.

CONTENTS

- 1 x Inner tent with LED light and instant frame
- 1 x Flysheets with 2x LED lights and 3x Walls
- 25 x Steel pegs in peg bag
- 2 x Awning poles
- 1 x Front room pole set in bag
- 8 x Awning guy ropes
- 1 x Gear loft
- 1 x Expandable Storage Bag

BEFORE SET UP

Open tent in a cleared location.

Never unpack on asphalt or concrete to avoid material abrasion.

Never use tent in extremely strong winds.

Tent must be pegged down at all guy points to prevent property damage and personal injury.


This tent requires 2 people for assembly and pack down.

To minimise condensation inside the tent, ensure adequate ventilation through opening windows and doors to allow airflow.

TENT SET UP


UNPACK

Locate level ground to lay out the tent. Unpack from bag and remove the straps.

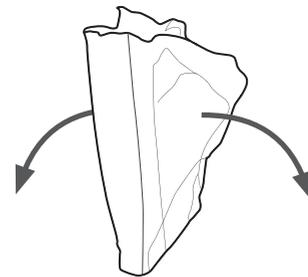

UNFOLD

Make sure all 4 x corner joints are covered before unfolding.

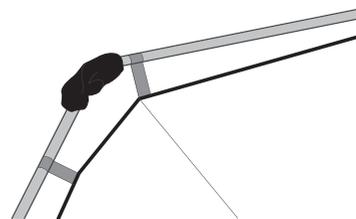


Unfold each of the leg poles outwards as shown.



Arrange the tent into the desired position. The front of the tent has the black PE flooring section that folds out.


INNER TENT SET UP

Support and lift the roof poles above the arm joint while holding down leg pole to enable the central hub assembly to lift up into place.

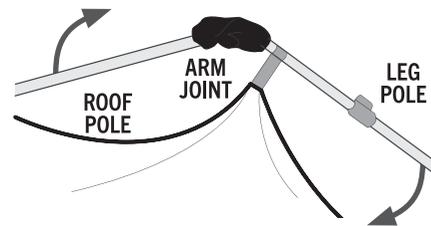

LEG POLE SET UP

Extend each leg telescopic pole until clicking into place then extend the tent legs out.

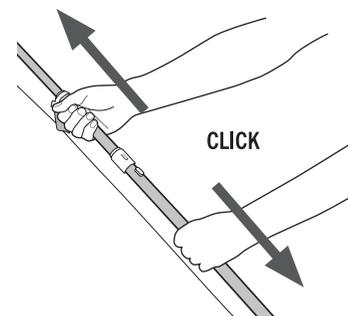


ASSEMBLE FRONT FRAME


Locate the front room pole set in pole bag, and unfold into position.



Extend the centre ridge pole and attach the hook into the main frame hub.

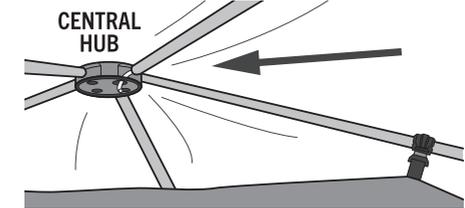


Extend the leg poles then clip the base buckles to secure.

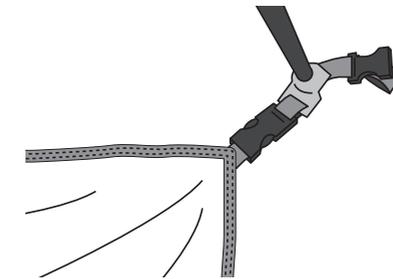

SECURE FLY TO THE FRAME

Locate the front of the flysheet with zipped walls. Position the flysheet over the entire frame and secure each of the base clips from the fly to the adjoining buckles on the inner tent and frame.

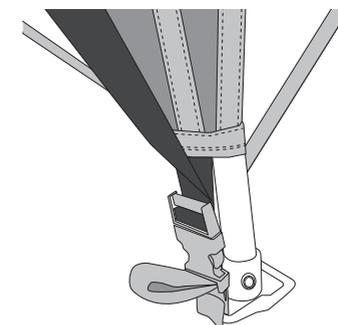

DARCHE.COM.AU

297mm

T050801840_Sew In Instruction Manual

Stitched in label

Location: Sewn into the internal seam of storage bag

BACK

2 Colour Print:



Black

10mm
Stitch


210mm

RAPID NIGHTGLO 6P INSTANT TENT T050801840

DARCHE[®]
OUTDOOR GEAR

PEG DOWN TENT

Peg out the base peg points to secure. Unroll and extend guy ropes extending to their full length and peg down. Tighten guy ropes by adjusting the slider.

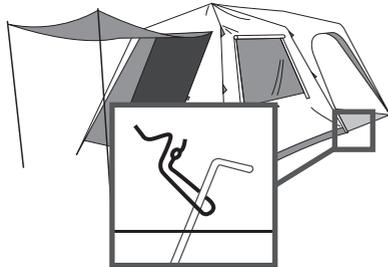

ASSEMBLE AWNING


An awning located at the rear of the tent can be suspended using the additional awning poles and guy ropes in the pole bag.



Dismantle awning during extreme weather conditions.

GEAR LOFT

The gear loft can be suspended from the ceiling of the inner tent.

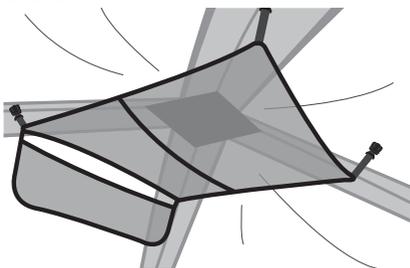

LED LIGHTS

The integrated Inner Tent LED Light includes 3 settings. To activate, plug USB cord into an external power bank (not included) and store in the wall pocket. Toggle light settings through the power button pocket, located on the interior tent wall to activate.

To activate integrated Shelter Lights, plug the USB cord into an external power bank (not included) and leave in the shelter wall pocket(s). One side comes with a longer cable to enable both lights to run through the same power bank if desired. Run the longer cable behind the top corner frame to secure. Toggle On / Off through the power button, located on the shelter walls pocket to activate.

TENT PACK DOWN

UNPEG & DISASSEMBLE AWNING

Remove the pegs and roll up the guy ropes. Disassemble the awning and awning poles then re-zip the awning to the fly.

REMOVE GEAR LOFT

Unhook and remove gear loft from inner tent.

REMOVE FLY


Release all internal fasteners then unclip the base buckles holding the fly to frame. Remove the fly.

REMOVE FRONT FRAME

Unhook the centre ridge pole from the main frame hub then push release button to retract the centre roof pole. Unclip the base buckles then release and retract front leg poles.


COLLAPSE INNER TENT LEG POLES

Push the release buttons to retract each leg telescopic pole.

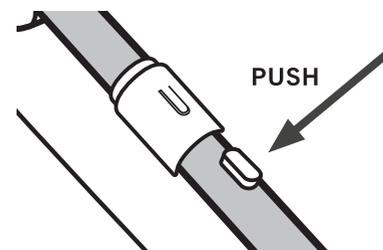


COLLAPSE MAIN FRAME

Pivot leg poles outwards to collapse the tent to ground level.

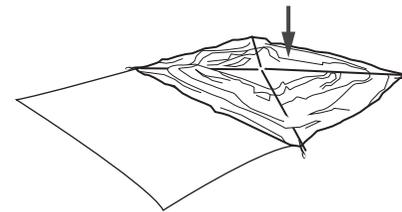


FOLD UP FRAME

Fold each frame sections inwards towards the central hub.

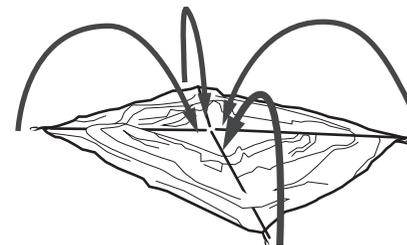


GATHER FRAME

Gather the four frame sections to an upright and central position for packing.

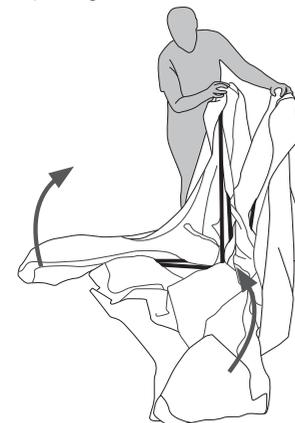

ROLL TENT

Lay tent down and gather by rolling firmly then secure with the straps.

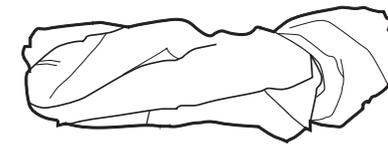

TENT STORAGE

- Pack tent and pegs back into the storage bag.
- Ensure tent is completely dry before storing away.

CARE INSTRUCTIONS

- Do not machine wash
- Spot clean and hand wash canopy only
- Do not clean with soap, detergent, petrol, oil or solvents
- Do not iron
- Do not dry clean
- Lay on a flat surface to dry
- Ensure structure is fully dry before storing

DARCHE: LEADERS IN OUTDOOR DESIGN, PROUDLY AUSTRALIAN.

Designed and tested in Australia for Australian conditions

A brand by Charles Parsons.

Telephone: 1300 367 695

Email: info@darche.com.au

75 Heyington Avenue

Thomastown VIC 3074, Australia

V1 - AUG 2025

DARCHE.COM.AU

297mm