




ASH CATCHER REPLACEMENT INSTRUCTIONS

⚠ **WARNING: GENUINE WEBER-STEPHEN REPLACEMENT PARTS MUST BE USED FOR ANY REPAIR OR REPLACEMENT. YOUR ACTIONS, IF YOU FAIL TO FOLLOW THIS PRODUCT WARNING, MAY CAUSE A STRUCTURAL FAILURE, OR FIRE RESULTING IN SERIOUS PERSONAL INJURY OR DAMAGE TO PROPERTY.**

(WILL VOID ALL WARRANTY PROTECTION)


⚠ **IMPORTANT NOTE: BEFORE PERFORMING ANY WORK MAKE SURE THE BARBECUE IS COLD AND ALL CHARCOAL RESIDUE IS REMOVED FROM THE KETTLE BOWL AREA.**

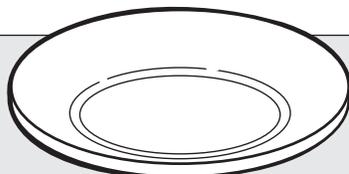

ASH CATCHER REPLACEMENT


1

ASH CATCHER REMOVAL

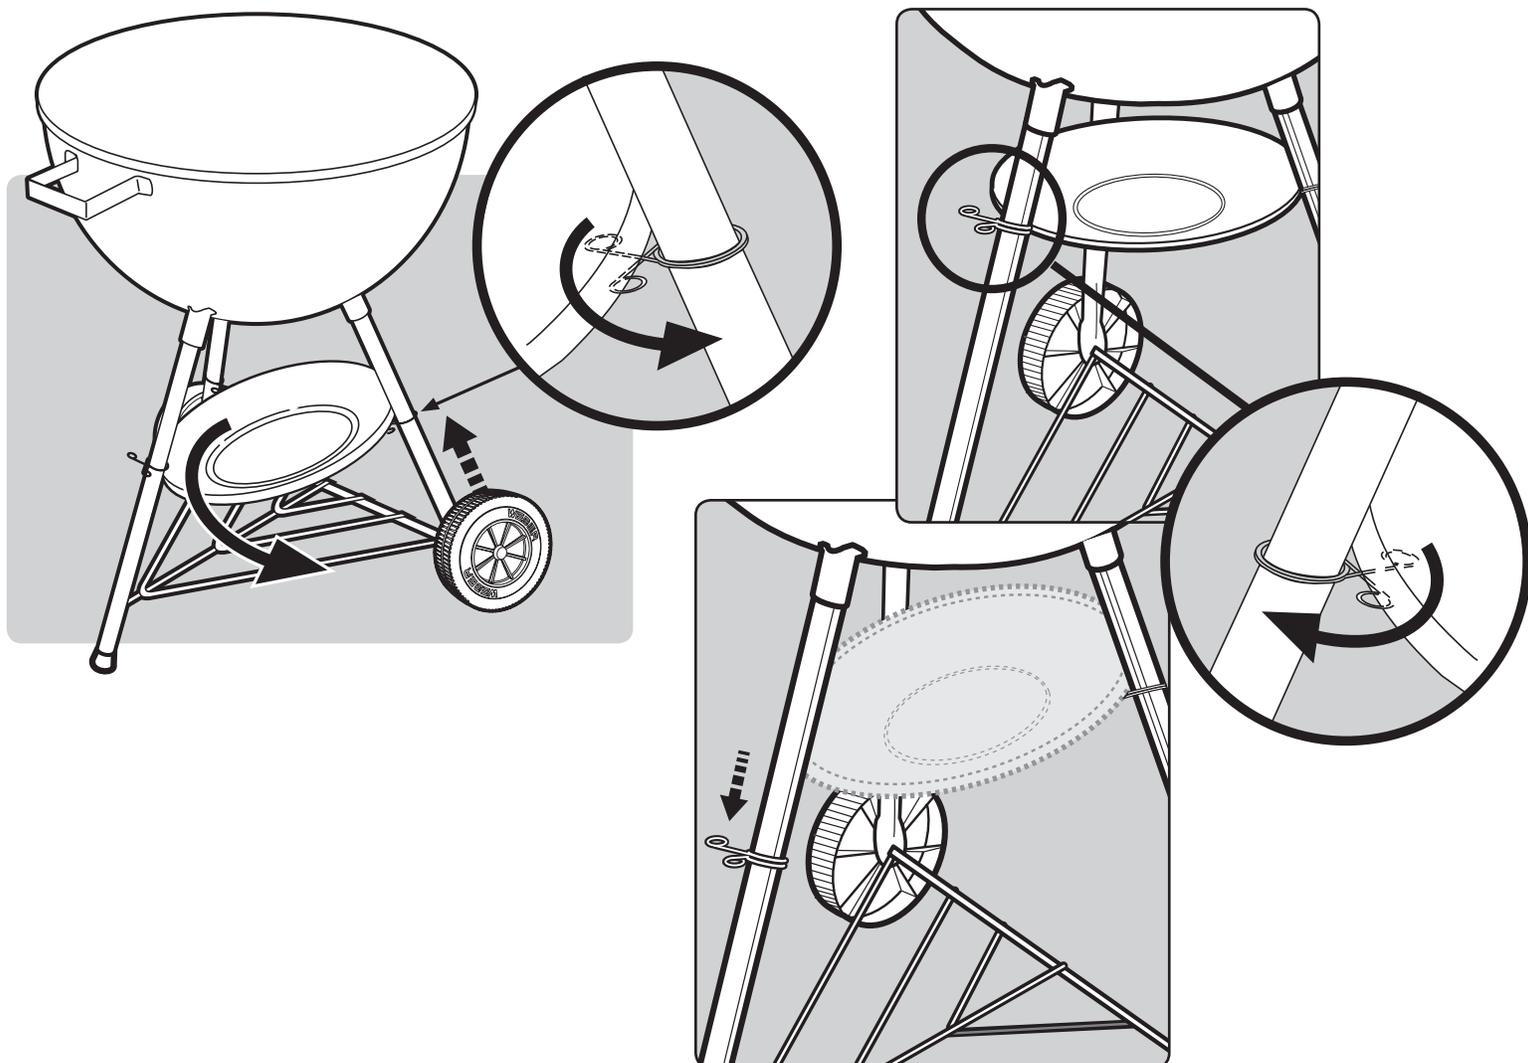

NOTE: The grills illustrated may have slight differences than the model purchased.

56176_KETTLE 01/06/12 **DE**

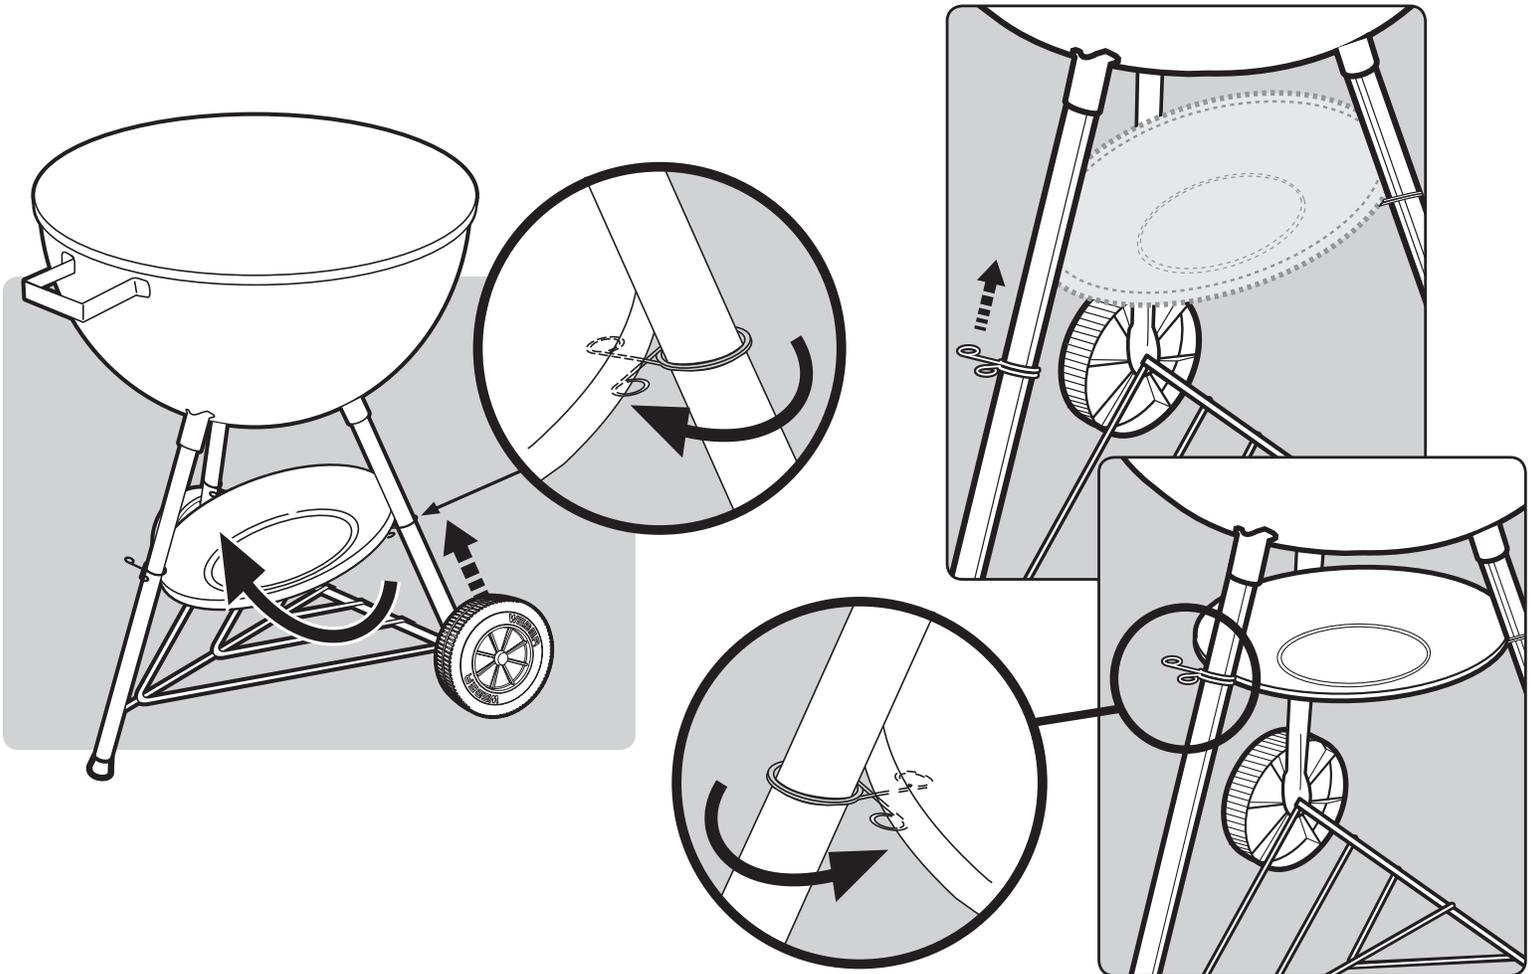

⚠ WARNING: Make sure that all parts are assembled and hardware is fully tightened before operating the charcoal grill. Your actions, if you fail to follow this Product Warning, may cause a fire, or structural failure resulting in serious personal injury or damage to property.



WEBER-STEPHEN PRODUCTS LLC
Customer Service Center
1890 Roselle Road, Suite 308
Schaumburg, IL 60195

1-800-446-1071 (USA ONLY)
www.weber.com®

Contact the Customer Service Representative in your area using the contact information on our website.