

# SINGLE ENSUITE

## ASSEMBLY INSTRUCTIONS

Carefully remove ensuite out of carry bag as spring frame can cause injury if opened suddenly. Unfold ensuite side to expose door way then open ensuite zip. Pull frame diagonally outward to form correct shape. Using smaller diameter roof support pole push one end into webbing pocket located in join between 2 walls take other end and push into webbing at diagonally opposite side. For other room, repeat roof support.


Take large diameter side tension pole push one end into webbing pocket at wall join and push other end into opposite webbing pocket. Repeat for 2 other side tension poles.

If using as shower ensuite there is a rear opening to bring in shower hose form external source or if using internal hose system there is hose location tabs on rear wall **DO NOT HANG SHOWER FROM ROOF** as maximum weight holding is 2.5kgs.


For added stability, peg all four corners down using pegs and guy ropes provided.

## PACK AWAY


Once un-pegged the shelter can be folded by pushing one corner diagonally to the rear (**step 1**). This is to make the shelter flat. Now fold the sides together as in (**step 2**) Fold shelter by bending top over to meet the bottom (**step 3**) as the top meets with the bottom of shelter begin to push side in towards middle (**step 4**) While continuing to push towards the middle take other side and push into middle (**step 5**) then as your hands meet push one side under the other and this will form the correct circular shape (**step 6**) Now the shelter can be placed in carry bag.

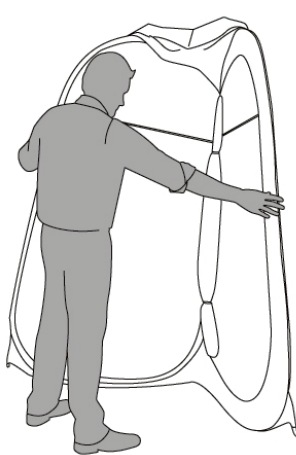

Step 1

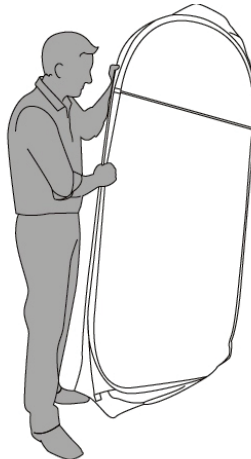


Step 2

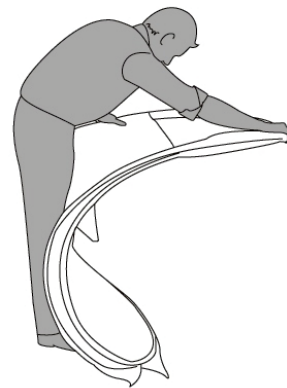

Step 3



Step 4

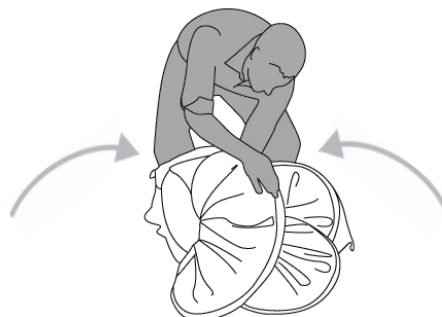

Step 5



Step 6

\* Note the frame of the shelter is designed to fold in a natural circular shape if at anytime there is resistance to folding stop and start the process again as forcing the frame to bend will damage the frame