



STEP 1:

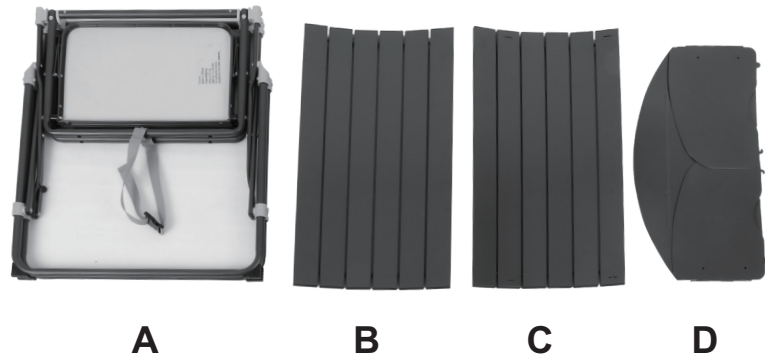

1. Open the carry bag and take the main frame (parts A, B, C and D) out of the bag.

STEP 2:

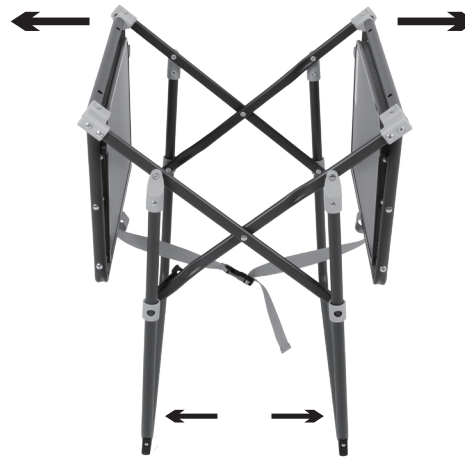

2. Unfold the part A slowly.

STEP 3:



3. Erect the side tables on either side of the frame.

STEP 4:



4. Open the side tables to horizontal position. Buckle the webbing between the two shelves so the webbing is pulled tight.

STEP 5:



5. Install part B and C on the frame as shown.

STEP 6:



6. Install the wind shield as shown.