
PLU: 692962 CODE: CZ004A-1 Manufactured and packaged for SRGS PTY LTD ABN 23 113 230 050 6 Coulthards Avenue, Strathpine, QLD 4500, Australia MADE IN CHINA

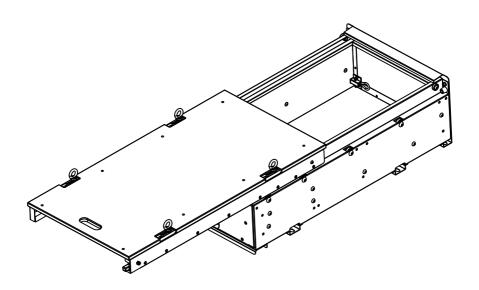

+ 4WD MODULAR DRAWER WITH FRIDGE SLIDE


Instruction Manual



+ 4WD MODULAR DRAWER WITH FRIDGE SLIDE -PLU 692962


+ Thank you for purchasing the XTM 4WD Modular Drawer With Fridge Slide. Before use, please ensure that the latches inside the drawer will stop on the bumpers inside the drawer casing.

Below is an image of the latches inside the drawer. The drawer tub can be removed by pulling these two latches together.

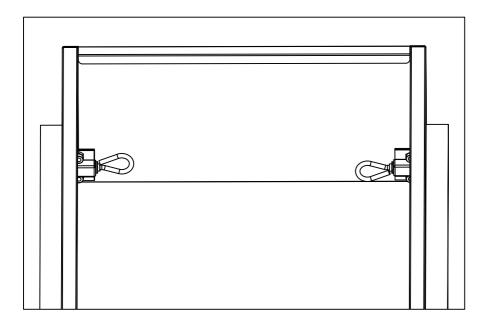

NOTE: The weight ratings for the drawer tub and fridge slide are 60kg each.

+ PART LIST

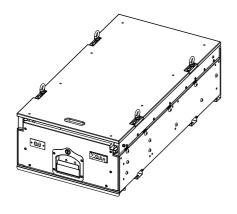

+ Drawer Specifications External Size: L880 x W470 x H265mm

Net Weight: 29.6kg Drawer Pull Out: 55cm



+ Mounting Kit 4 x M10 x 50mm Bolts 4 x M10 Washers 4 x M10 Nyloc nuts 4x M10 Spring washers



0


- + Tie Down Kit 4 x Tie down rings




- + Mounting Kit to suit connecting of two XTM drawer together 4 x M8 x12mm Bolts 4 x M8 Nuts 4 x M8 Nylon washers 4 x M8 Washers
- 0

+ LOCATING MOUNTING SPACE IN CAR


+ IMPORTANT: This drawer is designed to mount on a flat surface in the rear of car. Please carefully check the drawer size and make sure it will be able to be attached. For some vehicles, the configuration of the rear floor means a flat plywood board may be required to be added for secure and easy mounting.

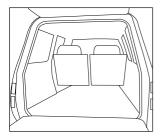


+ IMPORTANT
Before installing the drawer, please check the car owner's handbook or the rear base of your vehicle anchor point location. Choose a flat surface and appropriate position to install.

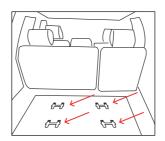


- + If anchor point available, use the chair anchor points to bolt the drawer onto your car.
- If anchor point not available, a flat plywood board with a minimum of 12mm thickness will be required to be added.

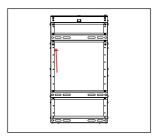

- + Check the size between the chair mounting points and compare with the mounting rail at the bottom of the drawer
- + Move mounting rail to desired position.

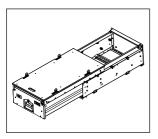

+ To access the bottom mounting rail, slide out the top panel and carefully pull out the drawer tub.

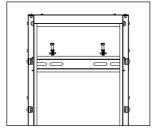


+ Secure the mounting rails with the M10 bolts, nuts and washer provided. Some vehicles may require longer or short bolts. Please check your owner's handbook or contact your local vehicle dealer if unable to locate.

WARNING


CHECK ANCHOR POINTS REGULARLY TO ENSURE DRAWER IS SECURELY ATTACHED. DO NOT ANCHOR CHILD RESTRAINTS TO THE DRAWER. IT IS NOT RECOMMENDED TO LEAVE ANY VALUABLES IN THE DRAWERS.


+ STACKABLE VERTICAL DRAWER OPTION

+ The universal design allows drawers to be stacked. Use the M8 bolts and washers/nuts provided and follow the steps below:

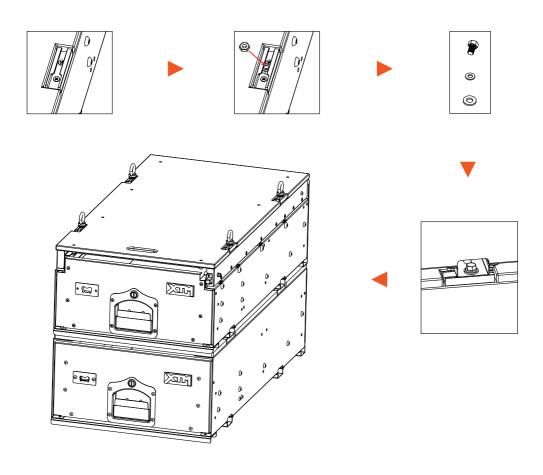

+ CONFIGURATIONS

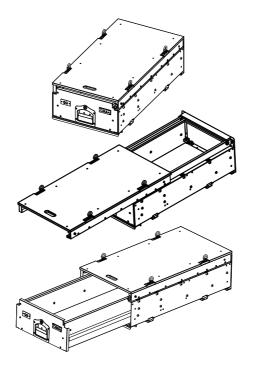

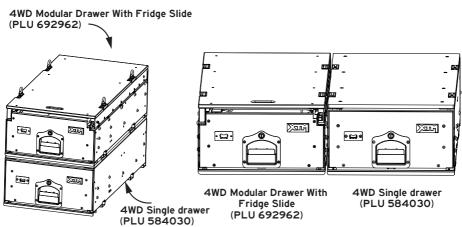

- + 4WD Single drawer sold separately (PLU 584030). + All drawers sold separately.