




+ 4WD UTE SINGLE DRAWER WITH SLIDE

Instruction Manual

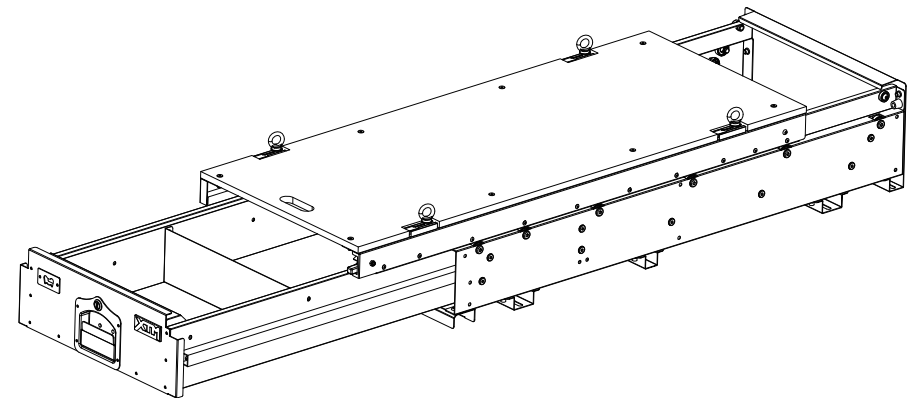


PLU: 705741
CODE: CZ003A1
Manufactured and packaged for
SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue
Strathpine QLD 4500, Australia
MADE IN CHINA

**+ 4WD UTE SINGLE DRAWER WITH SLIDE
PLU 705741**


+ Thank you for purchasing the XTM 4WD UTE Single Drawer With Slide.
Before use, please ensure that the latches inside the drawer on the
bumpers inside the drawer casing.

Below is an image of the latches inside the drawer. The drawer tub can
be removed by pulling these two latches together.

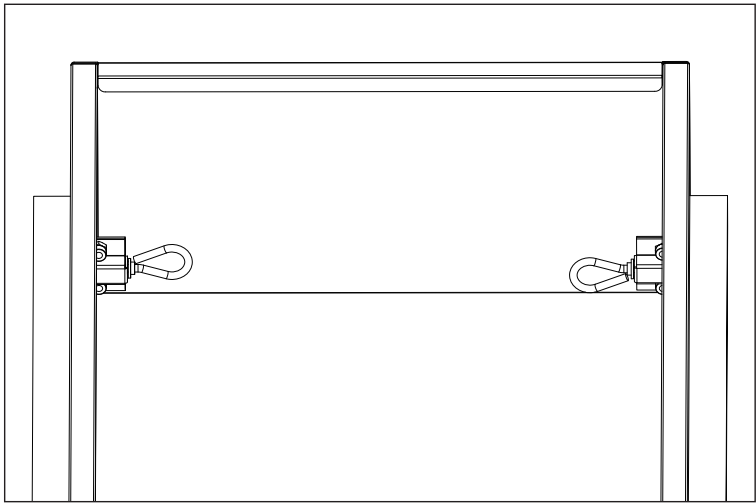


NOTE: The weight ratings for the drawer are 60kgs on tub and 80kgs
on slide top.

+ Part List

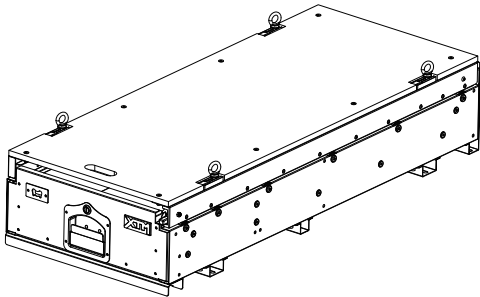

+ Drawer Specifications

External Size: L120 x W50 x H24.5cm
Net Weight: 38.8kgs
Drawer Pull Out: 81cm

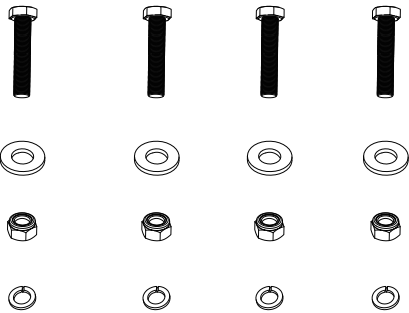


+ Mounting Kit

4 x M10 x 50mm Bolts
4 x M10 Washers
4 x M10 Nyloc nuts
4x M10 Spring washers



+ Tie Down Kit

4 x Tie down rings

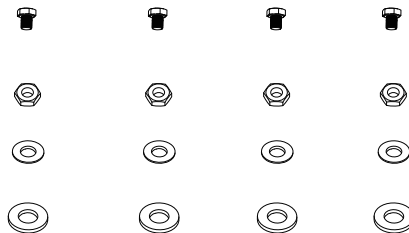


**+ Mounting Kit to suit connecting
of two XTM drawer together**


4 x M8 x12mm Bolts
4 x M8 Nyloc Nuts
4 x M8 Nylon washers
4 x M8 Washers

+ LOCATING MOUNTING SPACE IN CAR


+ IMPORTANT: This drawer is designed to mount on a flat surface in the rear of car. Please carefully check the drawer size and make sure it will be able to be attached. For some vehicles, the configuration of the rear floor means a flat plywood board may be required to be added for secure and easy mounting.

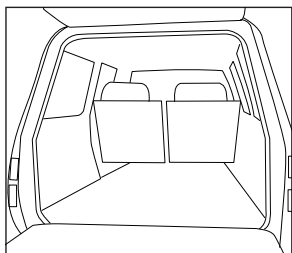


+ IMPORTANT
Before installing the drawer, please check the car owner's handbook or the rear base of your vehicle anchor point location. Choose a flat surface and appropriate position to install.

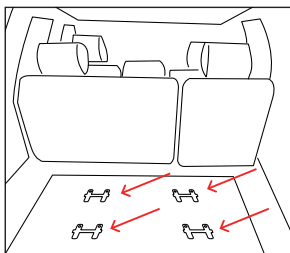


+ If anchor point available, use the chair anchor points to bolt the drawer onto your car.
+ If anchor point not available, a flat plywood board with a minimum of 12mm thickness will be required to be added.

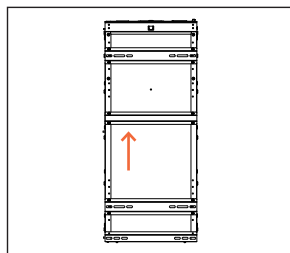

+ Check the size between the chair mounting points and compare with the mounting rail at the bottom of the drawer.
+ Move mounting rail to desired position.

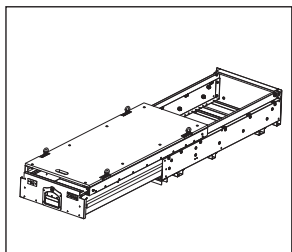

+ To access the bottom mounting rail, slide out the top panel and carefully pull out the drawer tub.

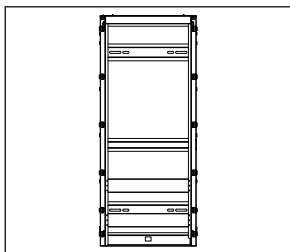






+ Secure the mounting rails with the M10 bolts, nuts and washer provided. Some vehicles may require longer or short bolts. Please check your owner's handbook or contact your local vehicle dealer if unable to locate.

WARNING

CHECK ANCHOR POINTS REGULARLY TO ENSURE DRAWER IS SECURELY ATTACHED.
DO NOT ANCHOR CHILD RESTRAINTS TO THE DRAWER.
IT IS NOT RECOMMENDED TO LEAVE ANY VALUABLES IN THE DRAWERS.

+ Stackable Vertical Drawer Option

+ The universal design allows drawers to be stacked. Use the M8 bolts and washers/nuts provided and follow the steps below:

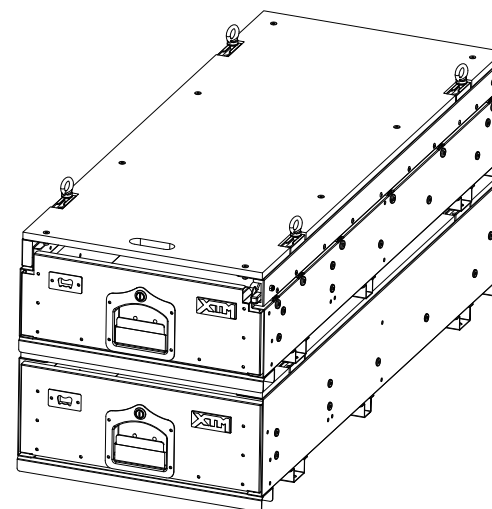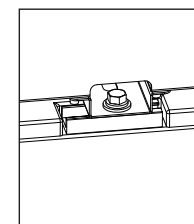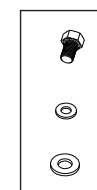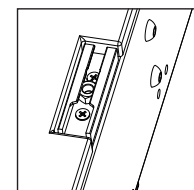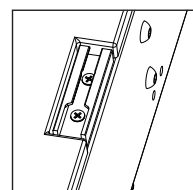

+ Configurations

+ IMPORTANT:

This UTE drawer can only be stacked with the identical style. It cannot be stacked with any other types of drawers.

